

# High PROTEC

Manual Transformer Differential Protection




#### MRDT4

Software-Version: 2.3.a DOK-HB-MRDT4E

Revision: B English

# **MRDT4 Functional Overview**

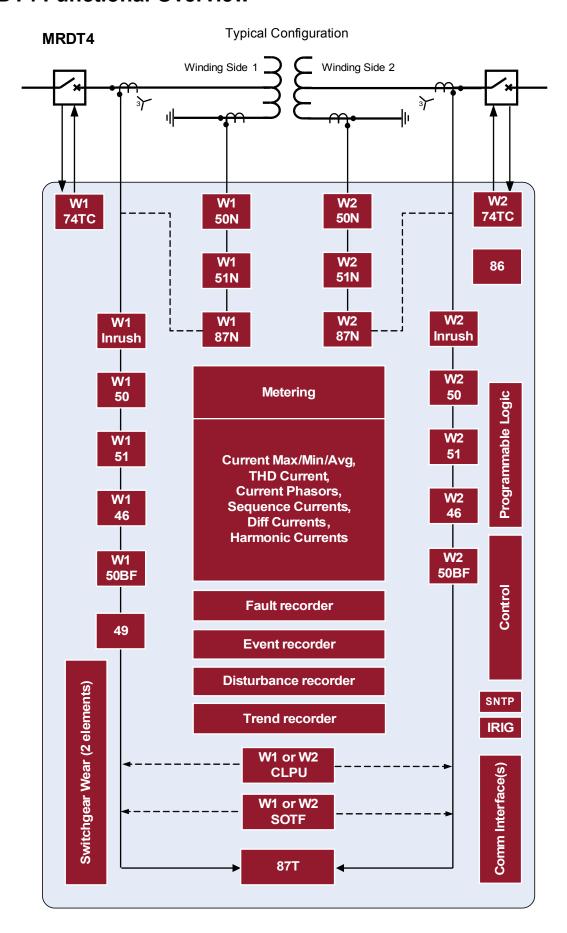

# **Order Code**

Non-dire	ectional Transforme	MRDT4-					
Digital Inputs	Binary output relays	Housing	Large display				
8	7	B2	-	А			
16	13	B2	-	D			
Hardware	variants						
Phase Cur	rent 5 A/1 A, W1/W2 Grou	and Current 5 A/1 A			0		
Phase Cur	rent 5 A/1 A, W1 Sen. Gr.	Curr. 5 A/1 A, W2 Gr. 0	Curr. 5 A/1 A		1		
Phase Cur	rent 5 A/1 A, W1 Gr. Curr	. 5 A/1 A, W2 Sen. Gr. (	Curr. 5 A/1 A		2		
Phase Cur	rent 5 A/1 A, W1/W2 Sen	. Gr. Curr. 5 A/1 A			3	]	
Housing and mounting							
Door moun	Door mounting A						
Door moun	nting 19" (flush mounting)				В		
Communic	cation protocol						
Without protocol						Α	
Modbus RTU, IEC60870-5-103, RS485/terminals							В
Modbus TCP, Ethernet 100 MB/RJ45							С
Profibus-D	P, optic fiber						D
Profibus-DP, RS485/D-SUB							Ε
Modbus RTU, IEC60870-5-103, optic fiber							F
Modbus RTU, IEC60870-5-103, RS485/D-SUB							G
IEC61850,				Н			
Available	menu languages						
Standard E	Standard English/German/Russian/Polish/Portuguese/French						

The parameterizing- and disturbance analyzing software Smart view is included in the delivery of HighPROTEC devices.

ANSI: 50, 51, 67, 50N, 51N, 67N, 50Ns, 51Ns, 67Ns, 51V, 51C, 25, 24, 40, 59TN, 27TN, 46, 49, 37, 27, 59, 59N, 47, 32, 55, 81U/O, 81R, 78, 60FL, 86, 50BF, 74TC, 38

With up to 80 logic equations.

# **Table of Contents**

MRDT4 Functional Overview	2
Order Code	3
Table of Contents	4
Comments on the Manual	9
Information Concerning Liability and Warranty	9
IMPORTANT DEFINITIONS	10
Scope of Delivery	14
Storage	
Important Information	15
Symbols	16
General Conventions	22
Load Reference Arrow System	23
Device	24
Device Planning	24
Device Planning Parameters of the Device	25
Installation and Connection	26
Three-Side-View - 19"	26
Three-Side-View - 8-Pushbutton Version	28
Installation Diagram 8-Pushbutton Version	29
Assembly Groups	30
Grounding	31
Legend for Wiring Diagrams	32
Slot X1: Power Supply Card with Digital Inputs	34
Slot X2: Relay Output Card	38
Slot X3: CT W1 - Current Transformer Measuring Inputs	41
Slot X4: CT W2 - Current Transformer Measuring Inputs	42
Slot X5: Relay Output Card	52
Slot X6: Digital Inputs	53
Slot X100: Ethernet Interface	54
Slot X103: Data Communication	
Slot X104: IRIG-B00X and Supervision Contact	65
Input, Output and LED Settings	69
Configuration of the Digital Inputs	69
Output Relays Settings	77
OR-6 X	81
LED configuration	103
Navigation - Operation	123
Basic Menu Control	128
Smart view Keyboard Commands	129
Smart view	130
Installation of Smart view	130
Uninstalling Smart view	131
Switching the Language of the Graphical User Interface	131
Setting up the Connection PC - Device	132
Loading of Device Data when using Smart view	140
Restoring of Device Data when using Smart view	141
Backup and Documentation when using Smart view	142
Offline Device Planning via Smart view	143
Measuring Values	144
Read out Measured Values	144

Statistics	153
Configuration of the Minimum and Maximum Values	153
Configuration of the Average Value Calculation	154
Direct Commands	156
Global Protection Parameters of the Statistics Module	156
States of the Inputs of the Statistics Module	158
Signals of the Statistics Module	159
Counters of the Module Statistics	159
System Alarms	166
Demand Management	166
Peak Values	
Min. and Max. Values	169
THD Protection	
Device Planning Parameters of the Demand Management	170
Signals of the Demand Management (States of the Outputs)	170
Global Protection Parameter of the Demand Management	
States of the Inputs of the Demand Management	
Acknowledgments	173
Manual Acknowledgment	175
Manual Acknowledgment via Smart view	
External Acknowledgments	
External Acknowledge via Smart view	176
External LED - Acknowledgment Signals	177
Manual Resets	
Manual Resets via Smart view	
Reset to Factory Defaults	
Status Display	
Status Display via Smart View	
Operating Panel (HMI)	
Special Parameters of the Panel	
Direct Commands of the Panel	
Global Protection Parameters of the Panel	
Recorders	180
	180
Fault Recorder	
Trend Recorder	
Event Recorder	
Communication Protocols	
SCADA Interface	
Modbus®	
Profibus	
IEC60870-5-103	
IEC61850	
Time Synchronisation	
SNTP	
IRIG-B00X	
Parameters	
Parameter Definitions	
Access Authorizations (access areas)	
Passwords – Areas	
How to find out what access areas/levels are unlocked?	
Unlocking Access Areas	
Changing Passwords	

Changing Passwords via Smart view	286
Password Entry at the Panel	286
Password Forgotten	286
Parameter Setting at the HMI	287
Parameter Setting via Smart view	291
Setting Groups	
Comparing Parameter Files via Smart view	306
Converting Parameter Files via Smart view	306
Setting Lock	307
Device Parameters	308
Date and Time	
Synchronize Date and Time via Smart View	308
Version	
Version via Smart view	308
TCP/IP Settings	
Direct Commands of the System Module	310
Global Protection Parameters of the System	
System Module Input States	
System Module Signals	313
Special Values of the System Module	314
Field Parameters	
General Field Parameters	
Field Parameters – Phase Differential Current	
Field Parameters – Earth Differential Current	
Field Parameters – Current Related	317
Field Parameters of the Transformer	
Blockings	
Permanent Blocking	
Temporary Blocking	
To Activate or Deactivate the Tripping Command of a Protection Module	
Activate, Deactivate Respectively Block Temporarily Protection Functions	
Module: Protection (Prot)	
Blocking all Protective Elements enduringly	
Blocking all Protective Elements temporarily	
Blocking all Trip Commands enduringly	
Blocking all Trip Commands temporarily	
General Alarms and General Trips	
Direct Commands of the Protection Module	
Global Protection Parameters of the Protection Module	
Protection Module Input States	
Protection Module Signals (Output States)	
Protection Module Values	
Switchgear/Breaker – Manager	
Single Line Diagram	
Switchgear Configuration	
Switchgear Wear	
Control Parameters	
Controlled Circuit Breaker	
Control - Example: Switching of a Circuit Breaker	
Protective Elements	
id - Phase Current Differential Protection [87TP]	
IdG - Ground Current Differential Protection [87TN, 64REF]	
IdGh - High Set Restricted Ground Fault Protection IdGH	432

I - Overcurrent Protection [50, 51,51Q, 51V*]	
IH2 - Inrush	
IG> - Earth Fault [50N/G, 51N/G]	
I2> and %I2/I1> - Unbalanced Load [46]	
ThR-Protection Module: Thermal Replica [49]	
SOTF - Switch Onto Fault	
CLPU - Cold Load Pickup	
ExP - External Protection	
Ext Temp Superv Protection Module – External Temperature Supervision	
Ext Oil Temp Protection Module – External Oil Temperature Protection	
Sudden Pressure Protection Module – Sudden Pressure Protection	
Supervision	
CBF- Circuit Breaker Failure [50BF*/62BF]	
TCS - Trip Circuit Supervision [74TC]	
CTS - Current Transformer Supervision [60L]	
Self Supervision	584
RTD Protection Module	586
URTDII Module Interface*	610
Principle – General Use	610
URTDII Module Fiber Optic Connection to the Protective Device	611
Programmable Logic	620
General Description	620
Programmable Logic at the Panel	625
Programmable Logic via Smart view	626
Commissioning	631
Commissioning/Protection Test	632
Putting out of Operation – Plug out the Relay	633
Service and Commissioning Support	634
General	
Forcing the Relay Output Contacts	634
Forcing RTDs*	
Forcing Analog Outputs*	
Forcing Analog Inputs*	
Failure Simulator (Sequencer)*	640
Technical Data	655
Climatic Environmental Conditions	
Degree of Protection EN 60529	
Routine Test	
Housing	
Current and Earth Current Measurement	
Voltage Supply	
Power Consumption	
Display	
Front Interface RS232	
Real Time Clock	
Digital Inputs	
Supervision Contact (SC)	
Time Synchronization IRIG	
RS485*	
Fibre Optic*	
URTD-Interface*	
Boot phase	662

#### **Table of Contents**

Standards	663
Approvals	663
Design Standards	
High Voltage Tests (IEC 60255-6)	
EMC Immunity Tests	
EMC Emission Tests	664
Environmental Tests	
Mechanical Tests	666
Assignment List	667
List of the Digital Inputs	712
Signals of the Digital Inputs and Logic	712
Specifications	721
Specifications of the Real Time Clock	721
Time Synchronisation Tolerances	721
Specifications of the Measured Value Acquisition	722
Protection Elements Accuracy	723
Abbreviations, and Acronyms	726
List of ANSI Codes	731

This manual applies to devices (version):

Version 2.3.a

Build: 20675

#### **Comments on the Manual**

This manual explains in general the tasks of device planning, parameter setting, installation, commissioning, operation and maintenance of the HighPROTEC devices.

The manual serves as working basis for:

- Engineers in the protection field,
- commissioning engineers,
- people dealing with setting, testing and maintenance of protection and control devices,
- as well as trained personnel for electrical installations and power stations.

All functions concerning the type code will be defined. Should there be a description of any functions, parameters or inputs/outputs which do not apply to the device in use, please ignore that information.

All details and references are explained to the best of our knowledge and are based on our experience and observations.

This manual describes the (optionally) full featured versions of the devices.

All technical information and data included in this manual reflect their state at the time this document was issued. We reserve the right to carry out technical modifications in line with further development without changing this manual and without previous notice. Hence no claim can be brought based on the information and descriptions this manual includes.

Text, graphic and formulae do not always apply to the actual delivery scope. The drawings and graphics are not true to scale. We do not accept any liability for damage and operational failures caused by operating errors or disregarding the directions of this manual.

No part of this manual is allowed to be reproduced or passed on to others in any form, unless *Woodward Kempen GmbH* have approved in writing.

This user manual is part of the delivery scope when purchasing the device. In case the device is passed on (sold) to a third party, the manual has to be handed over as well.

Any repair work carried out on the device requires skilled and competent personnel who need to be well aware especially of the local safety regulations and have the necessary experience for working on electronic protection devices and power installations (provided by evidence).

#### Information Concerning Liability and Warranty

Woodward does not accept any liability for damage resulting from conversions or changes carried out on the device or planning (projecting) work, parameter setting or adjustment changes done by the customer.

The warranty expires after a device has been opened by others than Woodward specialists.

Warranty and liability conditions stated in *Woodward* General Terms and Conditions are not supplemented by the above mentioned explanations.

#### IMPORTANT DEFINITIONS

The signal definitions shown below serve the safety of life and limb as well as for the appropriate operating life of the device.



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE is used to address practices not related to personal injury.



CAUTION, without the safety alert symbol, is used to address practices not related to personal injury.



#### **FOLLOW INSTRUCTIONS**

Read this entire manual and all other publications pertaining to the work to be performed before installing, operating, or servicing this equipment.

Practice all plant and safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage.

# **A**WARNING

#### **PROPER USE**

Any unauthorized modifications to or use of this equipment outside its specified mechanical, electrical, or other operating limits may cause personal injury and/or property damage, including damage to the equipment. Any such unauthorized modifications: (1) constitute "misuse" and/or "negligence" within the meaning of the product warranty thereby excluding warranty coverage for any resulting damage, and (2) invalidate product certifications or listings.

The programmable devices subject to this manual are designed for protection and also control of power installations and operational devices that are fed by voltage sources with a fixed frequency, i.e. fixed at 50 or 60 Hertz. They are not intended for use with Variable Frequency Drives. The devices are further designed for installation in low-voltage (LV) compartments of medium voltage (MV) switchgear panels or in decentralized protection panels. The programming and parameterization has to meet all requirements of the protection concept (of the equipment that is to be protected). You must ensure that the device will properly recognize and manage (e.g. switch off the circuit breaker) on the basis of your programming and parameterization all operational conditions (failures). The proper use requires a backup protection by an additional protective device. Before starting any operation and after any modification of the programming (parameterization) test make a documentary proof that your programming and parameterization meets the requirements of your protection concept.

Typical applications for this product family/device line are for instance:

- Feeder protection
- Mains protection
- Machine protection
- Transformer Differential Protection

Any usage beyond these applications the devices are not designed for. This applies also to the use as a partly completed machinery. The manufacturer cannot be held liable for any resulting damage, the user alone bears the risk for this. As to the appropriate use of the device: The technical data and tolerances specified by *Woodward* have to be met.



#### **OUT-OF-DATE PUBLICATION**

This publication may have been revised or updated since this copy was produced. To verify that you have the latest revision, please visit the download section of our website:

www.woodward.com

If your publication is not there, please contact your customer service representative to get the latest copy.

#### CAUTION

#### **Electrostatic Discharge Awareness**

All electronic equipment is electro static-sensitive, some components more than others. To protect these components from electro static damage, you must take special precautions to minimize or eliminate electrostatic discharges.

Follow these precautions when working with or near the control.


- 1. Before doing maintenance on the electronic control, discharge the static electricity on your body to ground by touching and holding a grounded metal object (pipes, cabinets, equipment, etc.).
- 2. Avoid the build-up of static electricity on your body by not wearing clothing made of synthetic materials. Wear cotton or cotton-blend materials as much as possible because these do not store static electric charges as much as synthetics.
- 3. Keep plastic, vinyl, and Styrofoam materials (such as plastic or Styrofoam cups, cup holders, cigarette packages, cellophane wrappers, vinyl books or folders, plastic bottles, and plastic ash trays) away from the control, the modules, and the work area as much as possible.
- 4. Do not remove any printed circuit board (PCB) from the control cabinet unless absolutely necessary. If you must remove the PCB from the control cabinet, follow these precautions:
  - Verify the safe isolation from supply. All connectors have to be unplugged.
  - Do not touch any part of the PCB except the edges.
  - Do not touch the electrical conductors, the connectors, or the components with conductive devices or with your hands.
  - When replacing a PCB, keep the new PCB in the plastic antistatic protective bag it comes in until you are ready to install it. Immediately after removing the old PCB from the control cabinet, place it in the antistatic protective bag.

To prevent damage to electronic components caused by improper handling, read and observe the precautions in Woodward manual 82715, Guide for Handling and Protection of Electronic Controls, Printed Circuit Boards, and Modules.

Woodward reserves the right to update any portion of this publication at any time. Information provided by Woodward is believed to be correct and reliable. However, no responsibility is assumed by Woodward unless otherwise expressly undertaken.

© Woodward 2013 All Rights Reserved

# **Scope of Delivery**

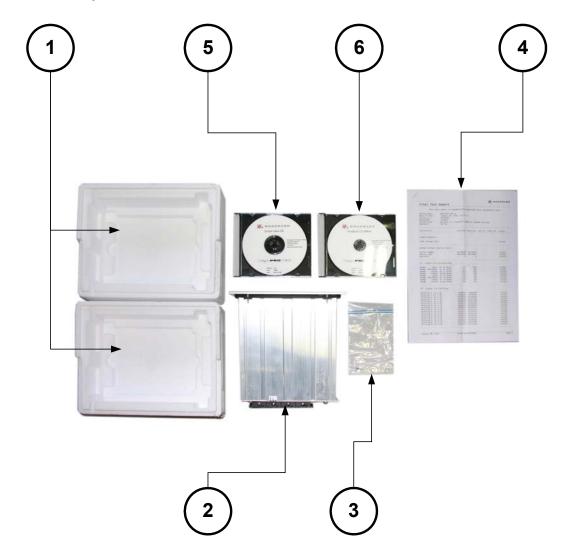

#### The delivery scope includes:

1	The transportation box
2	The protective device
3	The mounting nuts
4	The test report
5	The product CD that includes the manuals
6	The parameter and evaluation software Smart view

Please check the consignment for completeness on arrival (delivery note).

Please ascertain whether the type plate, connection diagram, type code and description of the device tally. If you have any doubts please contact our Service Department (contact address to be found on the reverse of the manual).

#### **Storage**


The devices must not be stored outdoors. The storing facilities have to be sufficiently ventilated and must be dry (see Technical Data).


#### **Important Information**



In line with the customer's requirement the devices are combined in a modular way (in compliance with the order code). The terminal assignment of the device can be found on the top of the device (wiring diagram).

### **Symbols**

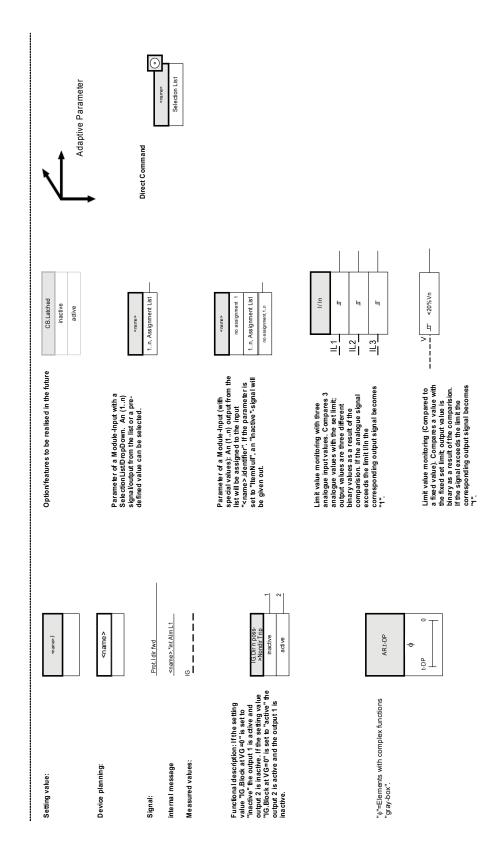

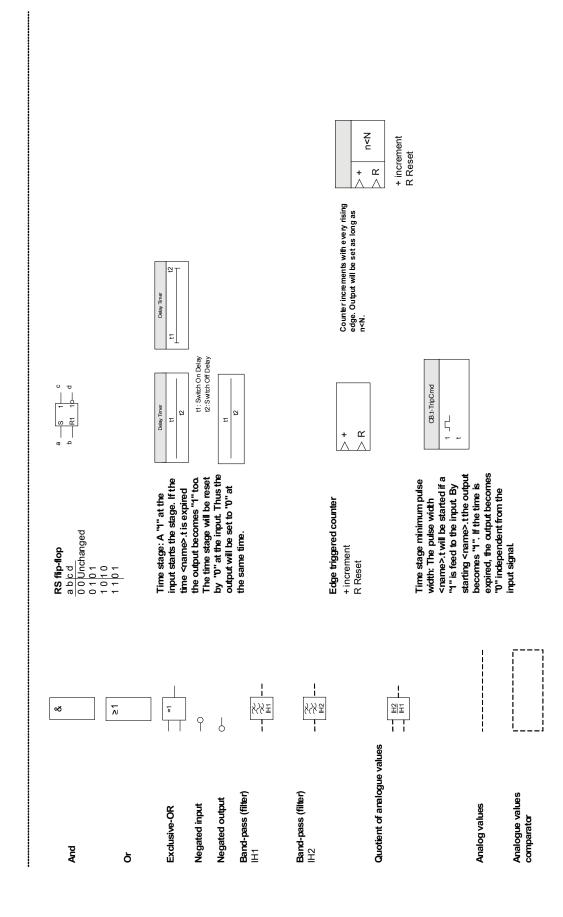

16a

Each trip of an active, trip authorized protection module will lead to a general trip.

Each trip of an active, trip authorized protection module will lead to a general trip.

name.Trip L1

16b

Each trip of an active, trip authorized protection module will lead to a general trip.

name. Trip L1

Each trip of an active, trip authorized protection module will lead to a general trip.

name. Trip L2

17b

Each trip of an active, trip authorized protection module will lead to a general trip.

17a

Each trip of an active, trip authorized protection or will lead to a general trip.

18

Each trip of an active, trip authorized protection module will lead to a general trip.

name.Trip L3 -

name.Trip L2

18a

Each trip of an active, trip authorized protection module will lead to a general trip.

18b

Each trip of an active, trip authorized protection in will lead to a general trip.

name. Trip L3 -

**19** 

Each trip of an active, trip authorized protection module will lead to a general trip.

name.TripCmd

19a

Each trip of an active, trip authorized protection module will lead to a general trip.

name. TripCmd

19b

Each trip of an active, trip authorized protection module will lead to a general trip.

name.TripCmd

196


Each trip of an active, trip authorized protection module will lead to a general trip.

name.TripCmd

19d

Each trip of an active, trip authorized protection module will lead to a general trip.

name. TripCmd

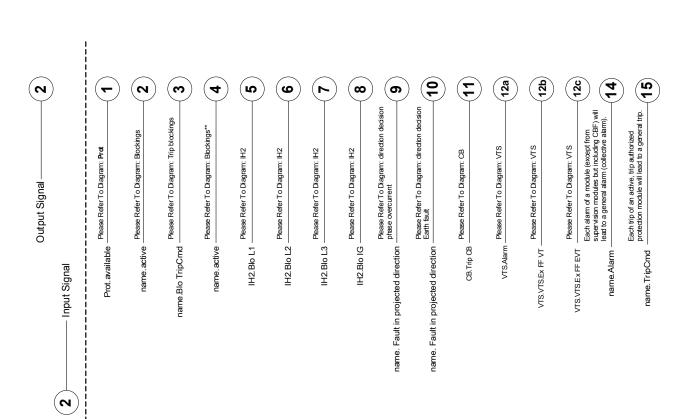

27b

27a

Each phase selective alam of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alam (collective alarm).

Each phase selective alarm of a module (i, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).

name. Aarm

name.Alarm

name.Alarm

Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to aphase selective general alarm (collective alarm).

Each phase selective alam of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alam (collective alam).

name.Alarm

Each phase selective alarmof a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (cdlective alarm).

**27d** 

27c

**82** 

**62** 

30

Each phase seledive alarmof a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (cdledive alarm).

Each phase selective alarmof a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (cdlective alarm).

name.Alam L2

name.Alam L3

name.Alarm

Prot.Blo TripCmd

name.Alam L1

Each phase selective alarmof a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (cdlective alarm).

(<del>2</del>)

35

33

Please Refer To Diagram: CB.CB Manager

CB.Pos

35

37

Please Refer To Diagram: CB.CB Manager

CB.Pos Disturb

Please Refer To Diagram: CB.CB Manager

CB.Pos Indeterm

38a

Please Refer To Diagram: LOP.LOP Blo

LOP.LOP Blo

38c

Please Refer To Diagram: LOP.Ex FF EVT

LOP.Ex FF EVT

38b

Please Refer To Diagram: LOP.ExFFVT

LOP.Ex FF VT

34

Please Refer To Diagram: CB.CB Manager


CB.Pos ON .

Please Refer To Diagram: CB.CB Manager

CB.Pos OFF

(6	<b>2</b>	<b>5</b>	()		24a	(46)	) (S	(2) (2)	25b	) (g			(27)	)
Each tip of an active, trip authorized protection module will lead to a general trip.	Each tip of an active, trip authorized protection module will lead to a general trip.	Each tip of an active, trip authorized protection module will lead to a general trip.	Each tip of an active, trip authorized protection module will lead to a general trip.	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general darm (collective darm).	Each phase selective alarm of a module (i, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general darm (collective darm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will tead to a phase selective general darm (collective darm).	Each phase selective alam of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alam (collective alam).	Each phase selective alarm of a module (I, IG, V, VX depending on the device type) will lead to a phase selective general alarm (collective alarm).	
- Cirt	name. Trip L2	name. Trip L3 -	- diT emen	ame Alarm 1	name.Alarm L1	- March		name Alarm I 2 -	name Alarm I 2 -	Annual Annual 3 -	ome Alarm 13 -	name Alarm I.3 -	name. Alarm -	

19 MRDT4 DOK-HB-MRDT4E

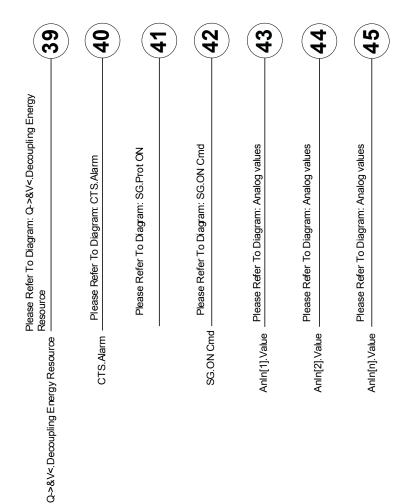

#### **Access Level**

(Please refer to chapter [Parameter\Access Level])

Read Only-Lv0



Parameters can only be read within this level.

Prot-Lv1



This level enables to execute Resets and Acknowledgements

Prot-Lv2



This level enables to modify protection settings

Control-Lv1



This level enables to control switchtgears

Control-Lv2




This level enables to modify the settings of switchgears

Supervisor-Lv3



This level provides full access (not limited) to all settings

#### **General Conventions**

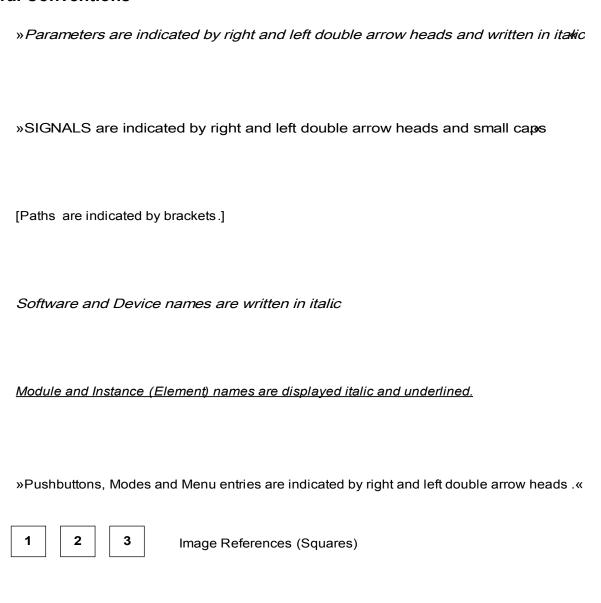

# **Load Reference Arrow System**

Within the HighPROTEC the "Load Reference Arrow System" is used in principal. Generator protection relays are working based on the "Generator Reference System".

#### **Device**

#### MRDT4

#### **Device Planning**

Planning of a device means to reduce the functional range to a degree that suits the protection task to be fulfilled, i.e. the device shows only those functions you really need. If you, for example, deactivate the voltage protection function, all parameter branches related to this function do not appear in the parameter tree any more. All corresponding events, signals etc. will be deactivated too. By this the parameter trees become very transparent. Planning also involves adjustment of all basic system data (frequency etc.).



But it has to be taken into account that by deactivating, for instance, protective functions, you also change the functionality of the device. If you cancel the directional feature of the overcurrent protections then the device no longer trips in a directional way but merely in a non-directional way.

The manufacturer does not accept liability for any personal or material damage as a result of wrong planning.

A planning service is also offered by Woodward Kempen GmbH.



Beware of inadvertent deactivating protective functions/modules

If you are deactivating modules within the device planning all parameters of those modules will be set on default.

If you are activating one of these modules again all parameters of those reactivated modules will be set on default.

# **Device Planning Parameters of the Device**

Parameter	Description	Options	Default	Menu path
Hardware Variant 1	Optional Hardware Extension	»A« 8 digital inputs   7 binary output relays,	16 digital inputs   13 binary output	[MRDT4]
		»D« 16 digital inputs   13 binary output relays	relays	
Hardware Variant 2	Optional Hardware Extension	»0« W1: Default Ground Current - W2: Default Ground Current ,	W1: Default Ground Current - W2: Default	[MRDT4]
		»1« W1: Sensitive Ground Current - W2: Default Ground Current ,	Ground Current	
		»2« W1: Default Ground Current - W2: Sensitive Ground Current,		
		»3« W1: Sensitive Ground Current - W2: Sensitive Ground Current		
Housing	Mounting form	»A« Flush mounting,	Flush mounting	[MRDT4]
		»B« 19 inch mounting (semi-flush),		
		»H« Customized Version 1		
Communication	Communication	»A« Without,	Ethernet:	[MRDT4]
		»B« RS 485: Modbus RTU   IEC 60870-5-103,	IEC61850	
		»C« Ethernet: Modbus TCP,		
		»D« Fiber Optics: Profibus-DP,		
		»E« D-SUB: Profibus- DP,		
		»F« Fiber Optics: Modbus RTU   IEC 60870-5-103,		
		»G« RS 485/D-SUB: Modbus RTU   IEC 60870-5-103,		
		»H« Ethernet: IEC61850		

# **Installation and Connection**


#### Three-Side-View - 19"

NOTICE

Dependent on the connection method of the SCADA system used the needed space (depth) differs. If, for instance, a D-Sub-Plug is used, it has to be added to the depth dimension.

NOTICE

The three-side-view shown in this section is exclusively valid for 19" devices.

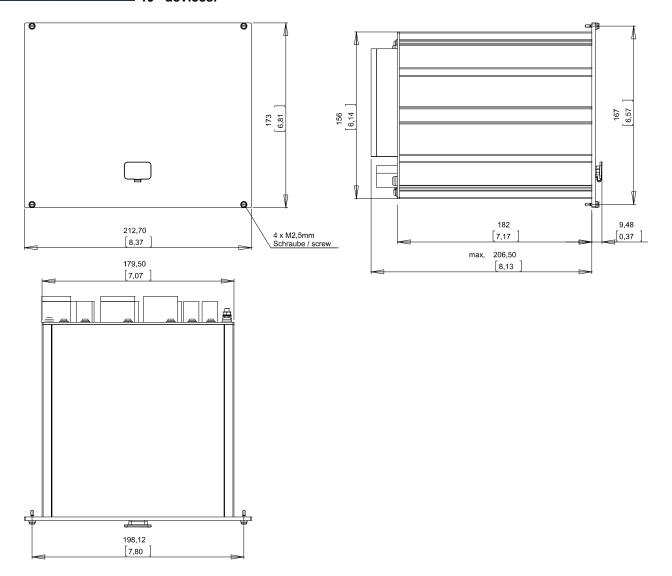

3-Side-View B2 Housing (19" Devices)



The housing must be carefully earthed. Connect a ground cable (4 to 6 mm $^2$  / AWG 12-10) / 1,7 Nm [15 lb·in]) to the housing, using the screw, which is marked with the ground symbol (at the rear side of the device).

The power supply card needs a separate ground connection (2.5 mm<sup>2</sup> / AWG 14) at terminal X1 (0.56-0.79 Nm [5-7 lb·in]).


#### Three-Side-View - 8-Pushbutton Version

# NOTICE

Dependent on the connection method of the SCADA system used the needed space (depth) differs. If, for instance, a D-Sub-Plug is used, it has to be added to the depth dimension.

# NOTICE

The installation diagram shown in this section is exclusively valid for devices with 8 pushbuttons at the front side of the HMI. (INFO-, C-, OK-, CTRL-Pushbutton and 4 Softkeys (Pushbuttons)).

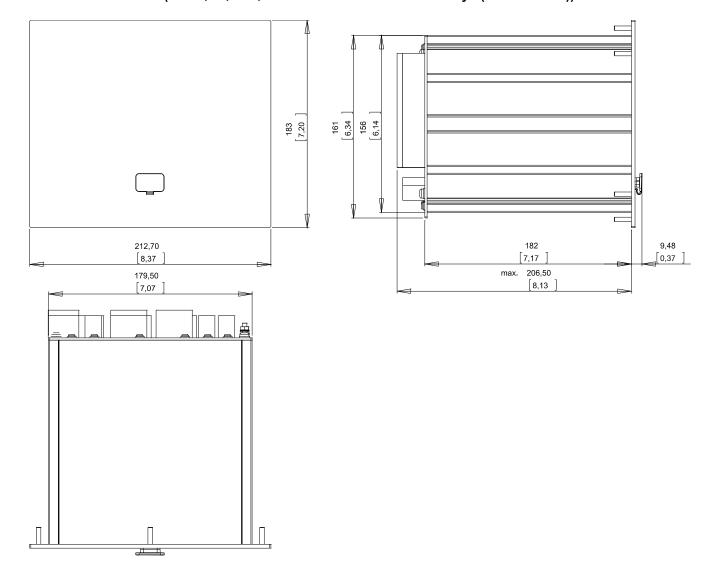

3-Side-View B2 Housing (Devices with 8 Softkeys)



The housing must be carefully earthed. Connect a ground cable (4 to 6 mm<sup>2</sup> / AWG 12-10) / 1,7 Nm [15 lb·in]) to the housing, using the screw, which is marked with the ground symbol (at the rear side of the device).

The power supply card needs a separate ground connection (2.5 mm<sup>2</sup> / AWG 14) at terminal X1 (0.56-0.79 Nm [5-7 lb·in]).


#### **Installation Diagram 8-Pushbutton Version**



Even when the auxiliary voltage is switched-off, unsafe voltages might remain at the device connections.

# NOTICE

The installation diagram shown in this section is exclusively valid for devices with 8 pushbuttons at the front side of the HMI. (INFO-, C-, OK-, CTRL-Pushbutton and 4 Softkeys (Pushbuttons)).

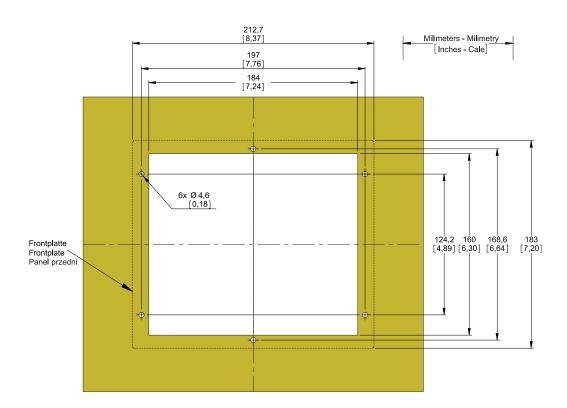

B2 Housing Door Cut-out (8-Pushbutton Version)



The housing must be carefully earthed. Connect a ground cable (4 to 6 mm<sup>2</sup> / AWG 12-10) / 1,7 Nm [15 lb·in]) to the housing, using the screw, which is marked with the ground symbol (at the rear side of the device).

The power supply card needs a separate ground connection (2.5 mm<sup>2</sup> / AWG 14) at terminal X1 (0.56-0.79 Nm [5-7 lb·in]).




Be careful. Do not overtighten the mountings nuts of the relay (M4 metric 4 mm). Check the torque by means of a torque wrench (1,7 Nm [15 lb·in]). Overtightening the mounting nuts could due to personal injury or damage the relay.

### **Assembly Groups**



In line with the customer's requirement the devices are combined in a modular way (in compliance with the order code). In each of the slots an assembly-group may be integrated. In the following the terminal assignment of the individual assembly-groups are shown. The exact installation place of the individual modules can be learned from the connection diagram fixed at the top of your device.

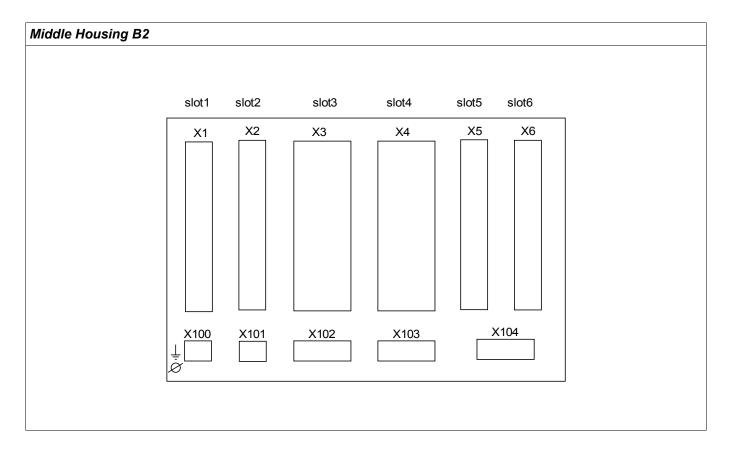

Rear view of B2 housing

### Grounding



The housing must be carefully grounded. Connect a ground cable (4 to 6 mm $^2$  / AWG 12-10) / 1,7 Nm [15 lb·in]) to the housing, using the screw, which is marked with the ground symbol (at the rear side of the device).

The power supply card needs a separate ground connection (2.5 mm<sup>2</sup> / AWG 14) at terminal X1 (0.56-0.79 Nm [5-7 lb·in]).

CAUTION

The devices are very sensitive to electro-static discharges.


# **Legend for Wiring Diagrams**

In this legend designations of various device types are listed, e. g. transformer protection, motor protection, generator protection, etc. Therefor it can occur that you will not find each designation on the wiring diagram of your device.

Designation	Meaning
FE	Connection of functional earth
Power Supply	Connection for auxiliary power supply
IL1	Phase current input L1
IL2	Phase current input L2
IL3	Phase current input L3
IG	Earth current input IG
I L1 W1	Phase current input L1, winding side 1
I L2 W1	Phase current input L2, winding side 1
I L3 W1	Phase current input L3, winding side 1
I G W1	Earth current input IG, winding side 1
I L1 W2	Phase current input L1, winding side 2
I L2 W2	Phase current input L2, winding side 2
I L3 W2	Phase current input L3, winding side 2
I G W2	Earth current input IG, winding side 2
V L1	Phase voltage L1
V L2	Phase voltage L2
V L3	Phase voltage L3
V 12	Phase to phase voltage V 12
V 23	Phase to phase voltage V 23
V 31	Phase to phase voltage V 31
VX	Forth voltage measuring input for measuring residual voltage or for Synchro-check
во	Contact output, change over contact
NO	Contact output, normally open
DI	Digital input
СОМ	Common connection of digital inputs
Out+	Analog output + (0/420 mA or 010 V)
IN-	Analog input + (0/420 mA or 010 V)
N.C.	Not connected
DO NOT USE	Do not use
SC	Self supervision contact
GND	Ground

HF SHIELD	Connection cable shield
Fibre Connection	Fibre optic connection
Only for use with external galvanic decoupled CTs. See chapter Current Transformers of the manual.	Only for use with external galvanic decoupled CTs. See chapter Current Transformers of the manual.
Caution Sensitive Current Inputs	Caution Sensitive Current Inputs
Connection Diagram see specification	Connection Diagram see specification

**Slot X1: Power Supply Card with Digital Inputs** 

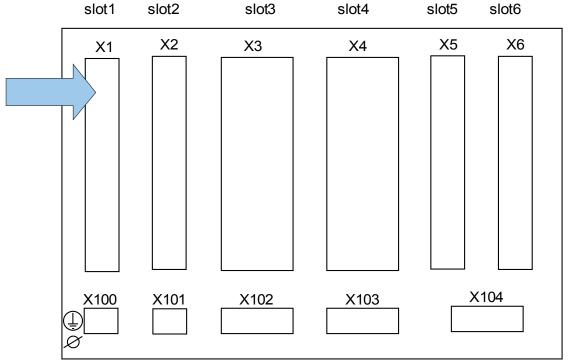

Rear side of the device (Slots)

The type of power supply card and the number of digital inputs on it used in this slot is dependent on the ordered device type. The different variants have a different scope of functions.

Available assembly groups in this slot:

■ (DI8-X1): This assembly group comprises a wide-range power supply unit; and two non-grouped digital inputs and six (6) digital inputs (grouped).




The available combinations can be gathered from the ordering code.

# **DI8-X Power Supply and Digital Inputs**



Ensure the correct tightening torques.

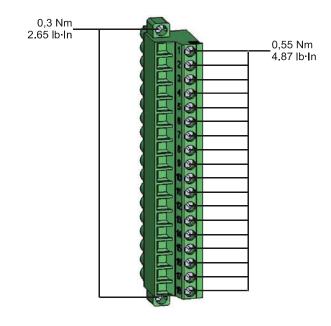

This assembly group comprises:

- a wide-range power supply unit
- 6 digital inputs, grouped
- 2 digital inputs, non-grouped

#### Auxiliary voltage supply

■ The aux. voltage inputs (wide-range power supply unit) are non-polarized. The device could be provided with AC or DC voltage.

#### Digital inputs



For each digital input group the related voltage input range has to be parameterized. Wrong switching thresholds can result in malfunctions/wrong signal transfer times.

The digital inputs are provided with different switching thresholds (can be parameterized) (two AC and five DC input ranges). For the six grouped (connected to common potential) inputs and the two non-grouped inputs the following switching levels can be defined:

- 24V DC
- 48V DC / 60V DC
- 110 V AC/DC
- 230 V AC/DC


If a voltage >80% of the set switching threshold is applied at the digital input, the state change is recognized (physically "1"). If the voltage is below 40% of the set switching threshold, the device detects physically "0".



The ground terminal has to be connected to the »-pole« when using DC supply.

Terminals	
	X?.
	1 ]=
	2 — L+ Power Supply
	3 - L- 4 - n.c.
	5 — COM1 —
	6 — DI1 — <del>2</del> - 7 — COM2 —
	8 — DI2 — 122-
	9 — COM3 ¬
	10 — COM — 11 — DI3 — 12-
	12 — DI4 +27-
	13 DIS +2-
	14 — DI6 +2- 15 — DI7 +2-
	16 — DI8 — 121-
	17 — do not use 18 — do not use
	10 — 00 100 use
	C
	DIS do not use do not use

**Slot X2: Relay Output Card** 

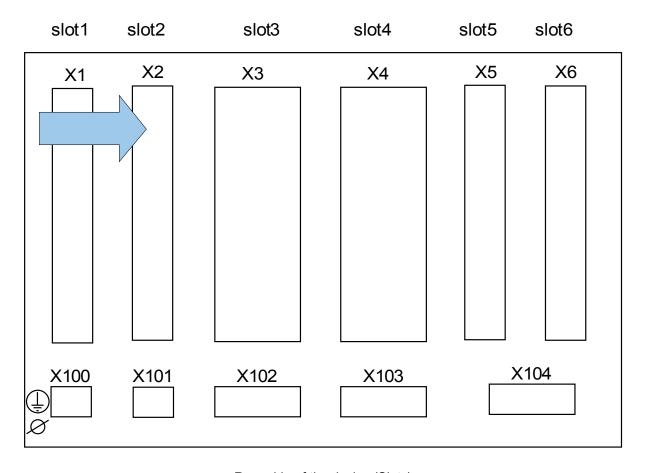

The type of card in this slot is dependent on the ordered device type. The different variants have a different scope of functions.

Available assembly groups in this slot:

■ (RO-6 X2): Assembly Group with 6 Relay Outputs.




#### **Binary Output Relays**

The number of the binary output relay contacts is related to the type of the device or type code. The binary output relays are potential-free change-over contacts. In chapter [Assignment/binary outputs] the assignment of the binary output relays is specified. The changeable signals are listed in the »assignment list« which can be found in the appendix.





Ensure the correct tightening torques.

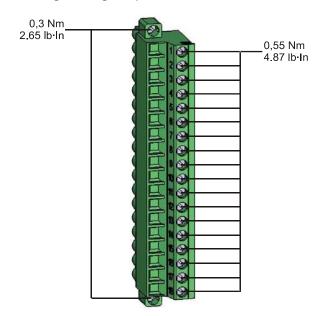

CAUTION

Please duly consider the current carrying capacity of the binary output relays. Please refer to the Technical Data.

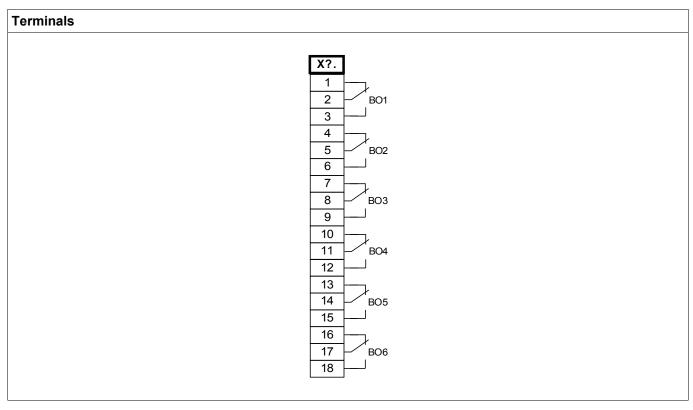

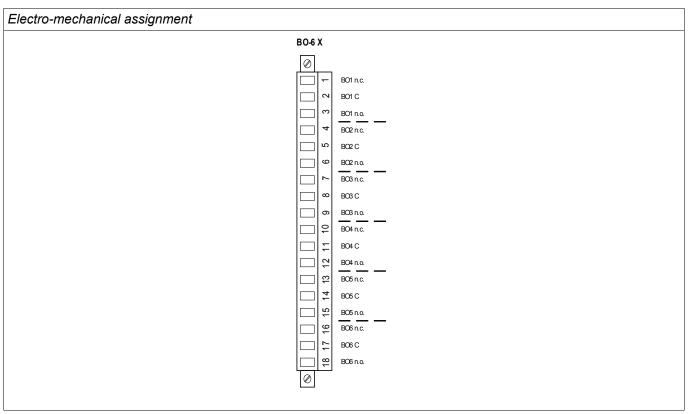

slot1 slot2 slot3 slot5 slot4 slot6 X2 X5 X6 **X1** X3 **X4** X104 X100 X101 X102 X103

**Slot X3: CT W1 - Current Transformer Measuring Inputs** 

This slot contains the current transformer measuring inputs for the winding side 1 (W1) of the transformer. Depending on the order code, this might be a standard current measuring card or a sensitive ground current measuring card.

Available assembly groups in this slot:

- (TI-4 X3): Standard ground current measuring card.
- (TIS-4 X3): Sensitive Ground current measuring card. The Technical data of the sensitive ground measuring input deviate are different to the Technical Data of the phase current measuring inputs. Please refer to the Technical Data.

slot1 slot2 slot3 slot4 slot5 slot6 X2 X5 X6 **X1** X3 **X4** X102 X103 X104 X100 X101

**Slot X4: CT W2 - Current Transformer Measuring Inputs** 

This slot contains the current transformer measuring inputs for the winding side 2 (W2) of the transformer.

Available assembly groups in this slot:

- (TI-4 X4): Standard ground current measuring card.
- (TIS-4 X3): Sensitive Ground current measuring card. The Technical data of the sensitive ground measuring input deviate are different to the Technical Data of the phase current measuring inputs. Please refer to the Technical Data.

#### TI X- Standard Phase and Ground Current Measuring Input Card

This measuring card is provided with 4 current measuring inputs: three for measuring the phase currents and one for measuring of the earth current. Each of the current measuring inputs has a measuring input for 1 A and 5 A.

The input for earth current measuring either can be connected to a cable-type current transformer or alternatively it is possible to connect the summation current path of the phase current transformer to this input (Holmgreen connection).



Current transformers have to be earthed on their secondary side.



Interrupting the secondary circuits of current transformers causes hazardous voltages.

The secondary side of the current transformers have to be short circuited before the current circuit to the device is opened.




The current measuring inputs may exclusively be connected to current measuring transformers (with galvanic separation).





- Do not interchange the inputs (1 A/5 A)
- Make sure the transformation ratios and the power of the CTs are correctly rated. If the rating of the CTs is not right (overrated), then the normal operational conditions may not be recognized. The pickup value of the measuring unit amounts approx. 3% of the rated current of the device. Also the CTs need a current greater than approx 3% of the rated current to ensure sufficient accuracy. Example: For a 600 A CT (primary current) any currents below 18 A cannot be detected any more.
- Overloading can result in destruction of the measuring inputs or faulty signals. Overloading means that in case of a short-circuit the current-carrying capacity of the measuring inputs could be exceeded.



Ensure the correct tightening torques.

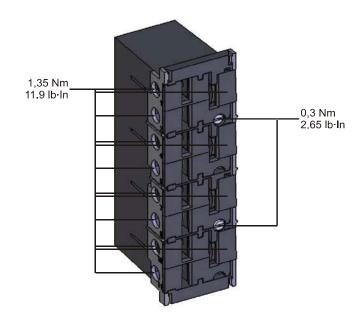

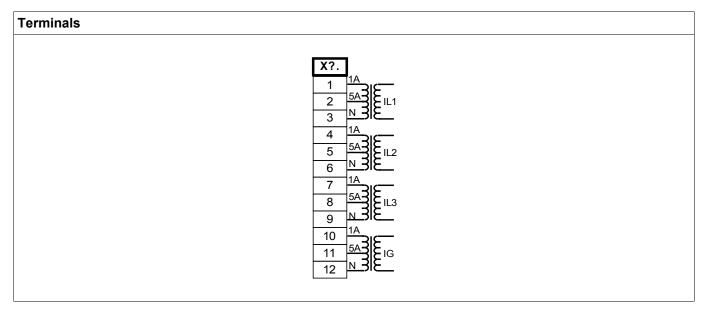

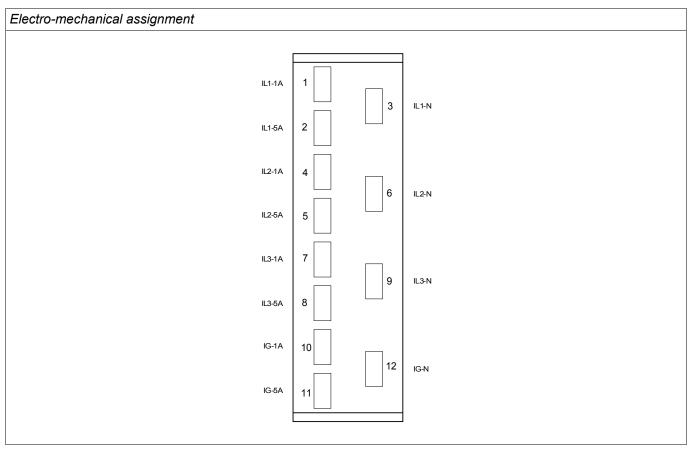

#### TIS X – Phase and Sensitive Ground Current Measuring Card

The measuring card is provided with 4 current measuring inputs: three for measuring the phase currents and one for measuring of the earth current. The sensitive Ground current Input has different technical data. Please refer to chapter Technical Data.

The input for earth current measuring either can be connected to a cable-type current transformer or alternatively it is possible to connect the summation current path of the phase current transformer to this input (Holmgreen connection).



Current transformers have to be earthed on their secondary side.



Interrupting the secondary circuits of current transformers causes hazardous voltages.

The secondary side of the current transformers have to be short circuited before the current circuit to the device is opened.




The current measuring inputs may exclusively be connected to current measuring transformers (with galvanic separation).





- Do not interchange the inputs (1 A/5 A)
- Make sure the transformation ratios and the power of the CTs are correctly rated. If the rating of the CTs is not right (overrated), then the normal operational conditions may not be recognized. The pickup value of the measuring unit amounts approx. 3% of the rated current of the device. Also the CTs need a current greater than approx 3% of the rated current to ensure sufficient accuracy. Example: For a 600 A CT (primary current) any currents below 18 A cannot be detected any more.
- Overloading can result in destruction of the measuring inputs or faulty signals. Overloading means that in case of a short-circuit the current-carrying capacity of the measuring inputs could be exceeded.



## Ensure the correct tightening torques.

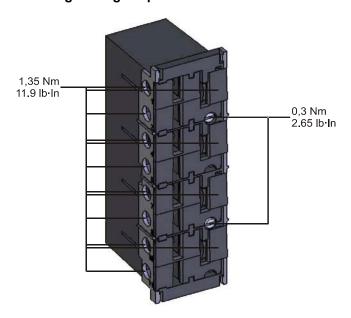

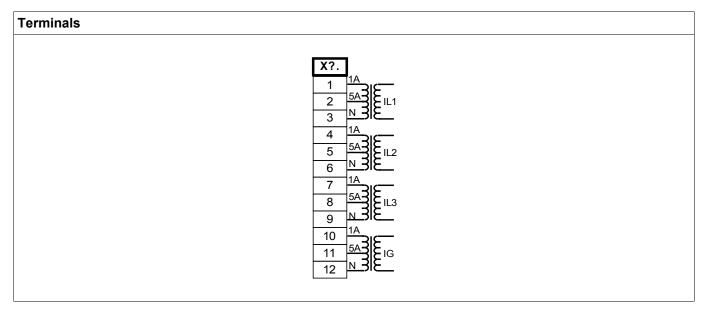

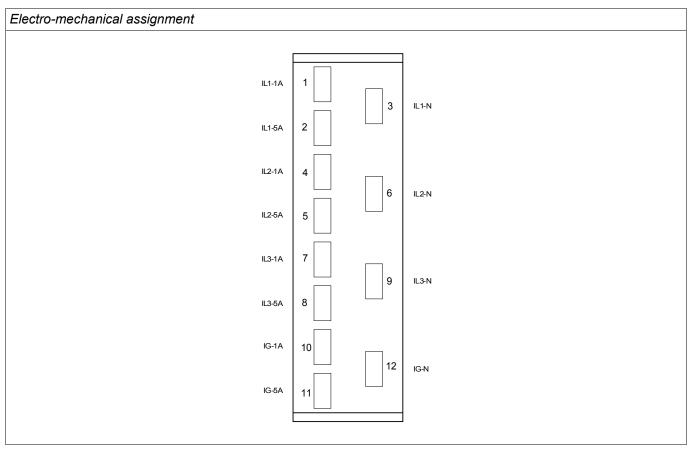

#### **CT Wiring**

Check the installation direction.



It is imperative that the secondary sides of measuring transformers be grounded.



The current measuring inputs may exclusively be connected to current measuring transformers (with galvanic separation).



CT secondary circuits must always to be low-burdened or short-circuited during operation.

## NOTICE

For current and voltage sensing function external wired and appropriate current and voltage transformer shall be used, based on the required input measurement ratings. Those devices provide the necessary insulation functionality.

All current measuring inputs can be provided with 1 A or 5 A nominal. Make sure that the wiring is correct.


#### **Sensitive Ground Current Measurement**

The proper use of sensitive current measuring inputs is the measurement of small currents like they could occur in isolated and high resistance grounded networks.

Due to the sensitiveness of these measuring inputs don't use them for the measurement of ground short circuit currents like they occur in solidly earthed networks.


If a sensitive measuring input should be used for the measurement of ground short circuit currents, it has to be ensured, that the measuring currents are transformed by a matching transformer according to the technical data of the protective device.

## **Common CT Wiring Configurations**

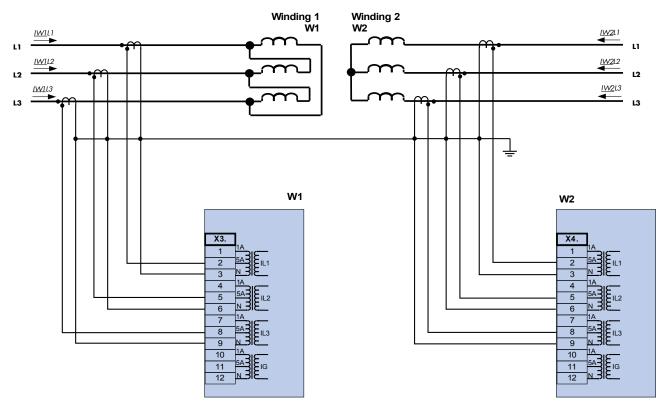

Three phase current measurement; In secondary = 5 A.


Three phase current measurement; In secondary = 5 A.

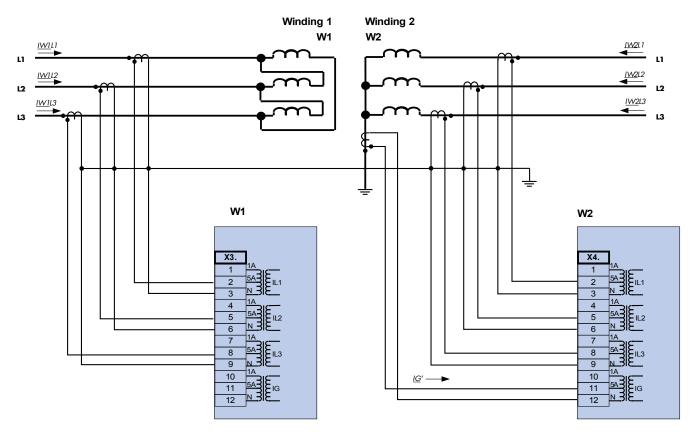

Three phase current measurement; In secondary = 5 A.

Three phase current measurement; In secondary = 5 A.

**Slot X5: Relay Output Card** 

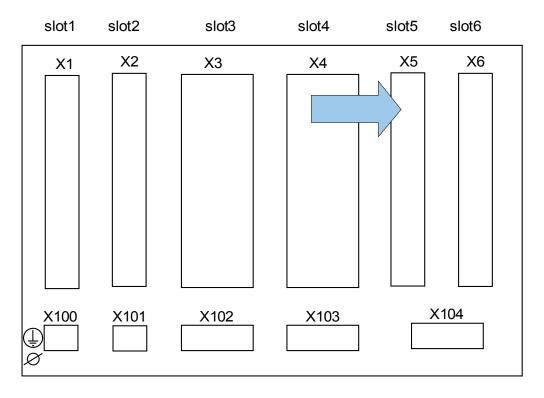


The type of card in this slot is dependent on the ordered device type. The different variants have a different scope of functions.

Available assembly groups in this slot:

■ (RO-6 X5): Assembly Group with 6 Relay Outputs. The Relay Output Card is identical with the one on Slot X2.



**Slot X6: Digital Inputs** 

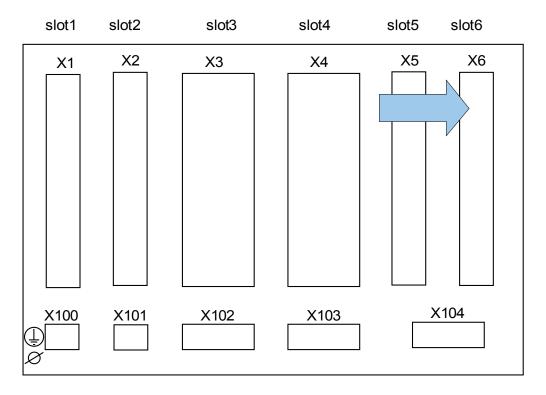


The type of card in this slot is dependent on the ordered device type. The different variants have a different scope of functions.

Available assembly groups in this slot:

■ (DI-8 X6): Assembly Group with 8 Digital Inputs.



## **Slot X100: Ethernet Interface**

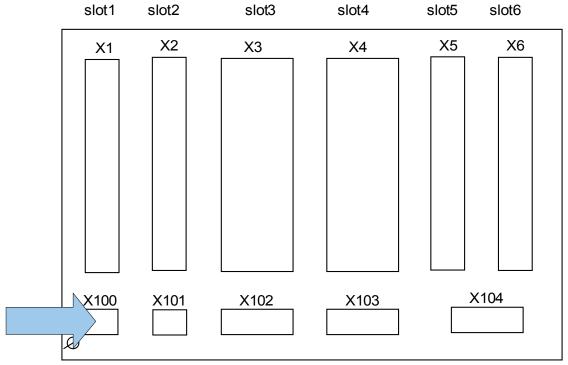


Rear side of the device (Slots)


An Ethernet interface may be available depending on the device type ordered.



## **Ethernet - RJ45**

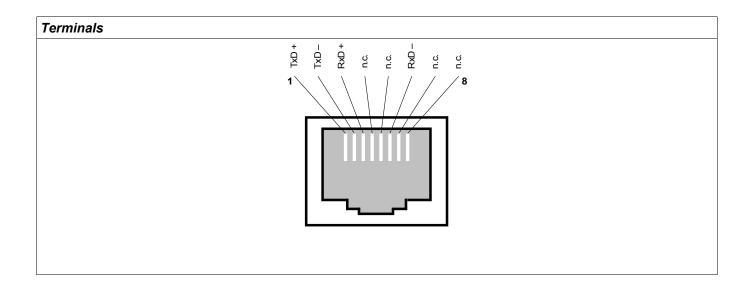

**Slot X103: Data Communication** 

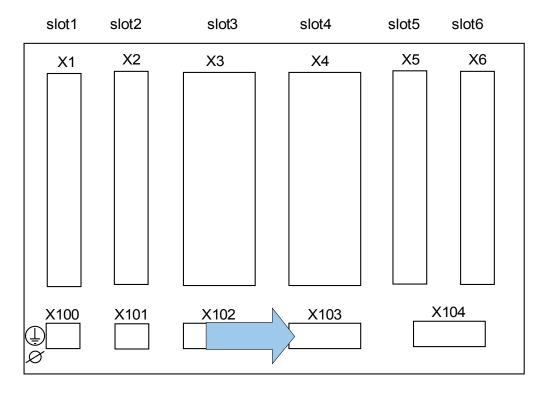

The data communication interface in the **X103** slot is dependent on the ordered device type. The scope of functions is dependent on the type of data communication interface.

Available assembly groups in this slot:

- RS485 Terminals for Modbus and IEC
- LWL Interface for Modbus, IEC and Profibus
- D-SUB Interface for Modbus and IEC
- D-SUB Interface for Profibus




#### Modbus® RTU / IEC 60870-5-103 via RS485





There are two different versions of the RS485 interface. By means of the wiring diagram on the top of your device, you have to find out which version is built in your device (Type1 or Type2).



Ensure the correct tightening torques.



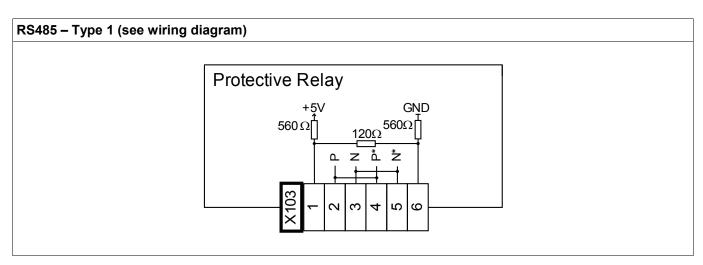


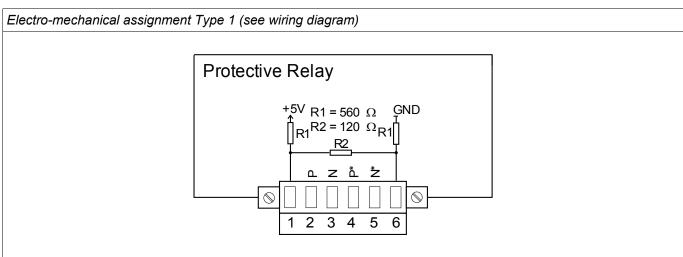


## NOTICE

The Modbus® / IEC 60870-5-103 connection cable must be shielded. The shielding has to be fixed at the screw which is marked with the ground symbol at the rear side of the device.

The communication is Halfduplex.

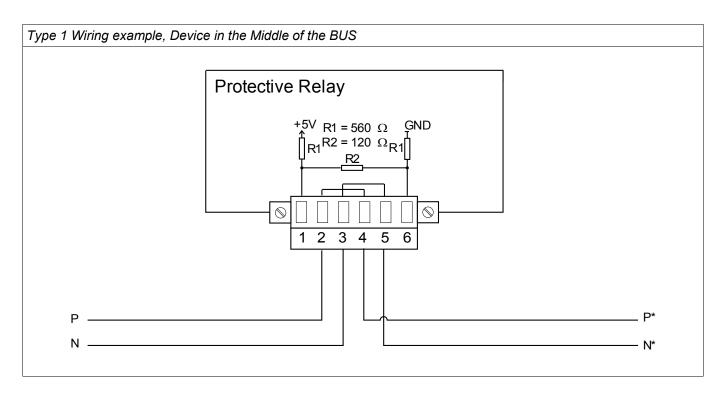

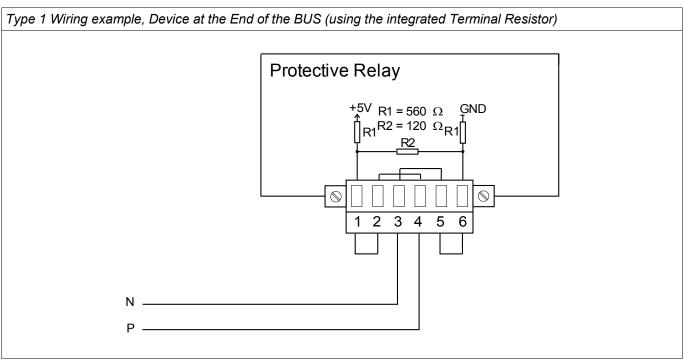






There are two different versions of the RS485 interface. By means of the wiring diagram on the top of your device, you have to find out which version is built in your device (Type1 or Type2).



Ensure the correct tightening torques.



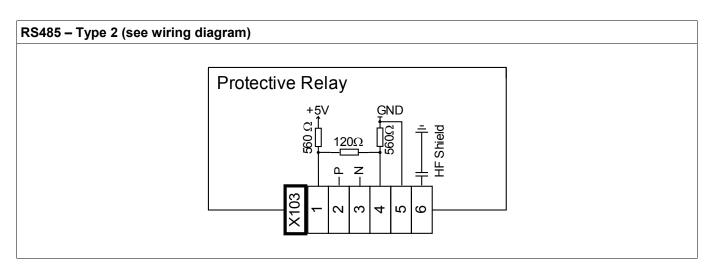


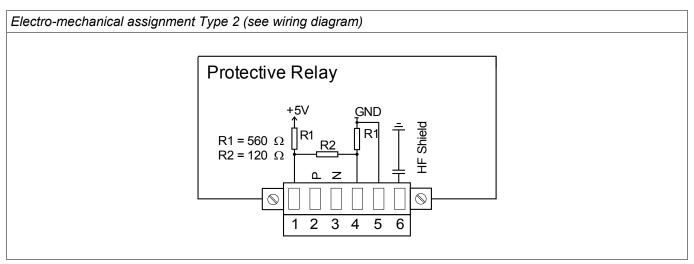


NOTICE


The Modbus $^{\circ}$  / IEC 60870-5-103 connection cable must be shielded. The shielding has to be fixed at the screw which is marked with the ground symbol at the rear side of the device.

The communication is Halfduplex.

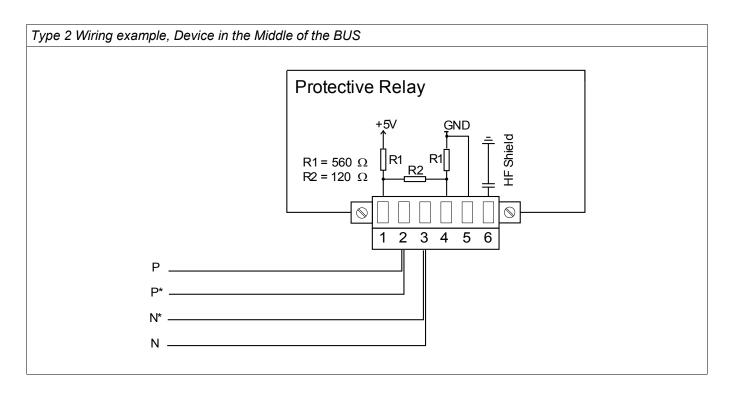


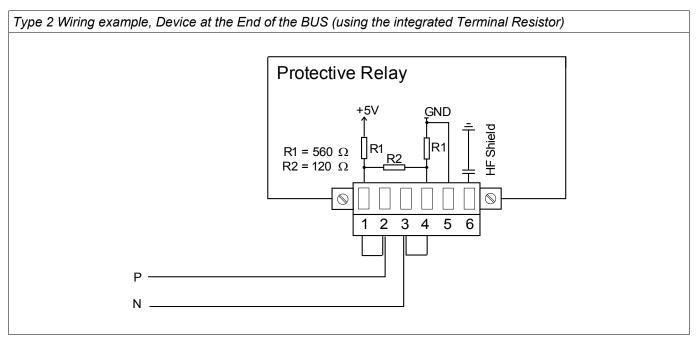


Type 2 Shielding Options (2-wire + Shield)

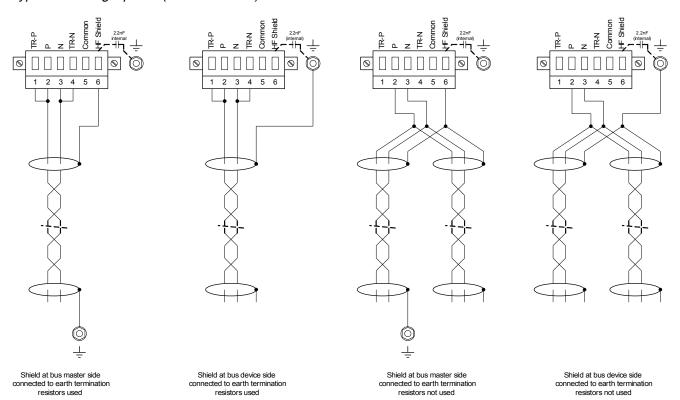

Type 2 Shielding Options (3-wire + Shield)

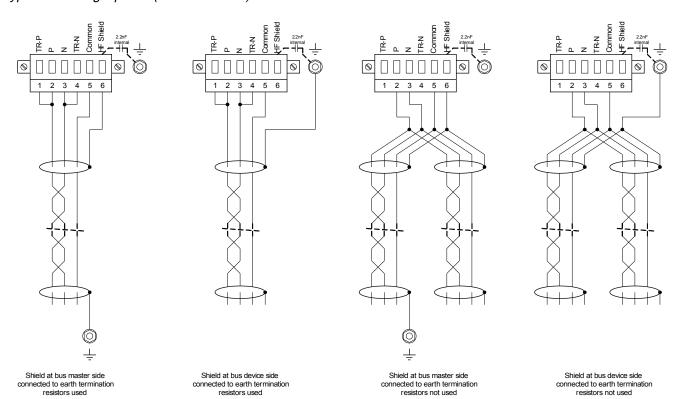

# Profibus DP/ Modbus® RTU / IEC 60870-5-103 via fibre optic

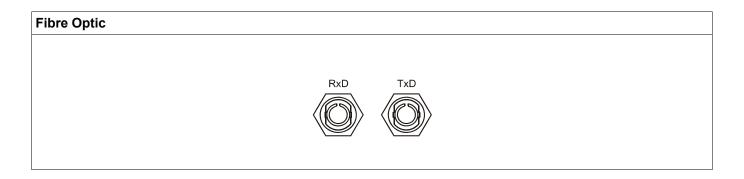

#### Modbus® RTU / IEC 60870-5-103 via D-SUB

#### **D-SUB**



#### Electro-mechanical assignment

D-SUB assignment - bushing

1 Earthing/shielding

3 RxD TxD - P: High-Level

4 RTS-signal

5 DGND: Ground, neg. Potential of aux voltage supply

6 VP: pos. Potential of the aux voltage supply

8 RxD TxD - N: Low-Level



The connection cable must be shielded. The shielding has to be fixed at the screw which is marked with the ground symbol at the back side of the device.

#### **Profibus DP via D-SUB**

#### D-SUB



#### Electro-mechanical assignment

D-SUB assignment - bushing

1 Earthing/shielding

3 RxD TxD - P: High-Level

4 RTS-signal

5 DGND: Ground, neg. Potential of aux voltage supply


6 VP: pos. Potential of the aux voltage supply

8 RxD TxD - N: Low-Level



The connection cable must be shielded. The shielding has to be fixed at the screw which is marked with the ground symbol at the back side of the device.

Slot X104: IRIG-B00X and Supervision Contact

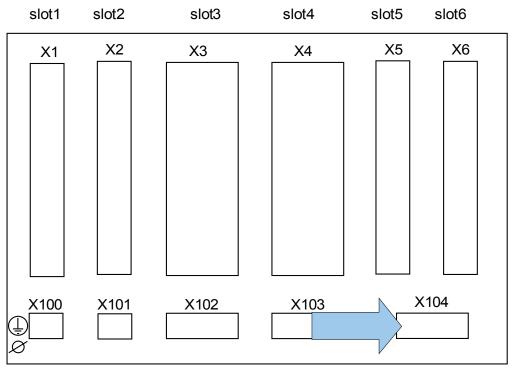



This comprises the IRIG-B00X and the System contact (Supervision Contact).


### System Contact and IRIG-B00X



#### Ensure the correct tightening torques.



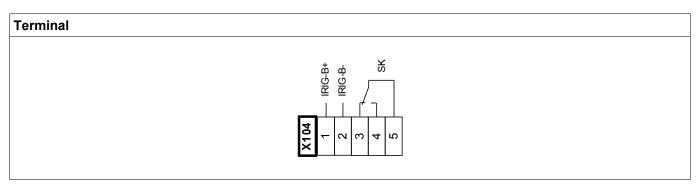


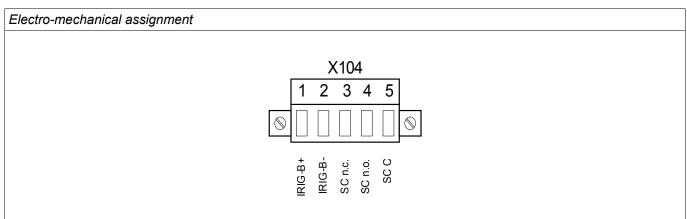


The *System-OK contact (SC relay)* cannot be configured. The system contact is a changeover contact that picks up when the device is free from internal faults. While the device is booting up, the *System OK relay (SC)* remains dropped-off (unenergized). As soon as the system is properly started (and protection is active), the System Contact picks up and the assigned LED is activated accordingly (please refer to the Self Supervision chapter).

#### PC Interface - X120

9-pole D-Sub at all device fronts

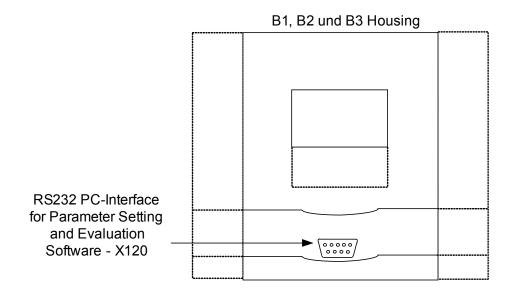

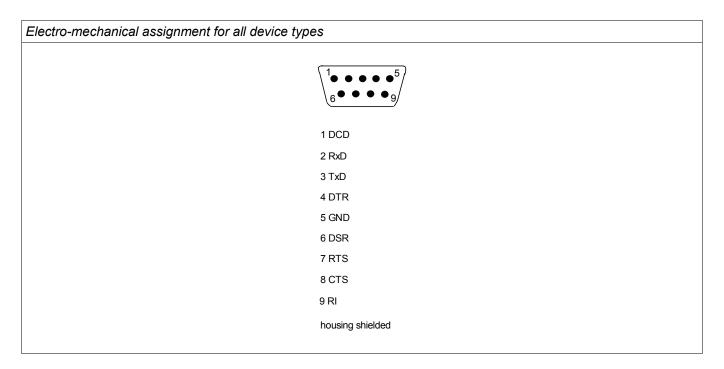

## **Assignment of the Zero Modem Cable**

Assignment of the fully wired zero modem cable

Dsub -9 (female)	Signal	Dsub -9 (female)	Signal
2	RxD	3	TxD
3	TxD	2	RxD
4	DTR	6,1	DSR, DCD
6,1	DSR, DCD	4	DTR
7	RTS	8	CTS
8	CTS	7	RTS
5	GND (Ground)	5	GND (Ground)
9	Ring signal	9	Ring signal



The connection cable must be shielded.

## Input, Output and LED Settings


## **Configuration of the Digital Inputs**



Based on the »assignment list«, the states of digital inputs are allocated to the module inputs.

Set the following parameters for each of the digital inputs:

- »Nominal voltage«
- *»Debouncing time«*: A state change will only be adopted by the digital input after the debouncing time has expired.
- »Inverting« (where necessary)

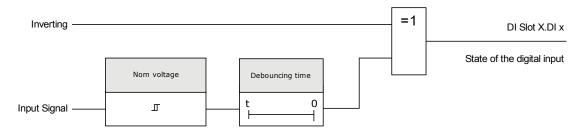

CAUTION

The debouncing time will be started each time the state of the input signal alternates.



In addition to the debouncing time that can be set via software, there is always a hardware debouncing time (approx 12 ms) that cannot be turned of.

## DI-8P X

#### DI Slot X 1

# Device Parameters of the Digital Inputs on DI-8P X

Parameter	Description	Setting range	Default	Menu path
Nom voltage	Nominal voltage of the digital inputs	24 V DC,	24 V DC	[Device Para
lack		48 V DC,		/Digital Inputs
		60 V DC,		/DI Slot X 1
		110 V DC,		/Group 1]
		230 V DC,		
		110 V AC,		
		230 V AC		
Inverting 1	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
				/DI Slot X 1
				/Group 1]
Debouncing time 1	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing	no debouncing	[Device Para
		time,	time	/Digital Inputs
		20 ms,		/DI Slot X 1
		50 ms,		/Group 1]
		100 ms		
Nom voltage	Nominal voltage of the digital inputs	24 V DC,	24 V DC	[Device Para
		48 V DC,		/Digital Inputs
$\otimes$		60 V DC,		/DI Slot X 1
		110 V DC,		/Group 2]
		230 V DC,		
		110 V AC,		
		230 V AC		
Inverting 2	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
				/DI Slot X 1
				/Group 2]
Debouncing time 2	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing	no debouncing time	[Device Para
		time,		/Digital Inputs
		20 ms,		/DI Slot X 1
		50 ms,		/Group 2]
		100 ms		

Parameter	Description	Setting range	Default	Menu path
Nom voltage	Nominal voltage of the digital inputs	24 V DC,	24 V DC	[Device Para
$\bigotimes$		48 V DC,		/Digital Inputs
		60 V DC,		/DI Slot X 1
		110 V DC,		/Group 3]
		230 V DC,		
		110 V AC,		
		230 V AC		
Inverting 3	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
				/DI Slot X 1
				/Group 3]
Debouncing time 3	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	time,	time	/Digital Inputs
$\bigcirc$		20 ms,		/DI Slot X 1
		50 ms,		/Group 3]
		100 ms		
Inverting 4	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
				/DI Slot X 1
				/Group 3]
Debouncing time 4	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing time,	me, time ms, ms,	[Device Para
$\otimes$		20 ms,		/Digital Inputs
		50 ms,		/DI Slot X 1
		100 ms		/Group 3]
Inverting 5	Inverting the input signals.	inactive,	inactive	[Device Para
3 3		active		/Digital Inputs
$\bigcirc$				/DI Slot X 1
				/Group 3]
Debouncing time 5	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing	no debouncing time	[Device Para
		time,		/Digital Inputs
		20 ms,		/DI Slot X 1
		50 ms,		/Group 3]
		100 ms		r -1
Inverting 6	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
				/DI Slot X 1
-				/Group 3]

Parameter	Description	Setting range	Default	Menu path
Debouncing time 6	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing time, 20 ms, 50 ms, 100 ms	no debouncing time	[Device Para /Digital Inputs /DI Slot X 1 /Group 3]
Inverting 7	Inverting the input signals.	inactive, active	inactive	[Device Para /Digital Inputs /DI Slot X 1 /Group 3]
Debouncing time 7	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted.	no debouncing time, 20 ms, 50 ms, 100 ms	no debouncing time	[Device Para /Digital Inputs /DI Slot X 1 /Group 3]
Inverting 8	Inverting the input signals.	inactive, active	inactive	[Device Para /Digital Inputs /DI Slot X 1 /Group 3]
Debouncing time 8	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted. 8	no debouncing time, 20 ms, 50 ms, 100 ms	no debouncing time	[Device Para /Digital Inputs /DI Slot X 1 /Group 3]

# Signals of the Digital Inputs on DI-8P X

Signal	Description
DI 1	Signal: Digital Input
DI 2	Signal: Digital Input
DI 3	Signal: Digital Input
DI 4	Signal: Digital Input
DI 5	Signal: Digital Input
DI 6	Signal: Digital Input
DI 7	Signal: Digital Input
DI 8	Signal: Digital Input

### **DI-8** X

#### DI Slot X 6

## Device Parameters of the Digital Inputs on DI-8 X

Parameter	Description	Setting range	Default	Menu path
Nom voltage	Nominal voltage of the digital inputs	24 V DC,	24 V DC	[Device Para
		48 V DC,		/Digital Inputs
		60 V DC,		/DI Slot X 6
		110 V DC,		/Group 1]
		230 V DC,		
		110 V AC,		
		230 V AC		
Inverting 1	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\bigcirc$				/DI Slot X 6
				/Group 1]
Debouncing time 1	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired (become effective). Thus, transient signals will not be	time,	time	/Digital Inputs
$\bigcirc$	misinterpreted.	20 ms,		/DI Slot X 6
		50 ms,		/Group 1]
		100 ms		
Inverting 2	Inverting the input signals.	inactive,	inactive	[Device Para
_		active		/Digital Inputs
				/DI Slot X 6
				/Group 1]
Debouncing time 2	A change of the state of a digital input will only be recognized after the debouncing time has expired	no debouncing time,	no debouncing time	[Device Para
	(become effective). Thus, transient signals will not be	20 ms,	ume	/Digital Inputs
	misinterpreted.	50 ms,		/DI Slot X 6
		100 ms		/Group 1]
Inverting 3	Inverting the input signals.	inactive,	inactive	[Device Para
mvorung o	involving the input signals.	active	HIGOLIVO	/Digital Inputs
		dotivo		/DI Slot X 6
				/Group 1]
Debouncing time 3	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
Dobounding lime 3	recognized after the debouncing time has expired	time,	time	/Digital Inputs
	(become effective). Thus, transient signals will not be misinterpreted.	20 ms,		/DI Slot X 6
	mismorpreted.	50 ms,		/Group 1]
		100 ms		/Oloup I]

Parameter	Description	Setting range	Default	Menu path
Inverting 4	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\Rightarrow$				/DI Slot X 6
				/Group 1]
Debouncing time 4	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired (become effective). Thus, transient signals will not be	time,	time	/Digital Inputs
$\bigcirc$	misinterpreted.	20 ms,		/DI Slot X 6
		50 ms,		/Group 1]
		100 ms		
nverting 5	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\bigotimes$				/DI Slot X 6
				/Group 1]
Debouncing time 5	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired (become effective). Thus, transient signals will not be	time,	time	/Digital Inputs
$\bigcirc$	misinterpreted.	20 ms,		/DI Slot X 6
		50 ms,		/Group 1]
		100 ms		
nverting 6	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\Rightarrow$				/DI Slot X 6
<b>—</b>				/Group 1]
Debouncing time 6	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired (become effective). Thus, transient signals will not be	time,	time	/Digital Inputs
$\bigcirc$	misinterpreted.	20 ms,		/DI Slot X 6
	, i	50 ms,		/Group 1]
		100 ms		, ,
nverting 7	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\bigcirc$				/DI Slot X 6
				/Group 1]
Debouncing time 7	A change of the state of a digital input will only be	no debouncing	no debouncing	[Device Para
	recognized after the debouncing time has expired	time,	time	/Digital Inputs
$\bigcirc$	(become effective). Thus, transient signals will not be misinterpreted.	20 ms,		/DI Slot X 6
		50 ms,		/Group 1]
		100 ms		- 1
Inverting 8	Inverting the input signals.	inactive,	inactive	[Device Para
		active		/Digital Inputs
$\bigcirc$				/DI Slot X 6
				/Group 1]

Parameter	Description	Setting range	Default	Menu path
Debouncing time 8	A change of the state of a digital input will only be recognized after the debouncing time has expired (become effective). Thus, transient signals will not be misinterpreted. 8	no debouncing time, 20 ms,	no debouncing time	[Device Para /Digital Inputs /DI Slot X 6
		50 ms, 100 ms		/Group 1]

## Signals of the Digital Inputs on DI-8 X

Signal	Description
DI 1	Signal: Digital Input
DI 2	Signal: Digital Input
DI 3	Signal: Digital Input
DI 4	Signal: Digital Input
DI 5	Signal: Digital Input
DI 6	Signal: Digital Input
DI 7	Signal: Digital Input
DI 8	Signal: Digital Input

#### **Output Relays Settings**

The conditions of module outputs and signals/protective functions (such as reverse interlocking) can be passed by means of alarm relays. The alarm relays are potential-free contacts (which can be used as opening or closing contact). Each alarm relay can be assigned up to 7 functions out of the »assignment list«.

Set the following parameters for each of the binary output relays:

- Up to 7 signals from the »assignment list« (OR-connected)
- · Each of the assigned signals can be inverted.
- The (collective) state of the binary output relay can be inverted (open or closed circuit current principle)
- By the Operating Mode it can be determined whether the relay output works in working current or closedcircuit principle.
- »Latched« active or inactive
  - *»Latched = inactive«*:

    If the latching function is *»inactive«*, the alarm relay respectively the alarm contact will adopt the state of those alarms that were assigned.
  - »Latched = active«

    If the »latching function« is »active«, the state of the alarm relay respectively alarm contact that was set by the alarms will be stored.

The alarm relay can only be acknowledged after reset of those signals that had initiated setting of the relay and after expiry of the minimum retention time.

• *»Hold time«*: At signal changes, the minimal latching time ensures that the relay will be maintained picked-up or released for at least this period.

### CAUTION

If binary outputs are parameterized »Latched=active«, they will keep (return into) their position even if there is a break within the power supply.

If binary output relays are parameterized »Latched=active«, The binary output will also retain, if the binary output is reprogrammed in another way. This applies also if »Latched is set to inactive«. Resetting a binary output that has latched a signal will always require an acknowledgement.

## NOTICE

The »System OK Relay« (watchdog) cannot be configured.


Acknowledgment options

Binary output relays can be acknowledged:

- Via the push-button »C« at the operating panel.
- Each binary output relay can be acknowledged by a signal of the »assignment list« (If »Latched is active«).
- Via the module »Ex Acknowledge« all binary output relays can be acknowledged at once, if the signal for external acknowledgement that was selected from the »assignment list« becomes true. (e.g the state of a digital input).
- Via SCADA, all output relays can be acknowledged at once.

**A** WARNING

Relay output contacts can be set by force or disarmed (for commisioning support, please refer to the "Service/Disarming the Output Relay Contacts" and "Service/Forcing the Output Relay Contacts" sections).

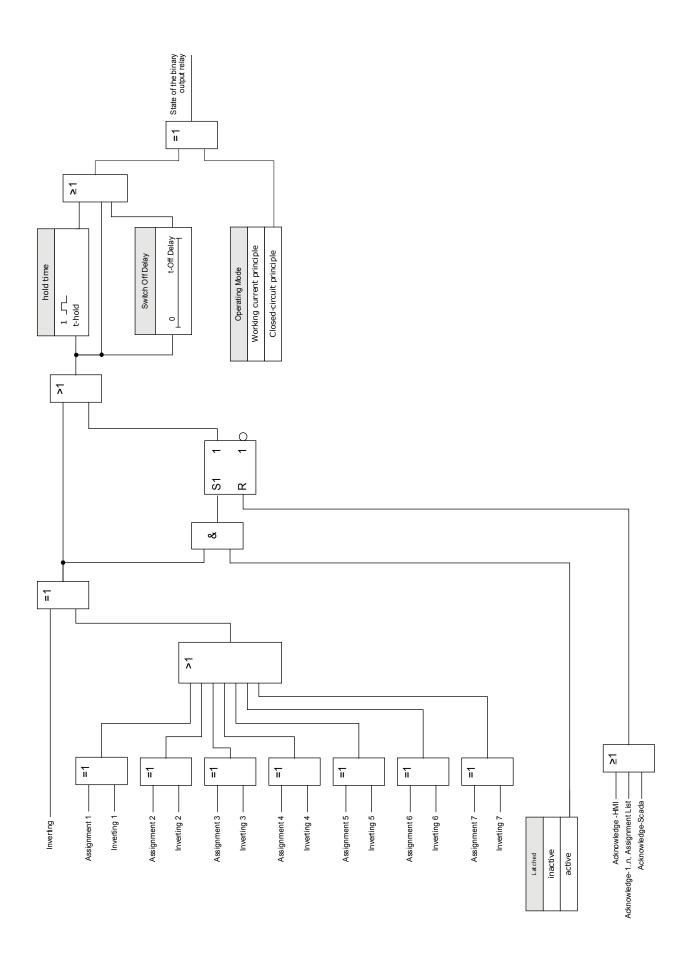

#### **System Contact**

The *System OK alarm relay (SC)* is the devices »LIFE CONTACT«. Its installation location depends on the housing type. Please refer to the wiring diagram of the device (WDC-contact).

The *System-OK relay (SC)* cannot be parameterized. The system contact is an operating current contact that picks-up, when the device is free from internal faults. While the device is booting up, the *System OK relay (SC)* remains dropped-off. As soon as the system was duly started up, the relay picks up and the assigned LED is activated accordingly (please refer to chapter Self Supervision).

### OR-6 X

#### BO Slot X2 ,BO Slot X5

### **Direct Commands of OR-6 X**

Parameter	Description	Setting range	Default	Menu path
DISARMED	This is the second step, after the "DISARMED Ctrl" has been activated, that is required to DISARM the relay outputs. This will DISARM those output relays that are currently not latched and that are not on "hold" by a pending minimum hold time. CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: Zone Interlocking and Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance.	inactive, active	inactive	[Service /Test (Prot inhibit) /DISARMED /BO Slot X2]
Force all Outs	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state. Forcing all outputs relays of an entire assembly group is superior to forcing a single output relay.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
Force OR1	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
Force OR2	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
Force OR3	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]

Parameter	Description	Setting range	Default	Menu path
Force OR4	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
Force OR5	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
Force OR6	By means of this function the normal Output Relay State can be overwritten (forced). The relay can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	Normal, De-Energized, Energized	Normal	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]

## Device Parameters of the Binary Output Relays on OR-6 X

Parameter	Description	Setting range	Default	Menu path
Operating Mode		Working current principle,	Working current	[Device Para
			principle	/Binary Outputs
$\bigcirc$		Closed-circuit prin- ciple		/BO Slot X2
				/BO 1]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
				/BO Slot X2
				/BO 1]
Latched	Defines whether the Relay Output will be latched when	inactive,	BO Slot X2:	[Device Para
	it picks up.	active	active	/Binary Outputs
			BO Slot X5: inactive	/BO Slot X2
				/BO 1]

Parameter	Description	Setting range	Default	Menu path
Acknowledgement	Acknowledgement Signal - An acknowledgement signal (that acknowledges the corresponding binary output relay) can be assigned to each output relay. The acknowledgement-signal is only effective if the parameter "Latched" is set to active.	1n, Assignment List		[Device Para /Binary Outputs /BO Slot X2 /BO 1]
	Only available if: Latched = active			rp : p
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs /BO Slot X2
				/BO 5lot X2
Assignment 1	Assignment	1n, Assignment	BO Slot X2:	[Device Para
Assignment	Assignment	List	SG[1].TripCmd	/Binary Outputs
			BO Slot X5:	/BO Slot X2
				/BO 1]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
3		active		/Binary Outputs
				/BO Slot X2
				/BO 1]
Assignment 2	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Assignment 3	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 1]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 1]
Assignment 4	Assignment	1n, Assignment List	-,-	[Device Para
		LIST		/Binary Outputs
				/BO Slot X2
				/BO 1]

Parameter	Description	Setting range	Default	Menu path
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
•				/BO 1]
Assignment 6	Assignment	1n, Assignment	-,-	[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigoplus$				/BO Slot X2
				/BO 1]
Assignment 7	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 1]
Operating Mode	Operating Mode	Working current	Working current	[Device Para
		principle,	principle	/Binary Outputs
		Closed-circuit prin- ciple		/BO Slot X2
<del>-</del>				/BO 2]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 2]

Parameter	Description	Setting range	Default	Menu path
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
				/BO Slot X2
				/BO 2]
Latched	Defines whether the Relay Output will be latched when	inactive,	BO Slot X2:	[Device Para
	it picks up.	active	active	/Binary Outputs
$\bigcirc$			BO Slot X5: inactive	/BO Slot X2
				/BO 2]
Acknowledgement	Acknowledgement Signal - An acknowledgement signal			[Device Para
	(that acknowledges the corresponding binary output relay) can be assigned to each output relay. The	List		/Binary Outputs
$\bigcirc$	acknowledgement-signal is only effective if the			/BO Slot X2
	parameter "Latched" is set to active.			/BO 2]
	Only available if: Latched = active			
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\otimes$				/BO Slot X2
				/BO 2]
Assignment 1	Assignment	1n, Assignment List	BO Slot X2: SG[2].TripCmd	[Device Para
_		List	BO Slot X5:	/Binary Outputs
$\otimes$			DO 0101 No	/BO Slot X2
				/BO 2]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
_		active		/Binary Outputs
				/BO Slot X2
				/BO 2]
Assignment 2	Assignment	1n, Assignment List	-,-	[Device Para
_		List		/Binary Outputs
				/BO Slot X2
				/BO 2]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\otimes$				/BO Slot X2
				/BO 2]
Assignment 3	Assignment	1n, Assignment List		[Device Para
				/Binary Outputs
				/BO Slot X2
				/BO 2]

Parameter	Description	Setting range	Default	Menu path
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 2]
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 2]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 2]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
			/BO Slot X2	
				/BO 2]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 2]
Assignment 6	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 2]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 2]
Assignment 7	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
-				/BO 2]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 2]

Parameter	Description	Setting range	Default	Menu path
Operating Mode	Operating Mode	Working current	Working current	[Device Para
		principle,	principle	/Binary Outputs
$\bigcirc$		Closed-circuit prin- ciple		/BO Slot X2
)				/BO 3]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 3]
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
$\bigotimes$				/BO Slot X2
)				/BO 3]
Latched	Defines whether the Relay Output will be latched when	inactive,	inactive	[Device Para
	it picks up.	active		/Binary Outputs
$\bigotimes$				/BO Slot X2
)				/BO 3]
Acknowledgement	Acknowledgement Signal - An acknowledgement signal	1n, Assignment		[Device Para
	(that acknowledges the corresponding binary output relay) can be assigned to each output relay. The	List		/Binary Outputs
	acknowledgement-signal is only effective if the			/BO Slot X2
	parameter "Latched" is set to active.			/BO 3]
	Only available if: Latched = active			
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 3]
Assignment 1	Assignment	1n, Assignment	BO Slot X2:	[Device Para
		List	Prot.Alarm	/Binary Outputs
$\bigotimes$			BO Slot X5:	/BO Slot X2
)				/BO 3]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\otimes$				/BO Slot X2
<b>*</b>				/BO 3]
Assignment 2	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 3]

Parameter	Description	Setting range	Default	Menu path
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 3]
Assignment 3	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 3]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 3]
Assignment 4	Assignment	1n, Assignment	-,-	[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 3]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 3]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 3]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 3]
Assignment 6	Assignment	1n, Assignment		[Device Para
	List		/Binary Outputs	
$\bigcirc$				/BO Slot X2
				/BO 3]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
•				/BO 3]

Parameter	Description	Setting range	Default	Menu path
Assignment 7	Assignment	1n, Assignment List		[Device Para /Binary Outputs
				/BO Slot X2 /BO 3]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 3]
Operating Mode	Operating Mode	Working current	Working current	[Device Para
		principle,	principle	/Binary Outputs
$\bigcirc$		Closed-circuit prin- ciple		/BO Slot X2
		Sipio		/BO 4]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
$\bigotimes$	duration of the notation.			/BO Slot X2
				/BO 4]
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 4]
Latched	Defines whether the Relay Output will be latched when	inactive,	inactive	[Device Para
	it picks up.	active		/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 4]
Acknowledgement	Acknowledgement Signal - An acknowledgement signal	1n, Assignment	-,-	[Device Para
	(that acknowledges the corresponding binary output relay) can be assigned to each output relay. The	List		/Binary Outputs
$\bigotimes$	acknowledgement-signal is only effective if the			/BO Slot X2
	parameter "Latched" is set to active.			/BO 4]
	Only available if: Latched = active			
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 4]
Assignment 1	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]

Parameter	Description	Setting range	Default	Menu path
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Assignment 2	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 4]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 4]
Assignment 3	Assignment	1n, Assignment	-,-	[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 4]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 4]
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 4]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 4]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 4]

Parameter	Description	Setting range	Default	Menu path
Assignment 6	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Assignment 7	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 4]
Operating Mode	Operating Mode	Working current	Working current	[Device Para
		principle,	principle	/Binary Outputs
$\bigcirc$		Closed-circuit prin- ciple		/BO Slot X2
		oipic		/BO 5]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Latched	Defines whether the Relay Output will be latched when	inactive,	inactive	[Device Para
	it picks up.	active		/Binary Outputs
$\bigotimes$				/BO Slot X2
				/BO 5]
Acknowledgement	Acknowledgement Signal - An acknowledgement signal	1n, Assignment		[Device Para
	(that acknowledges the corresponding binary output relay) can be assigned to each output relay. The	List		/Binary Outputs
$\bigotimes$	acknowledgement-signal is only effective if the			/BO Slot X2
	parameter "Latched" is set to active.			/BO 5]
	Only available if: Latched = active			

Parameter	Description	Setting range	Default	Menu path
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 5]
Assignment 1	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 5]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Assignment 2	Assignment	1n, Assignment	-,-	[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Assignment 3	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 5]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 5]

Parameter	Description	Setting range	Default	Menu path
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 5]
Assignment 6	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 5]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 5]
Assignment 7	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
Ψ				/BO 5]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
Ψ				/BO 5]
Operating Mode	Operating Mode	Working current	Working current	[Device Para
		principle,	principle	/Binary Outputs
		Closed-circuit prin- ciple		/BO Slot X2
		olpio		/BO 6]
t-hold	To clearly identify the state transition of a binary output	0.00 - 300.00s	0.00s	[Device Para
	relay, the "new state" is being hold, at least for the duration of the hold time.			/Binary Outputs
	datation of the field time.			/BO Slot X2
				/BO 6]
t-Off Delay	Switch Off Delay	0.00 - 300.00s	0.00s	[Device Para
				/Binary Outputs
				/BO Slot X2
				/BO 6]

Parameter	Description	Setting range	Default	Menu path
Latched	Defines whether the Relay Output will be latched when	inactive,	inactive	[Device Para
	it picks up.	active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Acknowledgement	Acknowledgement Signal - An acknowledgement signal	_		[Device Para
	(that acknowledges the corresponding binary output relay) can be assigned to each output relay. The	List		/Binary Outputs
$\bigcirc$	acknowledgement-signal is only effective if the			/BO Slot X2
	parameter "Latched" is set to active.			/BO 6]
	Only available if: Latched = active			
Inverting	Inverting of the Binary Output Relay.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Assignment 1	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Assignment 2	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Assignment 3	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 6]

Parameter	Description	Setting range	Default	Menu path
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
•				/BO 6]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 6]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
•				/BO 6]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 6]
Assignment 6	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
				/BO Slot X2
				/BO 6]
Inverting 6	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Assignment 7	Assignment	1n, Assignment		[Device Para
		List		/Binary Outputs
$\bigcirc$				/BO Slot X2
				/BO 6]
Inverting 7	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/Binary Outputs
				/BO Slot X2
				/BO 6]
DISARMED Ctrl	Enables and disables the disarming of the relay	inactive,	inactive	[Service
	outputs. This is the first step of a two step process, to inhibit the operation or the relay outputs. Please refer to	active		/Test (Prot inhibit)
	"DISARMED" for the second step.			/DISARMED
				/BO Slot X2]

Parameter	Description	Setting range	Default	Menu path
Disarm Mode	CAUTION!RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance.	permanent, timeout	permanent	[Service /Test (Prot inhibit) /DISARMED /BO Slot X2]
t-Timeout DISARM	The relays will be armed again after expiring of this time.  Only available if: Mode = Timeout DISARM	0.00 - 300.00s	0.03s	[Service /Test (Prot inhibit) /DISARMED /BO Slot X2]
Force Mode	By means of this function the normal Output Relay States can be overwritten (forced) in case that the Relay is not in a disarmed state. The relays can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	permanent, timeout	permanent	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]
t-Timeout Force	The Output State will be set by force for the duration of this time. That means for the duration of this time the Output Relay does not show the state of the signals that are assigned on it.  Only available if: Mode = Timeout DISARM	0.00 - 300.00s	0.03s	[Service /Test (Prot inhibit) /Force OR /BO Slot X2]

## Input States of the Binary Output Relays on OR-6 X

Name	Description	Assignment via
BO1.1	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.2	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.3	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.4	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.5	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.6	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
BO1.7	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 1]
Ack signal BO 1	Module input state: Acknowledgement signal for the binary	[Device Para
	output relay. If latching is set to active, the binary output relay can only be acknowledged if those signals that initiated the	/Binary Outputs
	setting are fallen back and the hold time is expired.	/BO Slot X2
		/BO 1]
BO2.1	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 2]

Name	Description	Assignment via
BO2.2	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 2]
BO2.3	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 2]
BO2.4	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 2]
BO2.5	Module input state: Assignment	[Device Para
	·	/Binary Outputs
		/BO Slot X2
		/BO 2]
BO2.6	Module input state: Assignment	[Device Para
	·	/Binary Outputs
		/BO Slot X2
		/BO 2]
BO2.7	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 2]
Ack signal BO 2	Module input state: Acknowledgement signal for the binary	[Device Para
	output relay. If latching is set to active, the binary output relay	/Binary Outputs
	can only be acknowledged if those signals that initiated the setting are fallen back and the hold time is expired.	/BO Slot X2
		/BO 2]
BO3.1	Module input state: Assignment	[Device Para
	·	/Binary Outputs
		/BO Slot X2
		/BO 3]
BO3.2	Module input state: Assignment	[Device Para
	·	/Binary Outputs
		/BO Slot X2
		/BO 3]
		1,50 0]

Name	Description	Assignment via	
BO3.3	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
BO3.4	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
BO3.5	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
BO3.6	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
BO3.7	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
Ack signal BO 3	Module input state: Acknowledgement signal for the binary output relay. If latching is set to active, the binary output relay can only be acknowledged if those signals that initiated the setting are fallen back and the hold time is expired.	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 3]	
BO4.1	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO4.2	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO4.3	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	

Name	Description	Assignment via	
BO4.4	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO4.5	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO4.6	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO4.7	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
Ack signal BO 4	Module input state: Acknowledgement signal for the binary	[Device Para	
	output relay. If latching is set to active, the binary output relay can only be acknowledged if those signals that initiated the setting are fallen back and the hold time is expired.	/Binary Outputs	
		/BO Slot X2	
		/BO 4]	
BO5.1	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
BO5.2	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
BO5.3	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
BO5.4	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	

Name	Description	Assignment via	
BO5.5	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
BO5.6	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
BO5.7	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 5]	
Ack signal BO 5	Module input state: Acknowledgement signal for the binary	[Device Para	
	output relay. If latching is set to active, the binary output relay can only be acknowledged if those signals that initiated the	/Binary Outputs	
	setting are fallen back and the hold time is expired.	/BO Slot X2	
		/BO 5]	
BO6.1	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 6]	
BO6.2	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 6]	
BO6.3	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 6]	
BO6.4	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 6]	
BO6.5	Module input state: Assignment	[Device Para	
		/Binary Outputs	
		/BO Slot X2	
		/BO 6]	

Name	Description	Assignment via
BO6.6	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 6]
BO6.7	Module input state: Assignment	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 6]
Ack signal BO 6	Module input state: Acknowledgement signal for the binary output relay. If latching is set to active, the binary output relay can only be acknowledged if those signals that initiated the setting are fallen back and the hold time is expired.	[Device Para
		/Binary Outputs
		/BO Slot X2
		/BO 6]

## Signals of the Binary Output Relays on OR-6 X

Signal	Description
BO 1	Signal: Binary Output Relay
BO 2	Signal: Binary Output Relay
BO 3	Signal: Binary Output Relay
BO 4	Signal: Binary Output Relay
BO 5	Signal: Binary Output Relay
BO 6	Signal: Binary Output Relay
DISARMED!	Signal: CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Self Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance
Outs forced	Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.

#### **LED** configuration

The LEDs can be configured within menu:

[Device Para/LEDs/Group X]

### CAUTION

Attention must be paid that there are no overlapping functions due to double or multiple LED assignment of colors and flashing codes.

### CAUTION

If LEDs are parameterized »Latched=active«, they will keep (return into) their blink code/color even if there is a break within the power supply.

If LEDs are parameterized »Latched=active«, The LED blink code will also retain, if the LED is reprogrammed in another way. This applies also if »Latched is set to inactive«. Resetting a LED that has latched a signal will always require an acknowledgement.

## NOTICE

This chapter contains information on the LEDs that are placed on the left hand of the display (group A).

If your device is also equipped with LEDs on the right hand of the display (group B), the information in this chapter is valid analog. The only difference is "group A" and "group B" within the menu paths.

Via push button »INFO« it is always possible to display the current alarms/alarm texts that are assigned to an LED. Please refer to chapter *Navigation* (description of the »INFO-key«).

Set the following parameters for each LED:

- "">»Latching/self holding function«: If "Latching« is set to "active«, the state that is set by the alarms will be stored. If latching "Latching« is set to "inactive«, the LED always adopts the state of those alarms that were assigned.
- »Acknowledgment« (signal from the »assignment list«)
- *»LED active color«*, LED lights up in this color in case that at least one of the allocated functions is valid (red, red flashing, green, green flashing, off).
- *»LED inactive color«*, LED lights up in this color in case that none of the allocated functions is valid (red, red flashing, green, green flashing, off).
- Apart from the *LED for System OK*, each LED can be assigned up to five functions/alarms out of the »assignment list«.
- *»Inverting«* (of the signals), if necessary.


#### Acknowledgment options

LEDs can be acknowledged by:

- Via the push-button »C« at the operating panel.
- Each LED can be acknowledged by a signal of the »assignment list« (If »Latched = active«).
- Via the module »Ex Acknowledge« all LEDs can be acknowledged at once, if the signal for external acknowledgment that was selected from the »assignment list« becomes true (e.g. the state of a digital input).
- Via SCADA, all LEDs can be acknowledged at once.



The Product-CD that is delivered with the device contains a PDF-Template in order to create and print out self adhesive films for LED assignment texts (front foil) by means of a laser printer. Recommendation: (AVERY Zweckform Art.Nr.3482)

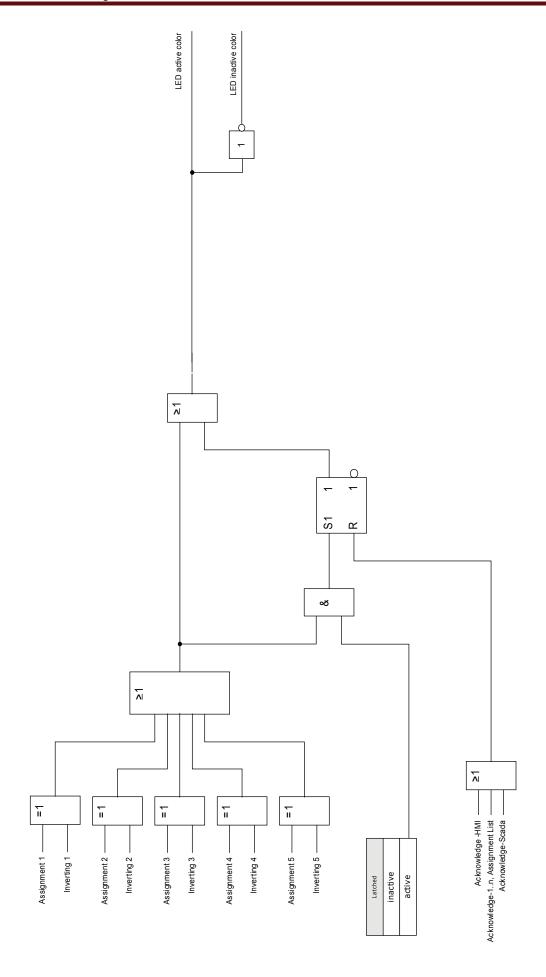

### The »System OK« LED

This LED flashes green while the device is booting. After completed booting, the LED for *System OK* lights up in green thus signalizing that the *protection* (function) is *activated*«. If, however, in spite of successful booting, or after the third unsuccessful reboot caused by the module self supervision the *System OK – LED* flashes in red or is red illuminated, please contact the *Woodward Kempen GmbH* – Service Dept (See also chapter Self Supervision).

LED System OK cannot be parameterized.

### **Global Protection Parameters of the LED Module**

### LEDs group A ,LEDs group B

Parameter	Description	Setting range	Default	Menu path
Latched	Defines whether the LED will be latched when it picks	inactive,	inactive	[Device Para
	up.	active		/LEDs
				/LEDs group A
				/LED 1]
Ack signal	Acknowledgement signal for the LED. If latching is set	1n, Assignment		[Device Para
	to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.	List		/LEDs
				/LEDs group A
	Dependency Only available if: Latched = active			/LED 1]
LED active color	The LED lights up in this color if the state of the OR-	green,	LEDs group A:	[Device Para
	assignment of the signals is true.	red,	green	/LEDs
		red flash,	LEDs group B: red	/LEDs group A
		green flash,		/LED 1]
		-		
LED inactive color	The LED lights up in this color if the state of the OR-	green,	-	[Device Para
	assignment of the signals is untrue.	red,		/LEDs
		red flash,		/LEDs group A
		green flash,		/LED 1]
		-		
Assignment 1	Assignment	1n, Assignment	LEDs group A:	[Device Para
		List	Prot.active	/LEDs
$\bigcirc$			LEDs group B:	/LEDs group A
				/LED 1]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 1]
Assignment 2	Assignment	1n, Assignment	-,-	[Device Para
		List		/LEDs
				/LEDs group A
				/LED 1]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 1]

Parameter	Description	Setting range	Default	Menu path
Assignment 3	Assignment	1n, Assignment List		[Device Para /LEDs
				/LEDs group A
				/LED 1]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 1]
Assignment 4	Assignment	1n, Assignment	-,-	[Device Para
		List		/LEDs
$\bigcirc$				/LEDs group A
				/LED 1]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 1]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigotimes$				/LEDs group A
				/LED 1]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
)				/LED 1]
Latched	Defines whether the LED will be latched when it picks	inactive,	LEDs group A:	[Device Para
	up.	active	active	/LEDs
$\bigcirc$			LEDs group B: inactive	/LEDs group A
)				/LED 2]
Ack signal	Acknowledgement signal for the LED. If latching is set	1n, Assignment	-,-	[Device Para
	to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.	List		/LEDs
				/LEDs group A
•	Only available if: Latched = active			/LED 2]
LED active color	The LED lights up in this color if the state of the OR-	green,	red	[Device Para
	assignment of the signals is true.	red,		/LEDs
		red flash,		/LEDs group A
-		green flash,		/LED 2]
		-		

Parameter	Description	Setting range	Default	Menu path
LED inactive color	The LED lights up in this color if the state of the OR-	green,	-	[Device Para
	assignment of the signals is untrue.	red,		/LEDs
		red flash,		/LEDs group A
		green flash,		/LED 2]
		-		
Assignment 1	Assignment	1n, Assignment	LEDs group A:	[Device Para
		List	SG[1].TripCmd	/LEDs
$\bigcirc$			LEDs group B:	/LEDs group A
				/LED 2]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 2]
Assignment 2	Assignment	1n, Assignment	LEDs group A:	[Device Para
		List	SG[2].TripCmd	/LEDs
			LEDs group B:	/LEDs group A
				/LED 2]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 2]
Assignment 3	Assignment	1n, Assignment List		[Device Para
		Liot		/LEDs
$\otimes$				/LEDs group A
				/LED 2]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\otimes$				/LEDs group A
A :	Assissance	4 - Assissant		/LED 2]
Assignment 4	Assignment	1n, Assignment List		[Device Para
				/LEDs
				/LEDs group A
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	/LED 2] [Device Para
miverung 4	miverting of the state of the assigned signal.	active	III I I I I I I I I I I I I I I I I I	/LEDs
		active		/LEDs group A
				/LED 2]

Parameter	Description	Setting range	Default	Menu path
Assignment 5	Assignment	1n, Assignment List	-,-	[Device Para /LEDs /LEDs group A
Inverting 5	Inverting of the state of the assigned signal.	inactive, active	inactive	/LED 2] [Device Para /LEDs /LEDs group A
Latched	Defines whether the LED will be latched when it picks up.	inactive, active	inactive	/LED 2] [Device Para /LEDs /LEDs group A
Ack signal	Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.  Only available if: Latched = active	1n, Assignment List	-,-	/LED 3] [Device Para /LEDs /LEDs group A
LED active color	The LED lights up in this color if the state of the OR-assignment of the signals is true.	green, red, red flash, green flash,	LEDs group A: red flash LEDs group B: red	/LED 3] [Device Para /LEDs /LEDs group A /LED 3]
LED inactive color	The LED lights up in this color if the state of the OR-assignment of the signals is untrue.	green, red, red flash, green flash,	-	[Device Para /LEDs /LEDs group A /LED 3]
Assignment 1	Assignment	1n, Assignment List	LEDs group A: Prot.Alarm LEDs group B:	[Device Para /LEDs /LEDs group A /LED 3]
Inverting 1	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 3]
Assignment 2	Assignment	1n, Assignment List	7.7	[Device Para /LEDs /LEDs group A /LED 3]

Parameter	Description	Setting range	Default	Menu path
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 3]
Assignment 3	Assignment	1n, Assignment		[Device Para
		List		/LEDs
				/LEDs group A
				/LED 3]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 3]
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigotimes$				/LEDs group A
				/LED 3]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 3]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigotimes$				/LEDs group A
				/LED 3]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 3]
Latched	Defines whether the LED will be latched when it picks	inactive,	inactive	[Device Para
	up.	active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 4]
Ack signal	Acknowledgement signal for the LED. If latching is set	1n, Assignment	-,-	[Device Para
	to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.	List		/LEDs
$\bigcirc$				/LEDs group A
	Only available if: Latched = active			/LED 4]

Parameter	Description	Setting range	Default	Menu path
LED active color	The LED lights up in this color if the state of the OR-assignment of the signals is true.	green, red,	red	[Device Para /LEDs
		red flash, green flash,		/LEDs group A /LED 4]
LED inactive color	The LED lights up in this color if the state of the OR-assignment of the signals is untrue.	green, red,	-	[Device Para /LEDs
		red flash, green flash,		/LEDs group A /LED 4]
Assignment 1	Assignment	1n, Assignment List	-,-	[Device Para /LEDs /LEDs group A
Inverting 1	Inverting of the state of the assigned signal	inactiva	inactive	/LED 4]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para /LEDs
		active		/LEDs group A
				/LED 4]
Assignment 2	Assignment	1n, Assignment List	-,-	[Device Para
$\otimes$				/LEDs group A /LED 4]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A /LED 4]
Assignment 3	Assignment	1n, Assignment List	-,-	[Device Para
				/LEDs group A /LED 4]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A /LED 4]
Assignment 4	Assignment	1n, Assignment List	-,-	[Device Para
$\otimes$				/LEDs group A /LED 4]

Parameter	Description	Setting range	Default	Menu path
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 4]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigcirc$				/LEDs group A
				/LED 4]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 4]
Latched	Defines whether the LED will be latched when it picks	inactive,	inactive	[Device Para
	up.	active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 5]
Ack signal	Acknowledgement signal for the LED. If latching is set	1n, Assignment		[Device Para
	to active the LED can only be acknowledged if those	List		/LEDs
$\bigcirc$	signals that initiated the setting are no longer present.			/LEDs group A
	Only available if: Latched = active			/LED 5]
LED active color	The LED lights up in this color if the state of the OR-	green,	red	[Device Para
	assignment of the signals is true.	red,		/LEDs
$\bigcirc$		red flash,		/LEDs group A
		green flash,		/LED 5]
		-		
LED inactive color	The LED lights up in this color if the state of the OR-	green,	-	[Device Para
	assignment of the signals is untrue.	red,		/LEDs
$\bigcirc$		red flash,		/LEDs group A
		green flash,		/LED 5]
		-		
Assignment 1	Assignment	1n, Assignment		[Device Para
· ·		List		/LEDs
$\bigcirc$				/LEDs group A
				/LED 5]
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 5]

Parameter	Description	Setting range	Default	Menu path
Assignment 2	Assignment	1n, Assignment List	-:-	[Device Para /LEDs /LEDs group A /LED 5]
Inverting 2	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 5]
Assignment 3	Assignment	1n, Assignment List		[Device Para /LEDs /LEDs group A /LED 5]
Inverting 3	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 5]
Assignment 4	Assignment	1n, Assignment List		[Device Para /LEDs /LEDs group A /LED 5]
Inverting 4	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 5]
Assignment 5	Assignment	1n, Assignment List		[Device Para /LEDs /LEDs group A /LED 5]
Inverting 5	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 5]
Latched	Defines whether the LED will be latched when it picks up.	inactive, active	inactive	[Device Para /LEDs /LEDs group A /LED 6]

Parameter	Description	Setting range	Default	Menu path
Ack signal	Acknowledgement signal for the LED. If latching is set to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.  Only available if: Latched = active	1n, Assignment List		[Device Para /LEDs /LEDs group A /LED 6]
LED active color	The LED lights up in this color if the state of the OR-assignment of the signals is true.	green, red,	red	[Device Para
		red flash, green flash,		/LEDs group A /LED 6]
LED inactive color	The LED lights up in this color if the state of the OR-assignment of the signals is untrue.	green, red,	-	[Device Para
		red flash, green flash,		/LEDs group A /LED 6]
Assignment 1	Assignment	1n, Assignment List		[Device Para
				/LEDs group A /LED 6]
Inverting 1	Inverting of the state of the assigned signal.	inactive, active	inactive	[Device Para /LEDs
				/LEDs group A /LED 6]
Assignment 2	Assignment	1n, Assignment List		[Device Para /LEDs
				/LEDs group A /LED 6]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para /LEDs
$\bigotimes$				/LEDs group A /LED 6]
Assignment 3	Assignment	1n, Assignment List		[Device Para /LEDs
				/LEDs group A /LED 6]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para /LEDs
				/LEDs group A /LED 6]

Parameter	Description	Setting range	Default	Menu path
Assignment 4	Assignment	1n, Assignment List		[Device Para /LEDs
				/LEDs group A
				/LED 6]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 6]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigotimes$				/LEDs group A
				/LED 6]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigotimes$				/LEDs group A
				/LED 6]
Latched	Defines whether the LED will be latched when it picks	inactive,	inactive	[Device Para
	up.	active		/LEDs
				/LEDs group A
				/LED 7]
Ack signal	Acknowledgement signal for the LED. If latching is set	1n, Assignment		[Device Para
	to active the LED can only be acknowledged if those signals that initiated the setting are no longer present.	List		/LEDs
				/LEDs group A
	Only available if: Latched = active			/LED 7]
LED active color	The LED lights up in this color if the state of the OR-	green,	red	[Device Para
	assignment of the signals is true.	red,		/LEDs
$\bigotimes$		red flash,		/LEDs group A
		green flash,		/LED 7]
		-		
LED inactive color	The LED lights up in this color if the state of the OR-	green,	-	[Device Para
	assignment of the signals is untrue.	red,		/LEDs
		red flash,		/LEDs group A
•		green flash,		/LED 7]
		-		
Assignment 1	Assignment	1n, Assignment		[Device Para
		List		/LEDs
				/LEDs group A
				/LED 7]

Parameter	Description	Setting range	Default	Menu path
Inverting 1	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 7]
Assignment 2	Assignment	1n, Assignment		[Device Para
		List		/LEDs
				/LEDs group A
				/LED 7]
Inverting 2	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 7]
Assignment 3	Assignment	1n, Assignment	-,-	[Device Para
		List		/LEDs
				/LEDs group A
				/LED 7]
Inverting 3	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
				/LEDs group A
				/LED 7]
Assignment 4	Assignment	1n, Assignment		[Device Para
		List		/LEDs
				/LEDs group A
				/LED 7]
Inverting 4	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 7]
Assignment 5	Assignment	1n, Assignment		[Device Para
		List		/LEDs
$\bigcirc$				/LEDs group A
				/LED 7]
Inverting 5	Inverting of the state of the assigned signal.	inactive,	inactive	[Device Para
		active		/LEDs
$\bigcirc$				/LEDs group A
				/LED 7]

# **LED Module Input States**

Name	Description	Assignment via
LED1.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 1]
LED1.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 1]
LED1.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 1]
LED1.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 1]
LED1.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 1]
Acknow Sig 1	Module input state: Acknowledgement Signal (only for automatic	[Device Para
	acknowledgement)	/LEDs
		/LEDs group A
		/LED 1]
LED2.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 2]
LED2.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 2]
LED2.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 2]

Name	Description	Assignment via
LED2.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 2]
LED2.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 2]
Acknow Sig 2	Module input state: Acknowledgement Signal (only for automatic	[Device Para
	acknowledgement)	/LEDs
		/LEDs group A
		/LED 2]
LED3.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 3]
LED3.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 3]
LED3.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 3]
LED3.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 3]
LED3.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 3]
Acknow Sig 3	Module input state: Acknowledgement Signal (only for automatic	[Device Para
	acknowledgement)	/LEDs
		/LEDs group A
		/LED 3]


Name	Description	Assignment via
LED4.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 4]
LED4.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 4]
LED4.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 4]
LED4.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 4]
LED4.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 4]
Acknow Sig 4	Module input state: Acknowledgement Signal (only for automatic	[Device Para
	acknowledgement)	/LEDs
		/LEDs group A
		/LED 4]
LED5.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]
LED5.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]
LED5.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]

Name	Description	Assignment via
LED5.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]
LED5.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]
Acknow Sig 5	Module input state: Acknowledgement Signal (only for automatic acknowledgement)	[Device Para
		/LEDs
		/LEDs group A
		/LED 5]
LED6.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 6]
LED6.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 6]
LED6.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 6]
LED6.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 6]
LED6.5	Module input state: LED	[Device Para
	Module input state: Acknowledgement Signal (only for automatic acknowledgement)	/LEDs
		/LEDs group A
		/LED 6]
Acknow Sig 6		[Device Para
		/LEDs
		/LEDs group A
		/LED 6]


Name	Description	Assignment via
LED7.1	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]
LED7.2	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]
LED7.3	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]
LED7.4	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]
LED7.5	Module input state: LED	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]
Acknow Sig 7	Module input state: Acknowledgement Signal (only for automatic acknowledgement)	[Device Para
		/LEDs
		/LEDs group A
		/LED 7]

# **Navigation - Operation**

The following illustration applies to protective devices with a small display:

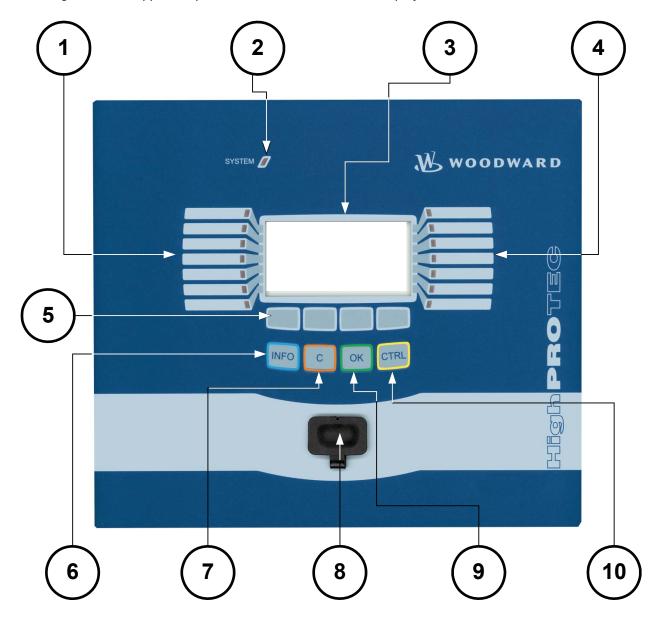

The following illustration applies to protective devices with a large display:

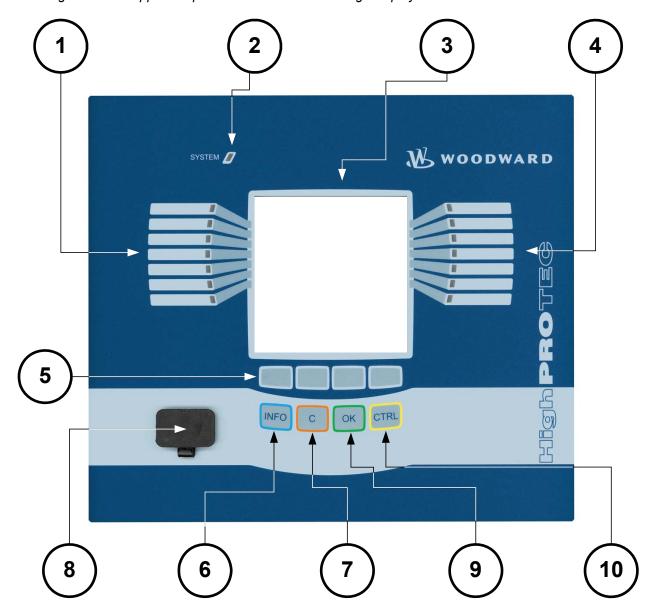

1		LEDs group A (left)	Messages inform you about operational conditions, system data or other device particulars. They additionally provide you with information regarding failures and functioning of the device as well as other states of the device and the equipment.  Alarm signals can be freely allocated to LEDs out of the "assignment list".  An overview about all alarm signals available in the device can be obtained from the "ASSIGNMENT LIST" Which can be found in the appendix.
	SYSTEM	LED »System OK«	Should LED »System OK« flash red during operation, contact the Service Dept. immediately.
3		Display	Via the display you can read-out operational data and edit parameters.
4		LEDs group B (right)	Messages inform you about operational conditions, system data or other device particulars. They additionally provide you with information regarding failures and functioning of the device as well as other states of the device and the equipment.  Alarm signals can be freely allocated to LEDs out of the "assignment list".  An overview about all alarm signals available in the device can be obtained from the "assignment list" which can be found in the appendix.
5		Softkeys	The function of the  »SOFTKEYS« are contextual. On the bottom line of the display the present function is displayed/symbolized.  Possible functions are:

			<ul> <li>Navigation</li> <li>Parameter decrement/increment.</li> <li>Scrolling up/down a menu page</li> <li>Moving to a digit</li> <li>Change into the parameter setting mode »wrench symbol«.</li> </ul>
6	INFO	INFO Key (Signals/Messa ges)	Looking through the present LED assignment. The direct select key can be actuated at any time.  If the INFO key is actuated once, the »LEFT LED SIGNALS« are inserted, if the INFO key is actuated again, the »RIGHT LED SIGNALS« are inserted. If the INFO key is actuated again, you will leave the LED menu.  Here only the first assignments of the LEDs will be shown. Every three seconds the »SOFTKEYs« will be shown (flashing).  Displaying the multiple Assignments  If the INFO-Button is pressed only the first assignments of any LED is shown. Every three seconds the »SOFTKEYs« will be shown (flashing).  If there is more than one signal assigned to a LED (indicated by three dots) you can check the state of the multiple assignments if you proceed as follows.  In order to show all (multiple) assignments select a LED by means of the »SOFTKEYs« »up« and »down«  Via the »Softkey« »right« call up a Submenu of this LED that gives you detailed information on the state of all signals

			assigned to this LED. An arrow symbol points to the LED whose assignments are currently displayed.
			Via the »SOFTKEYs« »up« and »down« you can call up the next / previous LED.
			In order to leave the LED menu press the »SOFTKEY« »left« multiple times.
7	С	»C Key«	To abort changes and to acknowledge messages.
			In order to reset please press the Softkey »wrench« and enter the password.
			The reset menu can be left by pressing the Softkey »Arrow-left«
8		RS232 Interface (Smart view Connection)	Connection to software <i>Smart</i> view is done via the RS232 interface.
9	OK	»OK Key«	When using the »OK« key parameter changes are temporarily stored. If the »OK« key is pressed again, those changes are stored definitely.
10	CTRL	»CTRL Key«*	Direct Access to the Control Menu.

<sup>\*=</sup>Not for all devices available.

## **Basic Menu Control**

The graphic user interface is equivalent to a hierarchical structured menu tree. For access to the individual submenus the »SOFTKEYS«/Navigation Keys are used. The function of the »SOFTKEYS« can be found as symbol in the footer of the display.

by scrolling
er down by
e -> fast).
e -> fast)
ode.
de. Password
000

In order to return to the main menu, just keep pressing the Softkey »Arrow-Left« until you arrive at the »main menu».

# **Smart view Keyboard Commands**

You can control *Smart view* alternatively by means of keyboard commands (instead of the mouse)

Key	Description
<b>↑</b>	Moving up within the navigation tree or parameter list.
Ψ	Moving down within the navigation tree or parameter list.
<b>←</b>	Collapse the tree item or select a folder on a higher level.
<b>→</b>	Expands the tree item or selects a subfolder.
Numpad +	Expands the tree item.
Numpad -	Collapses the tree item.
Home	Moves to the top of the active window.
End	Moves to the bottom of the active window.
Ctrl+O	Opens the file opening dialog. Browsing through the file system for an existing device file.
Ctrl+N	Creates a new parameter file file by means of a template.
Ctrl+S	Saves actual loaded parameter file.
F1	Displays the online help information.
F2	Load Device Data
F5	Reloads the displayed data of a device.
Ctrl+F5	Enables automatic refresh.
Ctrl+Shift+T	Back to the navigation window.
Ctrl+F6	Walks through the tabular forms (detail windows).
Page ↑	Previous value (parameter setting).
Page <b>↓</b>	Next value (parameter setting).

## **Smart view**

Smart view is a parameter setting and evaluation software.

- Menu-controlled parameter setting incl. validity checks
- Offline configuration of all relay types
- Reading and evaluating of statistical data and measuring values
- Setting into operation assistance
- Display of the device status
- Fault analysis via event- and fault recorder



Smart view 3.0 or higher supports reading parameter files generated by older versions of Smart view. Parameter files generated by Smart view 3.0 and higher cannot be read by older versions of Smart view.

#### Installation of Smart view



Port 52152 must not be blocked by a Firewall



If the Windows Vista User Access Control pops up while installing Smart view, please "Allow" all installation requirements concerning Smart view.

#### System requirements:

Windows XP, Windows Vista or Windows 7

- Double-click on the installation file with the left mouse button.
- Select a language for the installation procedure.
- Confirm by pressing the »Continue« button in the INFO frame.
- Select an installation path or confirm the standard installation path by mouse click on the »Continue« button.
- Confirm the entry for the suggested installation folder by mouse click on the »Continue« button.
- By mouse click on the »Install« button, the installation routine is started.
- Close the installation procedure by mouse click on the »Complete« button.

Now you can call up the program via [Start>Programs>Woodward>HighPROTEC>Smart view].

## **Uninstalling Smart view**

Via the menu [Start>System Control >Software] the Smart view can be removed from your computer.

## Switching the Language of the Graphical User Interface

Within the menu Settings/Language, you can change the language of the graphical user interface.

## **Setting up the Connection PC - Device**

## Set-up a Connection via Ethernet - TCP/IP



Establishing a connection via TCP/IP to the device is only possible if your device is equipped with an Ethernet Interface (RJ45).

Contact your IT administrator in order to establish the network connection.

#### Part 1: Set the TCP/IP Parameters at the panel (Device)

Call up the menu »Device parameter/TCP/IP« at the HMI (panel) and set the following parameters:

- TCP/IP address
- Subnetmask
- Gateway

#### Part 2: Setting the IP address within Smart view

- Call up the menu Settings/Device Connection within Smart view.
- Set radio button Network Connection.
- Enter the IP-Address of the device that should be connected.

### Set up a Connection via Serial Interface under Windows XP

After installation of the software, the »Connection PC/Notebook to the Device« has to be configured once so that you are able to read device data or re-write them into the device by means of the software *Smart view*.

## NOTICE

For connection of your PCs/notebooks with the device, you need a zero-modem cable (no serial cable!/please refer to chapter »Zero Modem Cable«).

## NOTICE

If your PC/notebook does not have a serial interface, you need a special »USB-to-serial-adapter«. Only if the »USB-to-serial-adapter« is correctly installed - aided by the provided CD – the communication with the device can be established. (see next chapter).

# NOTICE

The connection Notebook/PC to the device must not be protected/encrypted via a smartcard.

If the network connection wizard asks you, to encrypt the connection via a smartcard or not, please choose »Do not use the smartcard«.

#### Setting up/Configuring the connection

- Connect your PC/notebook with the device via a zero-modem cable.
- Start the software Smart view.
- Select the menu point »Device Connection« in menu »Settings«.
- Click on »Serial Connection«.
- Click button »Settings«.
- When initially setting up the connection, a dialogue window appears with the information that, so far, a direct connection with your protection device has not been established. Click on »Yes«.
- If, so far, a location has not been set up on your PC, your location information has to be put in. Confirm the following pop-up window »Telephone and Modem Options« with »OK«.
- The Windows network connection assistant appears after the location information is set up. Select the connection type »Establish direct connection to another computer«.
- Select the serial interface (COM-Port) where the device shall be connected to.
- Select »To be used for all users« in window »Availability of the connection«.
- Do not change the connection name appearing in window »Name of the connection« and click the button »Complete«.
- Finally you arrive again in window »Device Installation« from where you started establishing the connection. Confirm the adjustments by clicking the »OK« button.

### Set up a Connection via Serial Interface under Windows Vista or Windows 7

Establishing the connection between Smart view and the device is a three step procedure.

- 1. Installing Smart view (the application itself)
- 2. Installing a (virtual) modem (that is a precondition for TCP/IP communication via a zero-modem cable)/ ((to be done within the Windows Phone and Modem dialog).
- 3. Establishing a network connection between *Smart view* and the device (to be done within Smart view).
- 1. Installation of Smart view (the application itself). Please see above.

#### 2. Installation of the (virtual) modem

- Open the Windows Start menu and type "Phone and Modem" and RETURN. This opens the "Phone and Modem" Dialog
- Go to Tab »Modem«
- Click on the »Add« button
- The Hardware Wizard window Install New Modem pops up
- Set the check box Don't detect my modem; I will select it from a list
- Click on the »Next« button
- Select Communications cable between two computers
- Click on the »Next« button
- Choose the correct COM-Port
- Click on the »Next« button
- Click on the »Finish« button
- Select the new added modem and click on the »Properties« button
- Go to Tab »General«
- Click on the »Change settings« button

- Go to Tab »Modem«
- Set within the Drop-Down Menu the correct baud rate = 115200
- Close this dialog with the »OK« button
- Close the Phone and Modem dialog with the »OK« button
- You have to reboot your computer now!
- 3. Establishing a network connection between Smart view and the device
- Connect the device to the PC/notebook via a **correct Zero-Modem-Cable**.
- Run Smart view.
- Call up »Device Connection« within the menu »Settings«.
- Click on the »Settings« button.
- A connection wizard will pop up asking you **How do you want to connect**.
- Choose »Dial-up«.
- The Telephone number must not be empty. Please enter any number (e.g. 1).
- Please ensure, that the checkbox "Allow other people to use this connection" is **not** set (deactivated).
- Don't care about the username and password.
- Click on the »OK« button.

## Connected to the Device and Calling up Websites at the same Time

In principle, it is possible to call up websites while there is an active connection to the device.

If your computer has no direct connection to the internet, that means, that it is placed behind a proxy server, the device connection has to be modified in certain circumstances. The device connection has to be provided with the proxy settings.

#### Internet Explorer

For each connection the proxy settings have to be set manually. Please proceed as follows:

- Start your Internet Explorer.
- Call up the »Tools« menu.
- Call up the menu »Internet options«.
- Call up the tab »Connections«.
- Click with the left hand mouse key on the button »Settings« on the right of the »HighPROTEC-Device-Connection«.
- Set the check box »Use Proxy Server for this connection.
- Enter the proxy settings that are available by your network administrator.
- Confirm the settings by pressing »OK«.

#### Firefox

The proxy settings are centrally managed, so there is no need to modify any settings.

## Establishing the Connection via a USB-/RS232-Adapter

If your PC/notebook is not provided with a serial interface, this can be compensated by a special *USB-/RS232-Adapter+Zero Modem-Cable*.



Only an adapter accepted by *Woodward Kempen GmbH* may be used. First install the adapter (with the related driver that you can find on the CD) and then establish the connection (*Smart view => Device*). The adapters must support very high speed.

### Set-up a Connection via Ethernet - TCP/IP



Warning: Mixing up IP-Addresses (In case that there is more than one protective device within the TCP/IP network). Establishing an unintentional wrong connection to a protective device based on a wrong entered IP-Address. Transferring parameters into a wrong protective device might lead to death, personal injury or damage of electrical equipment.

In order to prevent faulty connections the user has to document and maintain a list with the IP addresses of any switchboard/protective device.

The user has to doublecheck the IP addresses of the connection that is to be established. That means, the user must first read out the IP address at the HMI of the device (within menu [Device para/TCP IP] then compare the IP address with the list. If the addresses are identical, establish the connection. If not, DO not connect.



Establishing a connection via TCP/IP to the device is only possible if your device is equipped with an Ethernet Interface (RJ45).

Contact your IT administrator in order to establish the network connection.

Part 1: Set the TCP/IP Parameters at the panel (Device)

Call up the menu »Device parameter/TCP/IP« at the HMI (panel) and set the following parameters:

- •TCP/IP address
- Subnet mask
- Gateway

Part 2: Setting the IP address within Smart view

- Call up the menu Settings/Device Connection within Smart view.
- Set radio button Network Connection.
- Enter the IP-Address of the device that should be connected.

## **Smart view Troubleshooting during Setting up the Connection**

- Make sure whether the Windows service *Telephony* is started. In [Start>System Control >Administration >Services] the service »Telephony« must be visible and must have also been started. If not, the service has to be started.
- For establishing the connection, you need to have sufficient rights (administration rights).
- If a firewall is installed on your computer, TCP/IP port 52152 must have been released.
- If your computer is not provided with a serial interface, you need a *USB-to-serial-adapter*, accepted by *Woodward Kempen GmbH*. This adapter has to be properly installed.
- Ensure that a zero-modem cable is used (a standard serial cable without control wires does not enable communication).

# NOTICE

If the message »Warning, invalid connection settings« appears during establishing the connection, this indicates that the connection adjustments you have chosen are not correct.

On this warning you can react as follows:

»Yes«: (to set up the connection completely new). By this, all adjustments are cancelled and the connection assistant is opened again for renewed adjustment of the connection to the device.

This procedure is advisable in case basic adjustments cannot be modified via the characteristics dialogue (e.g. if a new additional serial interface has been installed on the system).

»No«: (to modify the existing dial-up network entry).

Opens the dialogue for characteristics of the connection settings. During the dialogue it is possible to correct invalid settings (e.g. the recommended

»Cancel«:

baud rate).

The warning is ignored and the connection adjustments remain as they are. This procedure is accepted for a limited time, but in such a case, the user is obliged to establish a correct connection later on.

## Smart view persistent connection problems

In case of persistent connection problems you should remove all connection settings and establish them again afterwards. In order to remove all connection settings please proceed as follows:

- Close Smart view
- Call up the »Control Panel«
- Choose »Network & Internet«
- On the left side click on »Manage Network Connections«

- Click on HighPROTEC Direct Connection with the right hand mouse key
- Choose Delete from the shortcut menu
- Click on the OK button

#### 2. Remove the virtual modem

- Call up the »Control Panel«
- Choose »Hardware & Sound«
- Choose »Phone & Modem Options«
- Go to Tab Modem
- Click on the correct (in case there is more than one) entry Connection cable between two computers
- Click on the Remove button

## Loading of Device Data when using Smart view

- Starting of the *Smart view*.
- Make sure the connection has been established properly.
- Connect your PC with the device via a zero-modem cable.
- Select »Receiving Data From The Device« in menu »Device«.

## Restoring of Device Data when using Smart view



Via the button »Transfer only modified parameters into the device« only modified parameters are transmitted into the device.

Parameter modifications are indicated by a red "star symbol" in front of the parameter.

The star symbol (in the device tree window) indicates that parameters in the opened file (within smart view) differ from parameters stored on your local hard disk.

Via the button »Transfer only modified parameters into the device«, you can transmit all parameters that are marked by this symbol.

If a parameter file is saved on your local hard drive, these parameters are no longer classified to be modified and cannot be transmitted via the button »Transfer only modified parameters into the device«.

In case that you have loaded and modified a parameter file from the device and saved it to your local hard drive without transferring the parameters into the device beforehand, you cannot use the button »Transfer only modified parameters into the device«. In a case like that, use »Transfer all parameters into the device«.

## NOTICE

The button »Transfer only modified parameters into the device« only works if modified parameters are available in the *Smart view*.

In contrast to that, all parameters of the device are transferred when the button »Transfer all parameters into the device« is pressed (provided all device parameters are valid).

- In order to (re-)transfer changed parameters into the device, please select »Transfer all parameters into the device« in menu »Device«.
- Confirm the safety inquiry »Shall the parameters be overwritten into the device?"«.
- Enter the password for setting parameters in the popup window.
- Thereafter the changed data is transferred to the device and adopted.
- Confirm the inquiry »Parameters successfully updated. It is recommended to save the parameters into a local file on your hard drive. Shall The Data Be Saved Locally?"« with »Yes« (recommended). Select a suitable folder on your hard disk.
- Confirm the chosen folder by clicking »Save«.
- The changed parameter data is now saved in the folder chosen by you.

## **Backup and Documentation when using Smart view**

How to save device data on a PC:

Click on »Save as ...« in menu »File«. Specify a name, choose a folder on your hard disk and save the device data accordingly.

### Printing of Device Data When using Smart view (Setting List)

The »Printing menu« offers the following options:

- Printer setting
- Page preview
- Printing
- Export the selected printing range into a txt-file.

The printing menu of the Smart view software offers contextual different types of printing ranges.

- Printing of the complete parameter tree:
   All values and parameters of the present parameter file are printed.
- Printing of the displayed working window:
  Only the data shown on the relevant working window are printed, i.e. this applies, if at least one window is opened.
- Printing of all opened working windows:
  - The data shown on all windows are printed, i.e. this applies only if more than one window is opened.
- Printing of the device parameter tree as from a shown position on:

  All data and parameters of the device parameter tree are printed as from the position/marking in the navigation window. Below this selection the complete name of the marking is additionally displayed.

#### Saving Data as a txt-file via Smart view

Within the print menu [File>Print] you can choose »Export into File« in order to export the device data into a text-file.



Only the actual selected printing range will be exported into a text-file. That means: If you have chosen the "Complete device parameter tree" then the "Complete device parameter tree" will be exported. But, if you have chosen "Actual working window", only this window will be exported.

You can print out operating data but not export them.



If you export a txt-file, the content of this file is encoded as Unicode. That means that, if you want to edit this file, your application must support Unicode encoded files (e.g. Microsoft Office 2003 or higher).

## Offline Device Planning via Smart view



In order to be able to transmit a parameter file (e.g. offline created) into the device the following issues must comply:

- Type Code (written on the top of the device/type label) and
- Version of the device model (can be found in menu [Device Parameters\Version].

The *Smart view* software enables also to parameterize offline. The advantage is: By using device models you can do planning jobs for a device and set parameters in advance.

You can also read the parameter file out of the device, further process it offline (e.g. from your office) and finally retransfer it to the device.

#### You can either:

- load an existing parameter file from a device (please refer to chapter [Loading device data when using Smart view]).
- create a new parameter file (see below),
- open a locally saved parameter file (backup).

In order to create a new device/parameter file by way of a device template offline:

- In order to create a new offline parameter file please choose within the »file-menu« »create new parameter file«.
- A working window pops up. Please make sure, that you select the right device type with the correct version and configuration.
- Finally click on »Apply«
- In order to save the device configuration select »Save« out of the »File-Menu«.
- Within the menu »Modify Device Configuration (Typecode)« you can modify the device configuration or simply find out the type code of your current selection.

If you want to transfer the parameter file into a device, please refer to chapter "Restoring of device data when using Smart view".

# **Measuring Values**

### **Read out Measured Values**

In menu »Operation/Measured Values« both measured and calculated values can be viewed. The measured values are ordered by »Standard values« and »special values« (depending on the type of device).

#### Read out of Measured Values via Smart view

- In case *Smart view* is not running please start it.
- If the device data were not yet loaded select »Receive Data From The Device« from menu »Device«.
- Double click on icon »Operation« in the navigation tree.
- Double click on icon »Measured Values« within the navigation tree »Operation«.
- Double click the »Standard Values« or special values within the »Measured values«.
- The measured and calculated values are shown now in tabular form on the window.



To have the measuring data read in a cyclic manner, select »Auto refresh« in menu »View«. The measured values are read out about every two seconds.

#### **Measurement Display**

Menu [Device Para\Measurem Display] offers options to change the display of measured values within the HMI and Smart view.

Scaling of Measured values

By means of the parameter »Scaling« the user can determine how measured values are to be displayed within the HMI and *Smart view*.

- Primary quantities
- Secondary quantities
- Per Unit quantities

Power Units (applies only for devices with power measurement)

By means of the parameter *»Power Units«* the User can determine how measured values are to be displayed within the HMI and *Smart view*.

- Power Auto Scaling
- kW, kVAr or kVA
- MW, MVAr or MVA
- GW, GVAr or GVA

Energy Units (applies only for devices with energy measurement)

By means of the parameter » *Energy Units«* the User can determine how measured values are to be displayed within the HMI and *Smart view*.

- Energy Auto Scaling
- kWh, kVArh or kVAh
- MWh, MVArh or MVAh
- GWh, GVArh or GVAh

Temperature Unit (applies only for devices with temperature measurement)

By means of the parameter » *Temperatur Unit«* the User can determine how measured values are to be displayed within the HMI and *Smart view*.

- Celsius
- ° Fahrenheit

#### Cutoff level

In order to suppress noise within measured values that are close to zero the user has the option to set cutoff levels. By means of the cutoff levels, measuring quantities that are close to zero will be displayed as zero. These parameters have no impact on recorded values.

# **Phase Differential Current - Measured Values**

<u>ld</u>

Value	Description	Menu path
IS L1	Measured value (calculated): Restraint Current Phase L1	[Operation
		/Measured values
		/ld]
IS L2	Measured value (calculated): Restraint Current Phase L2	[Operation
		/Measured values
		/ld]
IS L3	Measured value (calculated): Restraint Current Phase L3	[Operation
		/Measured values
		/ld]
ld L1	Measured value (calculated): Differential Current Phase L1	[Operation
		/Measured values
		/ld]
ld L2	Measured value (calculated): Differential Current Phase L2	[Operation
		/Measured values
		/ld]
ld L3	Measured value (calculated): Differential Current Phase L3	[Operation
		/Measured values
		/ld]

# **Earth Differential Current - Measured Values**

## <u>ldG</u>

Value	Description	Menu path
ISG W1	Measured value (calculated): Ground Stabilizing Current Winding 1	[Operation
		/Measured values
		/ldG W1]
ldg W1	Measured value (calculated): Ground Differential Current Winding 1	[Operation
		/Measured values
		/ldG W1]
ISG W2	Measured value (calculated): Ground Stabilizing Current Winding 2	[Operation
		/Measured values
		/ldG W2]
ldg W2	Measured value (calculated): Ground Differential Current Winding 2	[Operation
		/Measured values
		/ldG W2]

#### **Current - Measured Values**

Verfügbare Elemente: [StW Sternp, StW Netz]

#### CT W1,CT W2

If the device is not equipped with an voltage measuring card the first measuring input on the first current measuring card (slot with the lowest number) will be used as the reference angle (» IL 1«).

Value	Description	Menu path
IL1	Measured value: Phase current (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
IL2	Measured value: Phase current (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
IL3	Measured value: Phase current (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
IG meas	Measured value (measured): IG (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
IG calc	Measured value (calculated): IG (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
10	Measured value (calculated): Zero current (fundamental)	[Operation
		/Measured values
		/CT W1
		/Current ]
I1	Measured value (calculated): Positive phase sequence current	[Operation
	(fundamental)	/Measured values
		/CT W1
		/Current ]

Value	Description	Menu path
12	Measured value (calculated): Unbalanced load current	[Operation
	(fundamental)	/Measured values
		/CT W1
		/Current ]
IL1 H2	Measured value: 2nd harmonic/1st harmonic of IL1	[Operation
		/Measured values
		/CT W1
		/Current ]
IL2 H2	Measured value: 2nd harmonic/1st harmonic of IL2	[Operation
		/Measured values
		/CT W1
		/Current ]
IL3 H2	Measured value: 2nd harmonic/1st harmonic of IL3	[Operation
		/Measured values
		/CT W1
		/Current ]
IG H2 meas	Measured value: 2nd harmonic/1st harmonic of IG (measured)	[Operation
		/Measured values
		/CT W1
		/Current ]
IG H2 calc	Measured value (calculated): 2nd harmonic/1st harmonic of IG	[Operation
	(calculated)	/Measured values
		/CT W1
		/Current ]
phi IL1	Measured value (calculated): Angle of Phasor IL1	[Operation
		/Measured values
		/CT W1
		/Current ]
phi IL2	Measured value (calculated): Angle of Phasor IL2	[Operation
		/Measured values
		/CT W1
		/Current ]
phi IL3	Measured value (calculated): Angle of Phasor IL3	[Operation
		/Measured values
		/CT W1
		/Current ]

DOK-HB-MRDT4E

Value	Description	Menu path
phi IG meas	Measured value (calculated): Angle of Phasor IG meas	[Operation
		/Measured values
		/CT W1
		/Current ]
phi IG calc	Measured value (calculated): Angle of Phasor IG calc	[Operation
		/Measured values
		/CT W1
		/Current ]
phi I0	Measured value (calculated): Angle Zero Sequence System	[Operation
		/Measured values
		/CT W1
		/Current ]
phi I1	Measured value (calculated): Angle of Positive Sequence System	[Operation
		/Measured values
		/CT W1
		/Current ]
phi I2	Measured Value (calculated): Angle of Negative Sequence System	[Operation
		/Measured values
		/CT W1
		/Current ]
IL1 RMS	Measured value: Phase current (RMS)	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IL2 RMS	Measured value: Phase current (RMS)	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IL3 RMS	Measured value: Phase current (RMS)	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IG meas RMS	Measured value (measured): IG (RMS)	[Operation
		/Measured values
		/CT W1
		/Current RMS]

Value	Description	Menu path
IG calc RMS	Measured value (calculated): IG (RMS)	[Operation
		/Measured values
		/CT W1
		/Current RMS]
%IL1 THD	Measured value (calculated): IL1 Total Harmonic Distortion	[Operation
		/Measured values
		/CT W1
		/Current RMS]
%IL2 THD	Measured value (calculated): IL2 Total Harmonic Distortion	[Operation
		/Measured values
		/CT W1
		/Current RMS]
%IL3 THD	Measured value (calculated): IL3 Total Harmonic Distortion	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IL1 THD	Measured value (calculated): IL1 Total Harmonic Current	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IL2 THD	Measured value (calculated): IL2 Total Harmonic Current	[Operation
		/Measured values
		/CT W1
		/Current RMS]
IL3 THD	Measured value (calculated): IL3 Total Harmonic Current	[Operation
		/Measured values
		/CT W1
		/Current RMS]
%(I2/I1)	Measured value (calculated): I2/I1, phase sequence will be taken	[Operation
	into account automatically.	/Measured values
		/CT W1
		/Current ]

## **Statistics**

#### **Statistics**

In menu *»Operation/Statistics«* the min., max. and mean values of the measured and calculated measured quantities can be found.

# **Configuration of the Minimum and Maximum Values**

The calculation of the minimum and maximum values will be started:

- When a Reset signal becomes active (Min-/Max)
- When the device is restarted
- After configuration

	Minimum and Maximum Values (Peak Values/Pointers)		
	Time interval for the calculation of the minimum and maximum values	Reset	
Configuration Options  Where to configure?  Within menu [Device Para\ Statistics\ Min/Max]	The minimum and maximum values will be resetted with the rising edge of the corresponding reset signal.	Res Min  Res Max  (e.g. via digital Inputs). These signals will reset the minimum and maximum pointers.	
Display of Minimum Values	Where? Within menu [Operation\Statistics\Min]		
Display of Maximum Values	Where? Within menu [Operation\Statistics\Max]		

# **Configuration of the Average Value Calculation**

## Configuration of the Current Based Average Value Calculation\*

\*=Availability depends on the ordered device code.

	Current based Average Values and Peak Values			
	Time period for the calculation of the average and peak values	Start options	Reset of the average and peak values	
Configuration Options  Where to configure? In [Device Para\ Statistics\ Demand\ Current Demand]	sliding: (sliding: average calculation based on sliding period)  fixed: (fixed: Average calculation is resetted by the end of the period, that means with the next starting period)	duration: (fixed or sliding period)  Start Fct: (The average values are calculated based on the time period between two rising edges ot this signal)	Res Fc  (e.g. via Digital Input in order to reset the average values in advance (before the next rising edge of the start signal). This applies to option "Start FC" only.	
Trip (command) option to limit the average current demand: Yes	Please refert to chapter "System Alarms"			
View average values and peak values	where? Within menu [Operation\Statistics\Demand]		ics\Demand]	

### Configuration of the Voltage Based Average Value Calculation\*

<sup>\*=</sup>Availability depends on the ordered device code.

	Voltage based Average Values			
	Time period for the calculation of the average values	Start options	Reset of the average and peak values	
Configuration Options  Where to configure?  In [Device Para\ Statistics\ Umit]	sliding: (sliding: average calculation based on sliding period)  fixed: (fixed: Average calculation is resetted by the end of the period, that means with the next starting period)	duration: (fixed or sliding period)  Start Fct: (The average values are calculated based on the time period between two rising edges ot this signal)	Res Fc  (e.g. via Digital Input in order to reset the average values in advance (before the next rising edge of the start signal). This applies to option "Start FC" only.	
View average values	Where? W	/ithin menu [Operation\Statis	stics\Vavg]	

# Configuration of the Power Based Average Value Calculation\*

<sup>\*=</sup>Availability depends on the ordered device code.

	Power based Average Values (Demand) and Peak Values		
	Time period for the calculation of the average and peak values	Start options	Reset of the average and peak values
Configuration Options  Where to configure?  In [Device Para\ Statistics\ Bezugsmanagm\ Power Demand]	sliding: (sliding: average calculation based on sliding period)  fixed: (fixed: Average calculation is resetted by the end of the period, that means with the next starting period)	duration: (fixed or sliding period)  Start Fct: (The average values are calculated based on the time period between two rising edges ot this signal)	Res Fc  (e.g. via Digital Input in order to reset the average values in advance (before the next rising edge of the start signal). This applies to option "Start FC" only.
Trip (command) option to limit the average power demand: Yes	Please	e refert to chapter "System A	Alarms"
View average values and peak values	Where? Within menu [Operation\Statistics\Demand]		

### **Direct Commands**

Parameter	Description	Setting range	Default	Menu path
ResFc all	Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)	inactive,	inactive	[Operation /Reset]
ResFc I Demand	Resetting of Statistics - Current Demand (avg, peak	inactive,	inactive	[Operation
	avg)	active		/Reset]
ResFc Min	Resetting of all Minimum values	inactive,	inactive	[Operation
		active		/Reset]
ResFc Max	Resetting of all Maximum values	inactive,	inactive	[Operation
		active		/Reset]

# **Global Protection Parameters of the Statistics Module**

Parameter	Description	Setting range	Default	Menu path
ResFc Max	Resetting of all Maximum values	1n, Assignment List		[Device Para /Statistics /Min / Max]
ResFc Min	Resetting of all Minimum values	1n, Assignment List	**	[Device Para /Statistics /Min / Max]
Start I Demand via:	Start Current demand by:	Duration, StartFct	Duration	[Device Para /Statistics /Demand /Current Demand]
Start I Demand Fc	Start of the calculation, if the assigned signal becomes true.  Only available if: Start I Demand via: = StartFct	1n, Assignment List		[Device Para /Statistics /Demand /Current Demand]
ResFc I Demand	Resetting of Statistics - Current Demand (avg, peak avg)	1n, Assignment List	-;-	[Device Para /Statistics /Demand /Current Demand]

Parameter	Description	Setting range	Default	Menu path
Duration I Demand	Recording time	2 s,	15 s	[Device Para
	Only available if: Start I Demand via: = Duration	5 s,		/Statistics
$\bigcirc$		10 s,		/Demand
		15 s,		/Current Demand]
		30 s,		
		1 min,		
		5 min,		
		10 min,		
		15 min,		
		30 min,		
		1 h,		
		2 h,		
		6 h,		
		12 h,		
		1 d,		
		2 d,		
		5 d,		
		7 d,		
		10 d,		
		30 d		
Window I Demand	Window configuration	sliding,	sliding	[Device Para
		fixed		/Statistics
$\bigotimes$				/Demand
				/Current Demand]

# States of the Inputs of the Statistics Module

Name	Description	Assignment via
StartFc I Demand-I	State of the module input: Start of the Statistics of the Current	[Device Para
	Demand	/Statistics
		/Demand
		/Current Demand]
ResFc Vavg-I	State of the module input: Resetting of the sliding average calculation.	D
ResFc I Demand-I	State of the module input: Resetting of Statistics - Current Demand (avg, peak avg)	[Device Para
		/Statistics
		/Demand
		/Current Demand]
ResFc P Demand-I	State of the module input: Resetting of Statistics - Power Demand (avg, peak avg)	D
ResFc Max-I	State of the module input: Resetting of all Maximum values	[Device Para
		/Statistics
		/Min / Max]
ResFc Min-I	State of the module input: Resetting of all Minimum values	[Device Para
		/Statistics
		/Min / Max]

# Signals of the Statistics Module

Signal	Description
ResFc all	Signal: Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)
ResFc I Demand	Signal: Resetting of Statistics - Current Demand (avg, peak avg)
ResFc Max	Signal: Resetting of all Maximum values
ResFc Min	Signal: Resetting of all Minimum values

# **Counters of the Module Statistics**

Value	Description	Menu path
Res Cr I Demand	Number of resets since last booting. The timestamp shows date and time of the last reset.	[Operation
		/Statistics
		/Demand
		/CT W2]
Res Cr Min values	Number of resets since last booting. The timestamp shows date and time of the last reset.	[Operation
		/Statistics
		/Min
		/CT W2]
Res Cr Max values	Number of resets since last booting. The timestamp shows date	[Operation
and time of the last reset.	and time of the last reset.	/Statistics
		/Max
		/URTD]

## **Phase Differential Current - Statistic Values**

Value	Description	Menu path
IS L1 max	Measured value (calculated): Restraint Current Phase L1 Maximum	[Operation
	Value	/Statistics
		/Max
		/ld]
IS L2 max	Measured value (calculated): Restraint Current Phase L2 Maximum	[Operation
	Value	/Statistics
		/Max
		/ld]
IS L3 max	Measured value (calculated): Restraint Current Phase L3 Maximum	[Operation
	Value	/Statistics
		/Max
		/ld]
ld L1 max	Maximum Value	[Operation
		/Statistics
		/Max
		/ld]
Id L2 max	Measured value (calculated): Differential Current Phase L2 Maximum Value	[Operation
		/Statistics
		/Max
		/ld]
ld L3 max	Measured value (calculated): Differential Current Phase L3 Maximum Value	[Operation
		/Statistics
		/Max
		/ld]

## **Earth Differential Current - Statistic Values**

Value	Description	Menu path
ISG W1 max	Measured value (calculated): Ground Stabilizing Current Winding 1	[Operation
	Maximum Value	/Statistics
		/Max
		/ldG W1]
ldg W1 max	Measured value (calculated): Ground Differential Current Winding 1	[Operation
	Maximum Value	/Statistics
		/Max
		/ldG W1]
ISG W2 max	Measured value (calculated): Ground Stabilizing Current Winding 2 Maximum Value	[Operation
		/Statistics
		/Max
		/ldG W2]
ldg W2 max	Measured value (calculated): Ground Differential Current Winding 2	[Operation
	Maximum Value	/Statistics
		/Max
		/ldG W2]

### **Current - Statistic Values**

Value	Description	Menu path
I1 max	Maximum value positive phase sequence current (fundamental)	[Operation
		/Statistics
		/Max
		/CT W1]
I1 min	Minimum value positive phase sequence current (fundamental)	[Operation
		/Statistics
		/Min
		/CT W1]
I2 max	Maximum value unbalanced load (fundamental)	[Operation
		/Statistics
		/Max
		/CT W1]
I2 min	Minimum value unbalanced load current (fundamental)	[Operation
		/Statistics
		/Min
		/CT W1]
IL1 H2 max	Maximum ratio of 2nd harmonic over fundamental of IL1	[Operation
		/Statistics
		/Max
		/CT W1]
IL1 H2 min	Minimum ratio of 2nd harmonic over fundamental of IL1	[Operation
		/Statistics
		/Min
		/CT W1]
IL2 H2 max	Maximum ratio of 2nd harmonic over fundamental of IL2	[Operation
		/Statistics
		/Max
		/CT W1]
IL2 H2 min	Minimum ratio of 2nd harmonic over fundamental of IL2	[Operation
		/Statistics
		/Min
		/CT W1]
IL3 H2 max	Maximum ratio of 2nd harmonic over fundamental of IL3	[Operation
		/Statistics
		/Max
		/CT W1]

Value	Description	Menu path
IL3 H2 min	Minimum ratio of 2nd harmonic/1st harmonic minimum value of IL3	Operation
		/Statistics
		/Min
		/CT W1]
IG H2 meas max	Measured value: Maximum ratio of 2nd harmonic over fundamental	[Operation
	of IG (measured)	/Statistics
		/Max
		/CT W1]
IG H2 meas min	Measured value: Minimum ratio of 2nd harmonic over fundamental	[Operation
	of IG (measured)	/Statistics
		/Min
		/CT W1]
IG H2 calc max	Measured value (calculated): Maximum ratio of 2nd harmonic over	[Operation
	fundamental of IG (calculated)	/Statistics
		/Max
		/CT W1]
IG H2 calc min	IG H2 calc min	[Operation
		/Statistics
		/Min
		/CT W1]
IL1 max RMS	IL1 maximum value (RMS)	[Operation
		/Statistics
		/Max
		/CT W1]
IL1 avg RMS	IL1 average value (RMS)	[Operation
		/Statistics
		/Demand
		/CT W1]
IL1 min RMS	IL1 minimum value (RMS)	[Operation
		/Statistics
		/Min
		/CT W1]
IL2 max RMS	IL2 maximum value (RMS)	[Operation
		/Statistics
		/Max
		/CT W1]

Value	Description	Menu path
IL2 avg RMS	IL2 average value (RMS)	[Operation
		/Statistics
		/Demand
		/CT W1]
IL2 min RMS	IL2 minimum value (RMS)	[Operation
		/Statistics
		/Min
		/CT W1]
IL3 max RMS	IL3 maximum value (RMS)	[Operation
		/Statistics
		/Max
		/CT W1]
IL3 avg RMS	IL3 average value (RMS)	[Operation
		/Statistics
		/Demand
		/CT W1]
IL3 min RMS	IL3 minimum value (RMS)	[Operation
		/Statistics
		/Min
		/CT W1]
IG meas max RMS	Measured value: IG maximum value (RMS)	[Operation
		/Statistics
		/Max
		/CT W1]
IG meas min RMS	Measured value: IG minimum value (RMS)	[Operation
		/Statistics
		/Min
		/CT W1]
IG calc max RMS	Measured value (calculated):IG maximum value (RMS)	[Operation
		/Statistics
		/Max
		/CT W1]
IG calc min RMS	Measured value (calculated):IG minimum value (RMS)	[Operation
		/Statistics
		/Min
		/CT W1]

Value	Description	Menu path
%(I2/I1) max	Measured value (calculated): I2/I1 maximum value, phase	[Operation
	sequence will be taken into account automatically	/Statistics
		/Max
		/CT W1]
%(I2/I1) min	Measured value (calculated): I2/I1 minimum value, phase sequence	[Operation
	will be taken into account automatically	/Statistics
		/Min
		/CT W1]
IL1 Peak demand	IL1 Peak value, RMS value	[Operation
		/Statistics
		/Demand
		/CT W1]
IL2 Peak demand	IL2 Peak value, RMS value	[Operation
		/Statistics
		/Demand
		/CT W1]
IL3 Peak demand	IL3 Peak value, RMS value	[Operation
		/Statistics
		/Demand
		/CT W1]

## **System Alarms**

Available Elements: SvsA



Please note that Power Protection and (Active/Reactive/Apparent) Power Demand is only available within Protective Devices that offer current and voltage measurement.

Within the System Alarms menu [SysA] the User can configure:

- General Settings (activate/inactivate the Demand Management, optional assign a signal, that will block the Demand Management);
- Power Protection (Peak values);
- Demand Management (Power and Current); and
- THD Protection.

Please note, that all thresholds are to be set as primary values.

#### **Demand Management**

Demand is the average of system current or power over a time interval (window). Demand management supports the User to keep energy demand below target values bound by contract (with the energy supplier). If the contractual target values are exceeded, extra charges are to be paid to the energy supplier.

Therefore, demand management helps the User detect and avoid averaged peak loads that are taken into account for the billing. In order to reduce the demand charge respective to demand rate, peak loads, if possible, should be diversified. That means, if possible, avoiding large loads at the same time. In order to assist the User in analyzing the demand, demand management might inform the User by an alarm. The User might also use demand alarms and assign them on relays in order to perform load shedding (where applicable).

Demand management comprises:

- Power Demand
  - Watt Demand (Active Power);
  - VAr Demand (Reactive Power);
  - VA Demand (Apparent Power); and
- Current Demand.

#### **Configuring the Demand**

Configuring the demand is a two step procedure. Proceed as follows.

Step1: Configure the general settings within the [Device Para/Statistics/Demand] menu:


- Set the trigger source to » Duration«.
- Select a time base for the » window«.
- Determine if the window is » fixed « or » sliding «.
- If applicable assign a reset signal.

The interval time (window) can be set to fixed or sliding.


**Example for a fixed window:** If the range is set for 15 minutes, the protective device calculates the average current or power over the past 15 minutes and updates the value every 15 minutes.

**Example for a sliding window:** If the sliding window is selected and the interval is set to 15 minutes, the protective device calculates and updates the average current or power continuously, for the past 15 minutes (the newest measuring value replaces the oldest measuring value continuously).

#### Window configuration = sliding

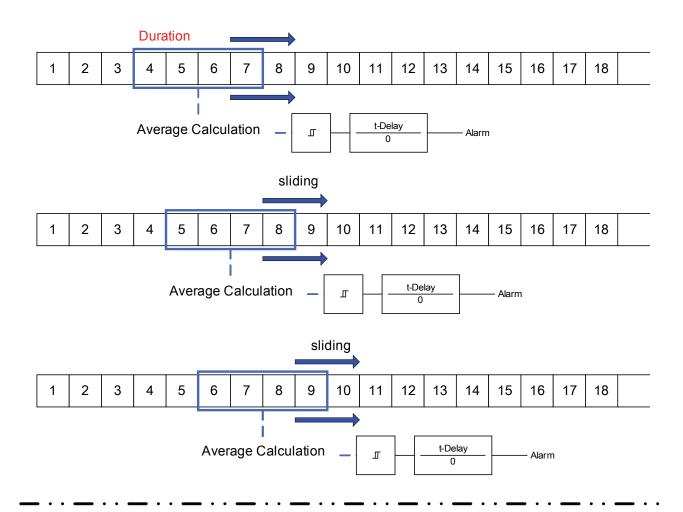

#### Window configuration = fixed

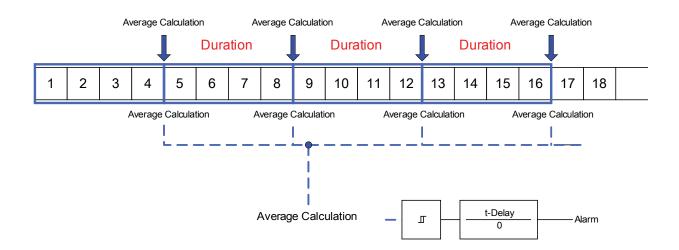

#### Step 2:

- In addition, the Demand specific settings have to be configured in the [SysA/Demand] menu.
- Determine if the demand should generate an alarm or if it should run in the silent mode. (Alarm active/inactive).
- Set the threshold.
- Where applicable, set a delay time for the alarm.

#### **Peak Values**

The protective device also saves the peak demand values for current and power. The quantities represent the largest demand value since the demand values were last reset. Peak demands for current and system power are date and time stamped.

Within the [Operation/Statistics] menu, the current Demand and Peak demand values can be seen.

#### **Configuring the Peak Value Supervision**

The supervision for the peak values can be configurated within menu [SysA/Power] in order to monitor:

- Active Power (Watt),
- Reactive Power (VAr)
- Apparent Powr (VA)

The specific settings are to be set within menu [SysA/Power].

- Determine if the peak value supervision should generate an alarm or if it should run in the silent mode. (Alarm active/inactive).
- Set the threshold.
- Where applicable, set a delay time for the alarm.

#### Min. and Max. Values.

Within [Operation/Statistics] menu the minimum (min.) and maximum (max.) values can be seen.

**Minimum values since last reset:** The minimum values are continuously compared to the last minimum value for that measuring value. If the new value is less than the last minimum, the value is updated. Within the [Device Para/Statistics/"Min / Max"] menu, a reset signal can be assigned.

**Maximum values since last reset:** The maximum values are continuously compared to the last maximum value for that measuring value. If the new value is greater than the last maximum, the value is updated. Within the [Device Para/Statistics/"Min / Max"] menu, a reset signal can be assigned.

### **THD Protection**

In order to supervise power quality, the protective device can monitor the voltage (phase-to-phase) and current THDs.

Within the [SysA/THD] menu:

- Determine if an alarm is to be issued or not (Alarm active/inactive);
- Set the threshold; and
- Where applicable, set a delay time for the alarm.

### **Device Planning Parameters of the Demand Management**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## Signals of the Demand Management (States of the Outputs)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Alm Current Demd	Signal: Alarm averaged demand current
Alarm I THD	Signal: Alarm Total Harmonic Distortion Current
Trip Current Demand	Signal: Trip averaged demand current
Trip I THD	Signal: Trip Total Harmonic Distortion Current

# **Global Protection Parameter of the Demand Management**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[SysA
		active		/General settings]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global	1n, Assignment List		[SysA /General settings]
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".			
	EASIGN G GOLDS			

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1, W2	W1	[SysA /General settings]
Alarm	Alarm	inactive,	inactive	[SysA
		active		/Demand
				/Current Demand]
Threshold	Threshold (to be entered as primary value)	10 - 500000A	500A	[SysA
				/Demand
				/Current Demand]
t-Delay	Tripping Delay	0 - 60min	0min	[SysA
				/Demand
				/Current Demand]
Alarm	Alarm	inactive,	inactive	[SysA
		active		/THD
				/I THD]
Threshold	Threshold (to be entered as primary value)	1 - 500000A	500A	[SysA
				/THD
				/I THD]
t-Delay	Tripping Delay	0 - 3600s	0s	[SysA
				/THD
				/I THD]

# **States of the Inputs of the Demand Management**

Name	Description	Assignment via	
ExBlo-I	Module input state: External blocking	[SysA	
		/General settings]	

# Acknowledgments

Collective Acknowledgments for latched signals:

	Collective Acknowledgments					
	LEDs	Binary Output Relays	SCADA	Pending Trip Command	LEDs+ Binary Output Relays+ SCADA+ Pending Trip Command	
Via Smart view or at the panel all can be acknowledged.  At the panel, the menu [Operation\ Acknowledge] can directly be accessed via the »C« key	All LEDs at once: Where? [Operation\ Acknowledge]	All Binary Output Relays at once: Where? [Operation\ Acknowledge]	All SCADA signals at once: Where? [Operation\ Acknowledge]	All pending trip commands at once:  Where? [Operation\ Acknowledge]	All at once: Where? [Operation\ Acknowledge]	
External Acknowledgme nt*:  Via a signal from the assignment list (e.g. a digital Input) all can be acknowledged.	All LEDs at once:  Where? Within the menu  Ex Acknowledge	All Binary Output Relays at once:  Where? Within the menu Ex Acknowledge	All SCADA signals at once:  Where? Within the menu Ex Acknowledge	All pending trip commands at once:  Where? Within the menu Ex Acknowledge		

<sup>\*</sup>The External Acknowledgement might be disabled if parameter » Ex Ack «is set to » inactive « within menu [Device Para/Ex Acknowledge]. This blocks also the acknowledgement via Communication (e.g. Modbus).

Options for individual acknowledgments for latched signals:

Individual Acknowledgment					
	LEDs	Binary Output Relays	Pending Trip Command		
Via a signal from the assignment list (e.g.:a digital Input) a <i>single</i> can be acknowledged.	Single LED:  Where?  Within the configuration	Binary Output Relay:  Where?  Within the configuration	Pending Trip Command.  Where?  Within the module <u>TripControl</u>		
	menu of this single LED.	menu of this single Binary Output Relay.			



As long as you are within the parameter setting mode, you cannot acknowledge.

# NOTICE

In case of a fault during parameter setting via the operating panel, you must first leave the parameter mode by pressing either push-button »C« or »OK« before you may access to menu »Acknowledgments« via push-button.

### **Manual Acknowledgment**

- Press the C-Button at the panel.
- Select the item to be acknowledged via the Softkeys:
  - Binary output relays,
  - LEDs,
  - SCADA,
  - a pending trip command or
  - all (above) mentioned items at once.
- Press the Softkey with the »Wrench-Symbol«.
- Enter your password.


#### Manual Acknowledgment via Smart view

- In case *Smart view* is not running please start it
- If the device data were not yet loaded select »Receive Data From The Device« from menu »Device«
- Double click on icon »Operation« in the navigation tree.
- Double click on icon »Acknowledgment« within the operation menu.
- Double click the entry within the popup that is to be acknowledged.
- Press the button »Execute immediately«.
- Enter your password.

#### **External Acknowledgments**

Within the menu [Ex Acknowledge] you can assign a signal (e.g. the state of a digital input) from the assignment list that:

- acknowledges all (acknowledgeable) LEDs at once;
- acknowledges all (acknowledgeable) binary outputs at once:
- acknowledges all (acknowledgeable) SCADA-signals at once.

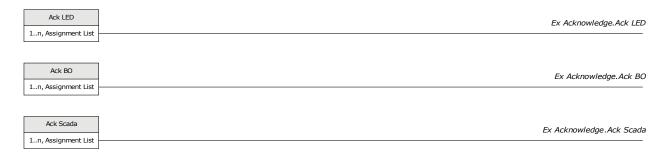

Within the menu [Protection Para\Global Prot Para\TripControl] you can assign a signal that:

acknowledges a pending trip command.

For details, please refer to chapter » TripControl«.

#### **External Acknowledge via Smart view**

In case Smart view is not running – please start it.

- If the device data were not yet loaded select »Receive Data From The Device« from menu »Device«
- Double click on icon »Device Parameter« in the navigation tree
- Double click on icon »Ex Acknowledge« within the operation menu
- In the working window you can assign now each one signal that resets all acknowledgeable LEDs, a signal that resets all binary outputs, a signal that resets the SCADA-signals respectively a signal that acknowledges a pending trip command.

#### **External LED - Acknowledgment Signals**

The following signals can be used for external acknowledgment of latched LEDs.

#### Manual Resets

In menu »Operation/Reset« you can:

- reset counters,
- delete records (e.g. disturbance records) and
- reset special things (like statistics, thermal replica...).



The description of the reset commands can be found within the corresponding modules.

#### Manual Resets via Smart view

- In case *Smart view* is not running please start it
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«
- Double click the »Operation« icon in the navigation tree
- Double click the »Reset icon« within the operation menu
- Double click the entry within the popup that is to be reset or deleted.



The description of the reset commands can be found within the corresponding modules.

### **Reset to Factory Defaults**



This Function will reset the device to the factory defaults.
All records will be deleted and and the measured values and counters will be reset. The operation hours counter will be kept.

This Function is available at the HMI only.

- Press the »C-key« during a cold start, in order to access the »Reset« menu.
- Select »Reset to factory default«.
- Confirm »Reset device to factory defaults and reboot« with »Yes« in order to execute the reset to factory defaults.«

# **Status Display**

In the status display within the »Operation« menu, the present state of all signals can be viewed. This means the User is able to see if the individual signals are active or inactive at that moment. The User can see all signals sorted by protective elements/modules.

State of the module input/signal is	Is shown at the panel as	
false / »0«		
true / »1«		

### **Status Display via Smart View**

- In case *Smart view* is not running please start it.
- If the device data were not yet loaded select »Receive Data From The Device« from menu »Device«.
- Double click on icon »Operation« in the navigation tree
- Double click on icon »Status Display« within the operational data
- Double click on a subfolder (e.g. <u>Prot</u>) in order to see e.g. the states of the general alarms.



To have the status display updated in a cyclic manner select »Automatic Up-Date« in menu »*View*«.

State of the module input/signal is	Is shown in Smart view as	
false / »0«	0	
true / »1«	1	
No connection to the device	?	

# **Operating Panel (HMI)**

<u>HMI</u>

### **Special Parameters of the Panel**

This menu »Device Parameter/HMI« is used to define the contrast of the display, the maximum admissible edit time and the menu language (after expiry of which, all unsaved parameter changes will be rejected).

#### **Direct Commands of the Panel**

Parameter	Description	Setting range	Default	Menu path
Contrast	Contrast	0 - 100%	50%	[Device Para
				/HMI]

#### **Global Protection Parameters of the Panel**

Parameter	Description	Setting range	Default	Menu path
t-max Edit	If no other key(s) is pressed at the panel, after expiration of this time, all cached (changed) parameters are canceled.	20 - 3600s	180s	[Device Para /HMI]
Menu language	Selection of the language	English,	English	[Device Para
		German,		/HMI]
$\bigcirc$		Russian,		
		Polish,		
		French,		
		Portuguese		

#### Recorders

#### Disturbance Recorder

Available elements: Disturb rec


The disturbance recorder works with 32 samples per cycle. The disturbance recorder can be started by one of eight start events (selection from the »assignment list«/OR-Logic). The disturbance record contains the measuring values inclusively pre-trigger-time. By means of *Smart view/Datavisualizer* (option) the oscillographic curves of the analogue (current, voltage) and digital channels/traces can be shown and evaluated in a graphical form. The disturbance recorder has a storage capacity of 120s. The disturbance recorder is able to record up to 10 s (adjustable) per record. The amount of records depends on the file size of each record.

The disturbance recorder can be parameterized in the menu »Device Parameter/Recorder/Disturb rec«.

Determine the max. recording time to register a disturbance event. The max. total length of a recording is 10s (inclusive pre-trigger and post-trigger time).

To trigger the disturbance recorder, up to 8 signals can be selected from the »assignment list«. The trigger events are OR-linked. If a disturbance record is written, a new disturbance record cannot be triggered until all trigger signals, which have triggered the previous disturbance record, are gone. Recording is only done for the time the assigned event exists (event controlled), plus the time for the pre- and post-trigger, but not longer than 10s. The time for forward run and tracking of the disturbance recorder is shown in percent of the total recording length.

NOTICE
The post-trigger time will be up to "Post-trigger time" depending on the duration of the trigger signal. The post-trigger will be the remaining time of the "Max file size" but at maximum "Post-trigger time"

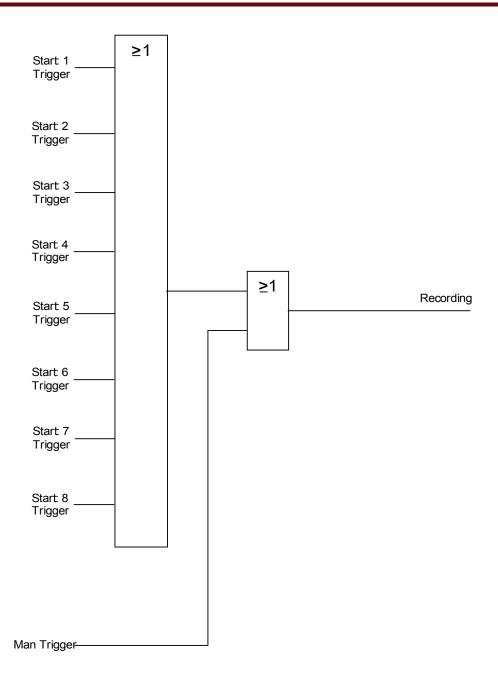


#### Example


The disturbance recorder is started by the general activation facility. After the fault has been cancelled (+ follow-up time), the recording process is stopped (but after 10s at the latest).

The parameter »Auto Delete« defines how the device shall react if there is no saving place available. In case »Auto Delete« is »active«, the first recorded disturbance will be overwritten according to the FIFO principle. If the parameter is set to »inactive«, recording of the disturbance events will be stopped until the storage location is released manually.

## Example Disturbance Recorder Timing Chart I

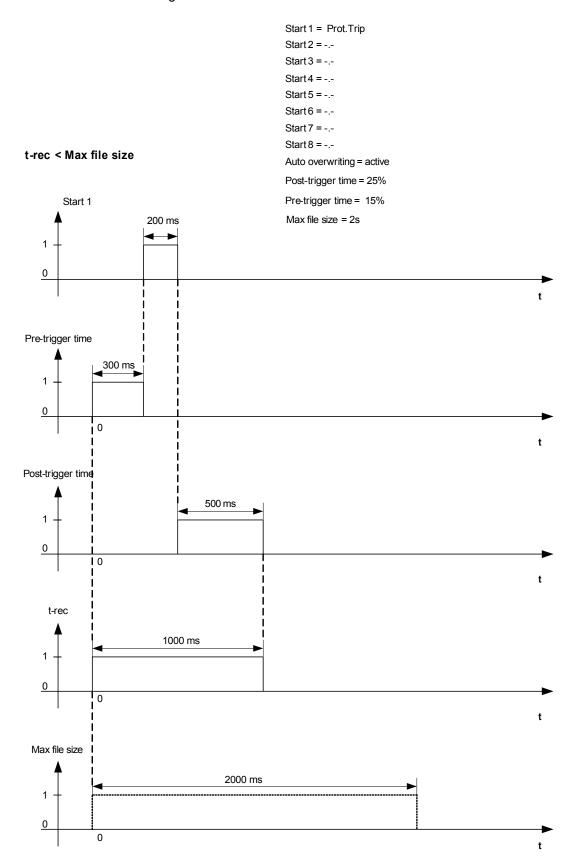

## Example Disturbance Recorder Timing Chart II

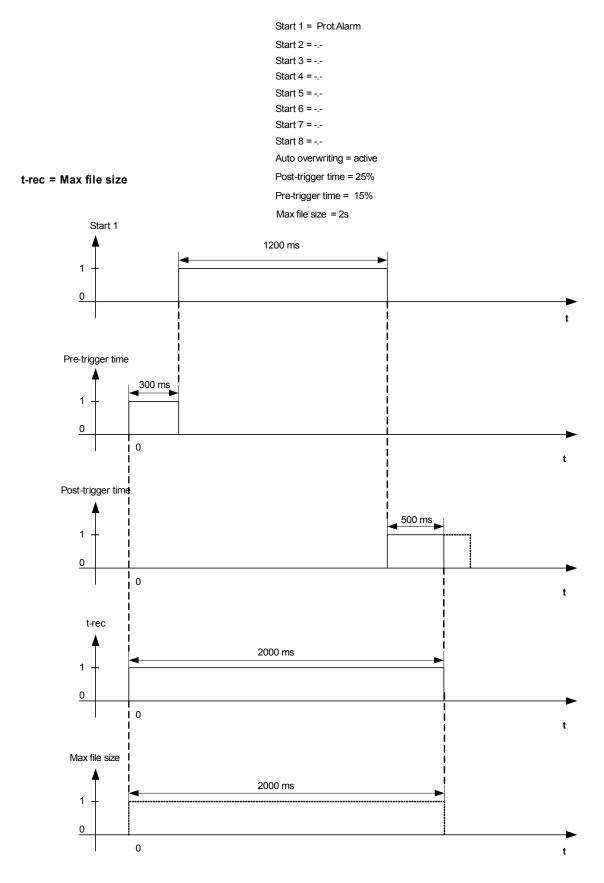

#### **Read Out Disturbance Records**

Within the Menu Operation/Disturb rec you can

Detect accumulated Disturbance Records.



Within the Menu »Operation/Recorders/Man Trigger« you can trigger the disturbance recorder manually.

## Disturbance Recorder to be Read Out by Smart view

- In case Smart view is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«.
- Double click the »Operation« icon in the navigation tree.
- Double click the »Recorders« icon in the navigation tree.
- Double click the »Disturb rec-Icon«.
- In the window the disturbance records are shown in tabular form.
- A popup will be appear by a double click onto a disturbance record. Choose a folder where the disturbance record is to be saved to.
- You can analyze the disturbance records by means of the optionally available *Data Visualizer* by clicking on Yes when you are asked "Shall the received disturbance record be opened by the *Data Visualizer*?"

### **Deleting Disturbance Records**

Within the Menu Operation/Disturb rec you can

- Delete Disturbance Records.
- Choose via »SOFTKEY« »up« and »SOFTKEY« »down« the disturbance record that is to be deleted.
- Call up the detailed view of the disturbance record via »SOFTKEY« »right«.
- Confirm by pressing »SOFTKEY« »delete«
- Enter your password followed by pressing the key »OK«
- Choose whether only the current of whether all disturbance records should be deleted.
- Confirm by pressing »SOFTKEY« »OK«

### **Deleting Disturbance Records via Smart view**

- In case Smart view is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«.
- Double click the »Operation« icon in the navigation tree.
- Double click the »Recorders« icon in the navigation tree.
- · Double click the »Disturb rec-Icon«.
- In the window the disturbance records are shown in tabular form.
- In order to delete a disturbance record double click on:



(the red x) in front of the disturbance record and confirm.

## **Direct Commands of the Disturbance Recorder**

Parameter	Description	Setting range	Default	Menu path
Man Trigger	Manual Trigger	False,	False	[Operation
		True		/Recorders
				/Man Trigger]
Res all rec	Reset all records	inactive,	inactive	[Operation
		active		/Reset]

## **Global Protection Parameters of the Disturbance Recorder**

Parameter	Description	Setting range	Default	Menu path
Start: 1	Start recording if the assigned signal is true.	1n, Assignment List	Prot.Alarm	[Device Para /Recorders /Disturb rec]
Start: 2	Start recording if the assigned signal is true.	1n, Assignment List	1.5	[Device Para /Recorders /Disturb rec]
Start: 3	Start recording if the assigned signal is true.	1n, Assignment List	-1-	[Device Para /Recorders /Disturb rec]
Start: 4	Start recording if the assigned signal is true.	1n, Assignment List	7.7	[Device Para /Recorders /Disturb rec]
Start: 5	Start recording if the assigned signal is true.	1n, Assignment List	-1-	[Device Para /Recorders /Disturb rec]
Start: 6	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Disturb rec]
Start: 7	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Disturb rec]

Parameter	Description	Setting range	Default	Menu path
Start: 8	Start recording if the assigned signal is true.	1n, Assignment List	-,-	[Device Para /Recorders /Disturb rec]
Auto overwriting	If there is no more free memory capacity left, the oldest file will be overwritten.	inactive, active	active	[Device Para /Recorders /Disturb rec]
Post-trigger time	The post trigger time is settable up to a maximum of 50% of the Maximum file size setting. The post-trigger will be the remaining time of the "Max file size" but at maximum "Post-trigger time"	0 - 50%	20%	[Device Para /Recorders /Disturb rec]
Pre-trigger time	The pre trigger time is settable up to a maximum of 50% of the Maximum file size setting.	0 - 50%	20%	[Device Para /Recorders /Disturb rec]
Max file size	The maximum storage capacity per record is 10 seconds, including pre-trigger and post-trigger time. The disturbance recorder has a total storage capacity of 120 seconds.	0.1 - 10.0s	2s	[Device Para /Recorders /Disturb rec]

# **Disturbance Recorder Input States**

Name	Description	Assignment via
Start1-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start2-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start3-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start4-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start5-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start6-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start7-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]
Start8-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Disturb rec]

# **Disturbance Recorder Signals**

Signal	Description
recording	Signal: Recording
memory full	Signal: Memory full
Clear fail	Signal: Clear failure in memory
Res all records	Signal: All records deleted
Res rec	Signal: Delete record
Man Trigger	Signal: Manual Trigger

# **Special Parameters of the Disturbance Recorder**

Value	Description	Default	Size	Menu path
Rec state	Recording state	Ready	Ready,	[Operation
			Recording,	/Status display
			Writing file,	/Recorders
			Trigger Blo	/Disturb rec]
Error code	Error code	OK	OK,	[Operation
			Write err,	/Status display
			Clear fail,	/Recorders
			Calculation err,	/Disturb rec]
			File not found,	
			Auto overwriting off	


#### **Fault Recorder**

#### Fault rec

The fault recorder can be started by one of eight start events (selection from the »assignment list«/OR-Logic). The fault recorder can register up to 20 faults. The last of the recorded faults is stored in a fail-safe manner.

If one of the assigned trigger events becomes true, the fault recorder will be started. Each fault is saved inclusive module and name, fault number, mains fault number and record number at that time one of the trigger events becomes true. To each of the faults the measuring values (at the time when the trigger event became true) can be viewed.

Up to 8 signals to trigger the fault recorder can be selected from following list. The trigger events are OR-linked.

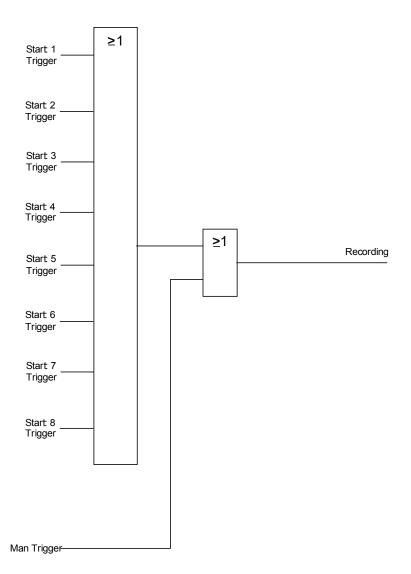

The parameter »Auto Delete« defines how the device shall react if there is no saving place available. In case »Auto Delete« is »active«, the first recorded fault will be overwritten according to the FIFO principle. If the parameter is set to »inactive«, recording of the fault events will be stopped until the storage location is released manually.

#### Read Out the Fault Recorder

The measured values at the time of tripping are saved (failure safe) within the fault recorder. If there is no more memory free, the oldest record will be overwritten (FIFO).

In order to read out a failure record:

- call up the main menu,
- call up the submenu Operation/Recorders/Fault rec.,
- select a fault record,
- analyze the corresponding measured values.

#### Read Out the Fault Recorder via Smart View

- In case *Smart view* is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«.
- Double click the »Operation« icon in the navigation tree.
- Double click the »Fault Rec« icon within the tree »Operation/Recorders«.
- In the window the fault recordings are shown in tabular form.
- In order to receive more detailed information on a fault double click the selected item in the list.

# NOTICE

Via the print menu you can export the data into a file. Please proceed as follows:

- Call up the data as described above.
- Call up the menu [File/Print].
- Choose »Print Actual Working Window« within the popup.
- Press the »Print« button.
- Press the »Export to File« button.
- Enter a file name.
- Choose a location where to save the file.
- Confirm the »Save« button.

## **Direct Commands of the Fault Recorder**

Parameter	Description	Setting range	Default	Menu path
Res all rec	Reset all records	inactive,	inactive	[Operation
		active		/Reset]
Man Trigger	Manual Trigger	False,	False	[Operation
		True		/Recorders
				/Man Trigger]

## **Global Protection Parameters of the Fault Recorder**

Parameter	Description	Setting range	Default	Menu path
Start: 1	Start recording if the assigned signal is true.	1n, Assignment List	Prot.Trip	[Device Para /Recorders /Fault rec]
Start: 2	Start recording if the assigned signal is true.	1n, Assignment List	-,-	[Device Para /Recorders /Fault rec]
Start: 3	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Fault rec]
Start: 4	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Fault rec]
Start: 5	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Fault rec]
Start: 6	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Fault rec]
Start: 7	Start recording if the assigned signal is true.	1n, Assignment List	-,-	[Device Para /Recorders /Fault rec]
Start: 8	Start recording if the assigned signal is true.	1n, Assignment List		[Device Para /Recorders /Fault rec]

## Recorders

Parameter	Description	Setting range	Default	Menu path
Auto overwriting	If there is no more free memory capacity left, the oldest file will be overwritten.	inactive, active	active	[Device Para /Recorders /Fault rec]

# **Fault Recorder Input States**

Name	Description	Assignment via
Start1-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start2-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start3-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start4-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start5-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start6-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start7-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]
Start8-I	State of the module input:: Trigger event / start recording if:	[Device Para
		/Recorders
		/Fault rec]

# **Fault Recorder Signals**

Signal	Description
Res rec	Signal: Delete record
Man Trigger	Signal: Manual Trigger

#### **Trend Recorder**

Available Elements: Trend rec

### **Functional Description**

The Trend Data are data points stored by the Trend Recorder on the relay device over fixed intervals of time, and can be downloaded from the device using *Smart view*. A Trend Record is viewable using the *Data Visualizer* software by selecting files saved by *Smart view* with a file extension of ". HptTR". The list of available trend recorder data is viewable by selecting [Operation/ Recorders/Trend Recorder].

When viewed within the *Data Visualizer*, the trend record will show the observed values (up to 10) that the User has specified. The values available in the <u>Trend Recorder</u> depend on the type of the connected device and the configuration of the <u>Trend Recorder</u>.

#### **Managing Trend Records**

To download information from the Trend Recorder, select [Operation/Recorder/Trend Rec] from the menu tree. The User will find three options within the Trend Recorder window that will allow the User to:

- Receive Trend Records,
- Refresh the Trend Recorder, and
- Delete Trend Records.

Selecting the »Receive Trend Record« button will download data from the relay to the User's PC. By selecting the »Refresh Trend Recorder«", Smart view updates the list of the Trend Recorder. The »Delete Trend Records« function will clear all trend data from the relay. Trend Recorder data previously stored on the User's PC remains untouched.

After having received trend data from the device, the User can view the data in the *Data Visualizer* by double-clicking on the received ".ErTr" file stored on the PC. Once the ".ErTr" file is open, the User will see the "Analog Channels" that are monitored by the Trend Recorder. By clicking on the "Analog Channels", all monitored parameters are listed. To view a channel, the User must click on the left mouse key, then drag and drop the channel onto the right side of the *Data Visualizer* screen. The channel is then listed under the "Displayed Channels".


To remove a channel from view, the User must select the Trend Data to be removed in the » *Displayed Channels«* menu tree, then click on the right mouse button to bring up the menu options. Here, the User will find the »Remove« menu option that, when selected, will remove the trend data.

#### Configuring the Trend Recorder

The Trend Recorder is to be configured within [Device Para/Recorders/Trend Recorder] menu.

The User has to set the time interval. This defines the distance between two measuring points.

The User can select up to ten values that will be recorded.

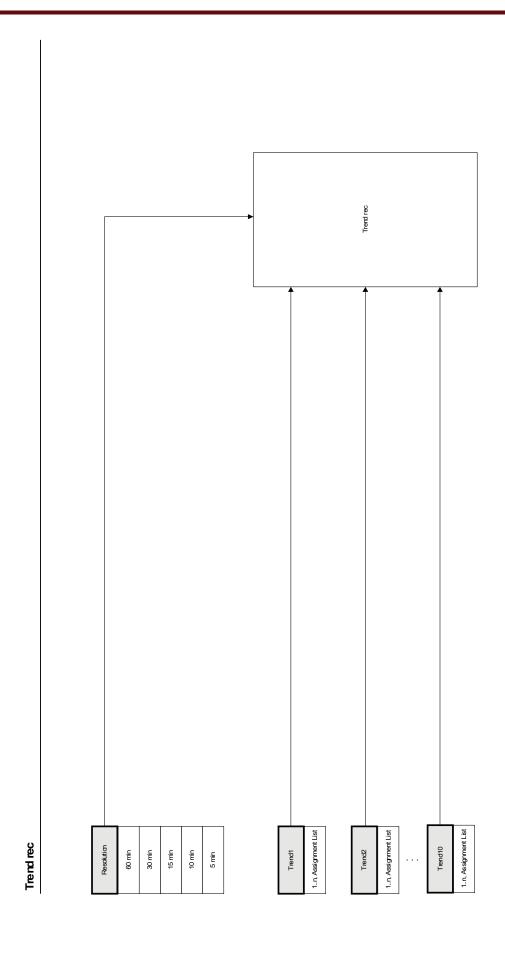

## **Global Protection Parameters of the Trend Recorder**

Parameter	Description	Setting range	Default	Menu path
Resolution	Resolution (recording frequency)	60 min,	15 min	[Device Para
		30 min,		/Recorders
		15 min,		/Trend rec]
		10 min,		
		5 min		
Trend1	Observed Value1	1n, TrendRecList	CT W1.IL1 RMS	[Device Para
				/Recorders
				/Trend rec]
Trend2	Observed Value2	1n, TrendRecList	CT W1.IL2 RMS	[Device Para
				/Recorders
				/Trend rec]
Trend3	Observed Value3	1n, TrendRecList	CT W1.IL3 RMS	[Device Para
				/Recorders
				/Trend rec]
Trend4	Observed Value4	1n, TrendRecList	CT W1.IG meas	[Device Para
			RMS	/Recorders
				/Trend rec]
Trend5	Observed Value5	1n, TrendRecList		[Device Para
				/Recorders
				/Trend rec]
Trend6	Observed Value6	1n, TrendRecList		[Device Para
				/Recorders
				/Trend rec]
Trend7	Observed Value7	1n, TrendRecList		[Device Para
				/Recorders
				/Trend rec]
Trend8	Observed Value8	1n, TrendRecList		[Device Para
				/Recorders
				/Trend rec]
Trend9	Observed Value9	1n, TrendRecList		[Device Para
				/Recorders
$\bigcirc$				/Trend rec]

Parameter	Description	Setting range	Default	Menu path
Trend10	Observed Value10	1n, TrendRecList		[Device Para
				/Recorders
				/Trend rec]

## **Trend Recorder Signals (Output States)**

Signal	Description
Hand Reset	Hand Reset

## **Direct Commands of the Trend Recorder**

Parameter	Description	Setting range	Default	Menu path
Reset	Delete all entries	inactive,	inactive	[Operation
		active		/Reset]

## **Assignable Values of the Trend Recorder**

Name	Description
	No assignment
CT W1.IL1	Measured value: Phase current (fundamental)
CT W1.IL2	Measured value: Phase current (fundamental)
CT W1.IL3	Measured value: Phase current (fundamental)
CT W1.IG meas	Measured value (measured): IG (fundamental)
CT W1.IG calc	Measured value (calculated): IG (fundamental)
CT W1.IL1 RMS	Measured value: Phase current (RMS)
CT W1.IL2 RMS	Measured value: Phase current (RMS)
CT W1.IL3 RMS	Measured value: Phase current (RMS)
CT W1.IG meas RMS	Measured value (measured): IG (RMS)
CT W1.IG calc RMS	Measured value (calculated): IG (RMS)
CT W1.I0	Measured value (calculated): Zero current (fundamental)
CT W1.I1	Measured value (calculated): Positive phase sequence current (fundamental)
CT W1.I2	Measured value (calculated): Unbalanced load current (fundamental)
CT W1.IL1 avg RMS	IL1 average value (RMS)
CT W1.IL2 avg RMS	IL2 average value (RMS)
CT W1.IL3 avg RMS	IL3 average value (RMS)
CT W1.IL1 THD	Measured value (calculated): IL1 Total Harmonic Current
CT W1.IL2 THD	Measured value (calculated): IL2 Total Harmonic Current

Name	Description
CT W1.IL3 THD	Measured value (calculated): IL3 Total Harmonic Current
CT W2.IL1	Measured value: Phase current (fundamental)
CT W2.IL2	Measured value: Phase current (fundamental)
CT W2.IL3	Measured value: Phase current (fundamental)
CT W2.IG meas	Measured value (measured): IG (fundamental)
CT W2.IG calc	Measured value (calculated): IG (fundamental)
CT W2.IL1 RMS	Measured value: Phase current (RMS)
CT W2.IL2 RMS	Measured value: Phase current (RMS)
CT W2.IL3 RMS	Measured value: Phase current (RMS)
CT W2.IG meas RMS	Measured value (measured): IG (RMS)
CT W2.IG calc RMS	Measured value (calculated): IG (RMS)
CT W2.I0	Measured value (calculated): Zero current (fundamental)
CT W2.I1	Measured value (calculated): Positive phase sequence current (fundamental)
CT W2.I2	Measured value (calculated): Unbalanced load current (fundamental)
CT W2.IL1 avg RMS	IL1 average value (RMS)
CT W2.IL2 avg RMS	IL2 average value (RMS)
CT W2.IL3 avg RMS	IL3 average value (RMS)
CT W2.IL1 THD	Measured value (calculated): IL1 Total Harmonic Current
CT W2.IL2 THD	Measured value (calculated): IL2 Total Harmonic Current
CT W2.IL3 THD	Measured value (calculated): IL3 Total Harmonic Current
URTD.W1 L1	Measured Value: Winding Temperature
URTD.W1 L1 max	Measured Value: Winding Temperature Maximum Value
URTD.W1 L2	Measured Value: Winding Temperature
URTD.W1 L2 max	Measured Value: Winding Temperature Maximum Value
URTD.W1 L2	Measured Value: Winding Temperature
URTD.W1 L2 max	Measured Value: Winding Temperature Maximum Value
URTD.W2 L1	Measured Value: Winding Temperature
URTD.W2 L1 max	Measured Value: Winding Temperature Maximum Value
URTD.W2 L2	Measured Value: Winding Temperature
URTD.W2 L2 max	Measured Value: Winding Temperature Maximum Value
URTD.W2 L2	Measured Value: Winding Temperature
URTD.W2 L2 max	Measured Value: Winding Temperature Maximum Value
URTD.Amb1	Measured Value: Ambient Temperature
URTD.Amb1 max	Measured Value: Ambient Temperature Maximum Value
URTD.Amb2	Measured Value: Ambient Temperature
URTD.Amb2 max	Measured Value: Ambient Temperature Maximum Value
URTD.Aux1	Measured Value: Auxiliary Temperature
URTD.Aux1 max	Measured Value: Auxiliary Temperature Maximum Value
URTD.Aux2	Measured Value: Auxiliary Temperature
URTD.Aux2 max	Measured Value: Auxiliary Temperature Maximum Value

Name	Description
URTD.Aux3	Measured Value: Auxiliary Temperature
URTD.Aux3 max	Measured Value: Auxiliary Temperature Maximum Value
URTD.Aux4	Measured Value: Auxiliary Temperature
URTD.Aux4 max	Measured Value: Auxiliary Temperature Maximum Value
URTD.RTD Max	Maximum temperature of all channels.
RTD.Hottest WD W1	Hottest winding on side W1
RTD.Hottest WD W2	Hottest winding on side W2
RTD.Hottest Amb	Hottest Ambient Temperature
RTD.Hottest Aux Temp	Hottest Auxiliary temperature in degrees C.

## **Genearal Values of the Trend Recorder**

Value	Description	Default	Size	Menu path
Max avail Entries	Maximum available entries in the current configuration	0		[Operation /Count and RevData
				/Trend rec]

### **Event Recorder**

#### Event rec

The event recorder can register up to 300 events and the last (minimum) 50 saved events are recorded fail-safe. The following information is provided for any of the events:

#### Events are logged as follows:

Record No.	Fault No.	No of grid faults	Date of Record	Module.Name	State
Sequential Number	Number of the ongoing fault  This counter will be incremented by each General Alarm (Prot.Alarm)	A grid fault No. can have several Fault No.  This counter will be incremented by each General Alarm (Exception AR: this applies only to devices that offer auto reclosing)	Time stamp	What has changed?	Changed Value

There are three different classes of events:

#### Alternation of binary states are shown as:

- 0->1 if the signal changes physically from »0« to »1«.
- 1->0 if the signal changes physically from »1« to »0«.

#### ■ Counters increment is shown as:

■ Old Counter state -> New Counter state (e.g. 3->4)

#### Alternation of multiple states are shown as:

■ Old state -> New state (e.g. 0->2)

DOK-HB-MRDT4E

#### Read Out the Event Recorder

- Call up the »main menu«.
- Call up the submenu »Operation/Recorders/Event rec«.
- Select an event.

### Read Out the Event Recorder via Smart View

- In case *Smart view* is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device.
- Double click the »Operation« icon in the navigation tree.
- Double click the »Event Rec« icon within the »Operation/Recorders« menu.
- In the window the events are shown in tabular form.

# NOTICE

To have the event recorder up-dated in a cyclic manner, select »Automatic Up-Date« in menu *View.* 

Smart view is able to record more events than the device itself, if the window of the event recorder is opened and »Automatic Up-Date« is set to active.

# NOTICE

Via the print menu you can export the data into a file. Please proceed as follows:

- Call up the data as described above.
- Call up the menu [File/Print].
- Choose »Print Actual Working Window« within the popup.
- Press the »Print« button.
- Press the »Export to File« button.
- Enter a file name.
- Choose a location where to save the file.
- Confirm the »Save« button.

### Direct Commands of the Event Recorder

Parameter	Description	Setting range	Default	Menu path
Res all rec	Reset all records	inactive,	inactive	[Operation
		active		/Reset]

# **Event Recorder Signals**

Signal	Description
Res all records	Signal: All records deleted

## **Communication Protocols**

## **SCADA Interface**

<u>X103</u>

## **Device Planning Parameters of the Serial Scada Interface**

Parameter	Description	Options	Default	Menu path
Protocol	Caution! Changing the protocol will cause a	-,	Modbus	[Device planning]
	restart of the device	Modbus,		
		IEC60870-5-103,		
		Profibus		

## **Global Protection Parameters of the Serial Scada Interface**

Parameter	Description	Setting range	Default	Menu path
Optical rest position	Optical rest position	Light off,	Light on	[Device Para
		Light on		/X103]

### **Modbus®**

Modbus

## **Modbus® Protocol Configuration**

The time-controlled Modbus® protocol is based on the Master-Slave working principle. This means that the substation control and protection system sends an enquiry or instruction to a certain device (slave address) which will then be answered or carried out accordingly. If the enquiry/instruction cannot be answered/carried out (e.g. because of an invalid slave address), a failure message is returned to the master.

The Master (substation control and protection system) can query information from the device, such as:

- Type of unit version
- Measuring values/Statistical measured values
- Switch operating position
- State of device
- Time and date
- State of the device's digital inputs
- Protection-/State alarms

The Master (control system) can give commands/instructions to the device, such as:

- Control of switchgear (where applicable, i.e. each acc. to the applied device version)
- Change-over of parameter set
- Reset and acknowledgement of alarms/signals
- Adjustment of date and time
- Control of alarm relays

For detailed information on data point lists and error handling, please refer to the Modbus® documentation.

To allow configuration of the devices for Modbus® connection, some default values of the control system must be available.

#### **Modbus RTU**

#### Part 1: Configuration of the Devices

Call up »Device parameter/Modbus« and set the following communication parameters there:

- Slave-address, to allow clear identification of the device.
- Baud-Rate

Also, select below indicated RS485 interface-related parameters from there, such as:

- Number of data bits
- One of the following supported communication variants: Number of data bits, even, odd, parity or no parity, number of stop bits.
- »t-timeout«: communication errors are only identified after expiry of a supervision time »t-timeout«.
- Response time (defining the period within which an enquiry from the master has to be answered).

#### Part 2: Hardware Connection

- For hardware connection to the control system, there is an RS485 interface at the rear side of the device (RS485, fiber optic or terminals).
- Connect bus and device (wiring).

#### Error Handling - Hardware Errors

Information on physical communication errors, such as:

- Baudrate Error
- Parity Error ...

can be obtained from the event recorder.

Error Handling – Errors on protocol level

If, for example, an invalid memory address is enquired, error codes will be returned by the device that need to be interpreted.

#### **Modbus TCP**



Establishing a connection via TCP/IP to the device is only possible if your device is equipped with an Ethernet Interface (RJ45).

Contact your IT administrator in order to establish the network connection.

#### Part 1: Setting the TCP/IP Parameters

Call up »Device parameter/TCP/IP« at the HMI (panel) and set the following parameters:

- TCP/IP address
- Subnetmask
- Gateway

#### Part 2: Configuration of the Devices

Call up »Device parameter/Modbus« and set the following communication parameters:

- Setting a Unit Identifier is only necessary if a TCP network should be coupled to a RTU network.
- If a different port than the default port 502 should be used please proceed as follows:
  - Choose "Private" within the TCP-Port-Configuration.
  - Set the port-number.
- Set the maximum accepted time of "no communication". If this time has expired without any comunication, the device concludes a failure within the master system.
- Allow or disallow the blocking of SCADA commands.

#### Part 3: Hardware Connection

- There is a RJ45 interface at the rear side of the device for the hardware connection to the control system.
- Establish the connection to the device by means of a proper Ethernet cable.

#### **Direct Commands of the Modbus®**

Parameter	Description	Setting range	Default	Menu path
Res Diagn Cr	All Modbus Diagnosis Counters will be reset.	inactive,	inactive	[Operation
		active		/Reset]

## **Global Protection Parameters of the Modbus®**

Description	Setting range	Default	Menu path
Device address (Slave ID) within the bus system. Each	1 - 247	1	[Device Para
·			/Modbus]
Only available if:Device planning = RTU			
The Unit Identifier is used for routing. This parameter is	1 - 255	255	[Device Para
should be coupled.			/Modbus]
Only available if:Device planning = TCP			
TCP Port Configuration. This parameter is to be set	Default,	Default	[Device Para
only if the default Modubs TCP Port should not be used.	Private		/Modbus]
Only available if:Device planning = TCP			
Port number	502 - 65535	502	[Device Para
Only available if:Device planning = TCP And Only			/Modbus]
available if: TCP Port Config = Private			
Within this time the answer has to be received by the	0.01 - 10.00s	1s	[Device Para
disregarded. In that case the Scada system detects a			/Modbus]
communication failure and the Scada System has to			
·			
	4000	40000	(Davies Dave
Baud rate		19200	[Device Para
Only available in Device planning = RTO			/Modbus]
Digit 1: Number of bits. Digit 2: E=even parity, O=odd	8E1,	8E1	[Device Para
	801,		/Modbus]
bit is followed by a parity bit which is used for	8N1,		
	8N2		
number of bits with valence "1" or with odd parity			
transmitted. But it is also possible to transmit no parity			
bits (here the setting is "Parity = None"). More information on the stop-bits: The end of a data byte is			
terminated by the stop-bits.			
Only available if:Device planning = RTU			
	Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.  Only available if:Device planning = RTU  The Unit Identifier is used for routing. This parameter is to be set, if a Modbus RTU and a Modbus TCP network should be coupled.  Only available if:Device planning = TCP  TCP Port Configuration. This parameter is to be set only if the default Modubs TCP Port should not be used.  Only available if:Device planning = TCP  Port number  Only available if:Device planning = TCP And Only available if: TCP Port Config = Private  Within this time the answer has to be received by the SCADA system, otherwise the request will be disregarded. In that case the Scada system detects a communication failure and the Scada System has to send a new request.  Only available if:Device planning = RTU  Baud rate  Only available if:Device planning = RTU  Digit 1: Number of bits. Digit 2: E=even parity, O=odd parity, N=no parity. Digit 3: Number of stop bits. More information on the parity: It is possible that the last data bit is followed by a parity bit which is used for recognition of communication errors. The parity bit ensures that with even parity ("EVEN") always an even number of bits with valence "1" or with odd parity ("ODD") an odd number of "1" valence bits are transmitted. But it is also possible to transmit no parity bits (here the setting is "Parity = None"). More information on the stop-bits: The end of a data byte is terminated by the stop-bits.	Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.  Only available if:Device planning = RTU  The Unit Identifier is used for routing. This parameter is to be set, if a Modbus RTU and a Modbus TCP network should be coupled.  Only available if:Device planning = TCP  TCP Port Configuration. This parameter is to be set only if the default Modubs TCP Port should not be used.  Only available if:Device planning = TCP  Port number  Only available if:Device planning = TCP And Only available if:Top Port Config = Private  Within this time the answer has to be received by the SCADA system, otherwise the request will be disregarded. In that case the Scada system detects a communication failure and the Scada System has to send a new request.  Only available if:Device planning = RTU  Baud rate  Only available if:Device planning = RTU  Baud rate  Only available if:Device planning = RTU  Digit 1: Number of bits. Digit 2: E=even parity, O=odd parity, N=no parity. Digit 3: Number of stop bits. More information on the parity. It is possible that the last data bit is followed by a parity bit which is used for recognition of communication errors. The parity bit ensures that with even parity ("EVEN") always an even number of bits with valence "1" or with odd parity ("ODD") an odd number of "1" valence bits are transmitted. But it is also possible to transmit no parity bits (here the setting is "Parity = None"). More information on the stop-bits. The end of a data byte is terminated by the stop-bits.	Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.  Only available if:Device planning = RTU  The Unit Identifier is used for routing. This parameter is to be set, if a Modbus RTU and a Modbus TCP network should be coupled.  Only available if:Device planning = TCP  TCP Port Configuration. This parameter is to be set only if the default Modubs TCP Port should not be used.  Only available if:Device planning = TCP  Port number  Only available if:Device planning = TCP And Only available if:Device planning = TCP And Only available if: TCP Port Config = Private  Within this time the answer has to be received by the SCADA system, otherwise the request will be disregarded. In that case the Scada System has to send a new request.  Only available if:Device planning = RTU  Baud rate  Only available if:Device planning = RTU

Parameter	Description	Setting range	Default	Menu path
t-call	If there is no request telegram sent from Scada to the device after expiry of this time - the device concludes a communication failure within the Scada system.	1 - 3600s	10s	[Device Para /Modbus]
Scada CmdBlo	Activating (allowing)/ Deactivating (disallowing) the blocking of the Scada Commands	inactive,	inactive	[Device Para /Modbus]
Disable Latching	Disable Latching: If this parameter is active (true), none of the Modbus states will be latched. That means that trip signals wont be latched by Modbus.	inactive, active	inactive	[Device Para /Modbus]
AllowGap	If this parameter is active (True), the user can request a set of modbus register without getting an exception, because of invalid address in the requested array. The invalid addresses have a special value 0xFAFA, but the user is responsible for ignoring invalid addresses. Attention: This special value can be valid, if address is valid.	inactive, active	inactive	[Device Para /Modbus]

# Modbus® Signals (Output States)



Some signals (that are for a short time active only) have to be acknowledged separately (e.g. Trip signals) by the Communication System.

Signal	Description	
Transmission	Signal: SCADA active	
Scada Cmd 1	Scada Command	
Scada Cmd 2	Scada Command	
Scada Cmd 3	Scada Command	
Scada Cmd 4	Scada Command	
Scada Cmd 5	Scada Command	
Scada Cmd 6	Scada Command	
Scada Cmd 7	Scada Command	
Scada Cmd 8	Scada Command	
Scada Cmd 9	Scada Command	
Scada Cmd 10	Scada Command	
Scada Cmd 11	Scada Command	
Scada Cmd 12	Scada Command	
Scada Cmd 13	Scada Command	
Scada Cmd 14	Scada Command	
Scada Cmd 15	Scada Command	
Scada Cmd 16	Scada Command	

## Modbus® Values

Value	Description	Default	Size	Menu path
NoOfRequestsTotal	Total number of requests. Includes requests for other slaves.	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfRequestsForMe	Total Number of requests for this slave.	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfResponse	Total number of requests having been responded.  Only available if:Device planning = TCP	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfResponsTimeO verruns	Total number of requests with exceeded response time. Physically corrupted Frame.  Only available if:Device planning = RTU	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfOverrunErros	Total Number of Overrun Failures. Physically corrupted Frame.  Only available if:Device planning = RTU	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfParityErrors	Total number of parity errors. Physically corrupted Frame.  Only available if:Device planning = RTU	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfFrameErrors	Total Number of Frame Errors. Physically corrupted Frame.  Only available if:Device planning = RTU	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfBreaks	Number of detected communication aborts  Only available if:Device planning = RTU	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfQueryInvalid	Total number of Request errors. Request could not be interpreted	0	0 - 9999999999	[Operation /Count and RevData /Modbus]
NoOfInternalError	Total Number of Internal errors while interpreting the request.	0	0 - 9999999999	[Operation /Count and RevData /Modbus]

### **Profibus**

#### **Profibus**

#### Part 1: Configuration of the Devices

Call up »Device parameter/Profibus« and set the following communication parameter:

Slave-address, to allow clear identification of the device.

In addition to that the Master has to be provided with the GSD-file. The GSD-file can be taken from the Product-CD.

#### Part 2: Hardware Connection

- For hardware connection to the control system, there is optional an D-SUB interface at the rear side of the device.
- Connect bus and device (wiring).
- Up to 123 slaves can be connected.
- Terminate the Bus by means of an Terminate Resistor.

#### Error Handling

Information on physical communication errors, such as:

Baudrate Error

can be obtained from the event recorder or the status display.

Error Handling - Status LED at the rear side

The Profibus D-SUB interface at the rear side of the device is equipped with an status LED.

- Baud Search -> red flashing
- Baud Found -> green flashing
- Data Exchange -> green
- No Profibus/Unplugged, not connected -> red

## **Direct Commands of the Profibus**

Parameter	Description	Setting range	Default	Menu path
Reset Comds	All Profibus Commands will be reset.	inactive,	inactive	[Operation
		active		/Reset]

## **Global Protection Parameters of the Profibus**

Parameter	Description	Setting range	Default	Menu path
Assignment 1	Assignment	1n, Assignment List		[Device Para /Profibus /Assignment 1-16]
Latched 1	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 2	Assignment	1n, Assignment List		[Device Para /Profibus /Assignment 1-16]
Latched 2	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 3	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 1-16]
Latched 3	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 4	Assignment	1n, Assignment List	7.7	[Device Para /Profibus /Assignment 1-16]
Latched 4	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	[Device Para /Profibus /Assignment 1-16]

Parameter	Description	Setting range	Default	Menu path
Assignment 5	Assignment	1n, Assignment List		[Device Para /Profibus /Assignment 1-16]
Latched 5	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	[Device Para /Profibus
Assignment 6	Assignment	1n, Assignment List		/Assignment 1-16]  [Device Para /Profibus
Latched 6	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	/Assignment 1-16]  [Device Para /Profibus /Assignment 1-16]
Assignment 7	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 1-16]
Latched 7	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 8	Assignment	1n, Assignment List	-:-	[Device Para /Profibus /Assignment 1-16]
Latched 8	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 9	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 1-16]
Latched 9	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 10	Assignment	1n, Assignment List		[Device Para /Profibus /Assignment 1-16]

Parameter	Description	Setting range	Default	Menu path
Latched 10	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	,			/Assignment 1-16]
Assignment 11	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 1-16]
Latched 11	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	,			/Assignment 1-16]
Assignment 12	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 1-16]
Latched 12	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	,			/Assignment 1-16]
Assignment 13	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 1-16]
Latched 13	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 1-16]
Assignment 14	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 1-16]
Latched 14	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 1-16]
Assignment 15	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 1-16]
Latched 15	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 1-16]

Parameter	Description	Setting range	Default	Menu path
Assignment 16	Assignment	1n, Assignment List		[Device Para /Profibus /Assignment 1-16]
Latched 16	Defines whether the Input is latched.  Only available if: Latched = active	inactive,	inactive	[Device Para /Profibus /Assignment 1-16]
Assignment 17	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 17-32]
Latched 17	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 17-32]
Assignment 18	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 17-32]
Latched 18	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 17-32]
Assignment 19	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 17-32]
Latched 19	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 17-32]
Assignment 20	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 17-32]
Latched 20	Defines whether the Input is latched.  Only available if: Latched = active	inactive, active	inactive	[Device Para /Profibus /Assignment 17-32]
Assignment 21	Assignment	1n, Assignment List	-,-	[Device Para /Profibus /Assignment 17-32]

Parameter	Description	Setting range	Default	Menu path
Latched 21	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 22	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 22	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 23	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 23	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	,			/Assignment 17-32]
Assignment 24	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 24	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 25	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 25	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 26	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 26	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]

Parameter	Description	Setting range	Default	Menu path
Assignment 27	Assignment	1n, Assignment List	-,-	[Device Para /Profibus
				/Assignment 17-32]
Latched 27	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 28	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 28	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 29	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 29	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
				/Assignment 17-32]
Assignment 30	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 30	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	, , , , , , , , , , , , , , , , , , , ,			/Assignment 17-32]
Assignment 31	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]
Latched 31	Defines whether the Input is latched.	inactive,	inactive	[Device Para
	Only available if: Latched = active	active		/Profibus
	The state of the s			/Assignment 17-32]
Assignment 32	Assignment	1n, Assignment		[Device Para
		List		/Profibus
				/Assignment 17-32]

## **Communication Protocols**

Parameter	Description	Setting range	Default	Menu path
Latched 32	Defines whether the Input is latched.	inactive,	inactive	[Device Para
$\otimes$	Only available if: Latched = active	active		/Profibus /Assignment 17-32]
Slave ID	Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.	2 - 125	2	[Device Para /Profibus /Bus parameters]

# Inputs of the Profibus

Name	Description	Assignment via
Assignment 1-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 2-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 3-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 4-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 5-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 6-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 7-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 8-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 9-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 10-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 11-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 12-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]

Name	Description	Assignment via
Assignment 13-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 14-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 15-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 16-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 1-16]
Assignment 17-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 18-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 19-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 20-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 21-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 22-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 23-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 24-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 25-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]

Name	Description	Assignment via
Assignment 26-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 27-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 28-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 29-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 30-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 31-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]
Assignment 32-I	Module input state: Scada Assignment	[Device Para
		/Profibus
		/Assignment 17-32]

# **Profibus Signals (Output States)**

Signal	Description
Data OK	Data within the Input field are OK (Yes=1)
SubModul Err	Assignable Signal, Failure in Sub-Module, Communication Failure.
Connection active	Connection active
Scada Cmd 1	Scada Command
Scada Cmd 2	Scada Command
Scada Cmd 3	Scada Command
Scada Cmd 4	Scada Command
Scada Cmd 5	Scada Command
Scada Cmd 6	Scada Command
Scada Cmd 7	Scada Command
Scada Cmd 8	Scada Command
Scada Cmd 9	Scada Command
Scada Cmd 10	Scada Command
Scada Cmd 11	Scada Command
Scada Cmd 12	Scada Command
Scada Cmd 13	Scada Command
Scada Cmd 14	Scada Command
Scada Cmd 15	Scada Command
Scada Cmd 16	Scada Command

## **Profibus Values**

Value	Description	Default	Size	Menu path
Fr Sync Err	Frames, that were sent from the Master to the Slave are faulty.	1	1 - 99999999	[Operation /Count and RevData /Profibus]
crcErrors	Number of CRC errors that the ss manager has recognized in received response frames from ss (each error caused a subsystem reset)	1	1 - 99999999	[Operation /Count and RevData /Profibus]
frLossErrors	Number of frame loss errors that the ss manager recognized in received response frames from ss (each error caused a subsystem reset)	1	1 - 99999999	[Operation /Count and RevData /Profibus]
ssCrcErrors	Number of CRC errors that the subsystem has recognized in received trigger frames from host	1	1 - 99999999	[Operation /Count and RevData /Profibus]
ssResets	Number of subsystem resets/restarts from ss manager	1	1 - 99999999	[Operation /Count and RevData /Profibus]
Master ID	Device address (Master ID) within the bus system. Each device address has to be unique within a bus system.	1	1 - 125	[Operation /Status display /Profibus /State]
HO ld PSub	Handoff Id of PbSub	0	0 - 9999999999	[Operation /Status display /Profibus /State]
t-WatchDog	The Profibus Chip detects a communication issue if this timer is expired without any communication (Parameterising telegram).	0	0 - 999999999	[Operation /Status display /Profibus /State]

Value	Description	Default	Size	Menu path
Slave State	Communication State between Slave and Master.	Baud Search	Baud Search,	[Operation
			Baud Found,	/Status display
			PRM OK,	/Profibus
			PRM REQ,	/State]
			PRM Fault,	
			CFG Fault,	
			Clear Data,	
			Data exchange	
Baud rate	The baud rate that has been detected lastly, will still be shown after a connection issue.		12 Mb/s,	[Operation
			6 Mb/s,	/Status display
			3 Mb/s,	/Profibus
			1.5 Mb/s,	/State]
			0.5 Mb/s,	
			187500 baud,	
			93750 baud,	
			45450 baud,	
			19200 baud,	
			9600 baud,	
PNO Id	PNO Identification Number. GSD Identification	0C50h	0C50h	[Operation
	Number.			/Status display
				/Profibus
				/State]

#### IEC60870-5-103

IEC 103

## IEC60870-5-103 Protocol Configuration

In order to use the IEC60870-5-103 protocol it has to be assigned to the X103 Interface within the Device Planning. The device will reboot after setting this parameter.



The parameter X103 is only available if the device is at the rear side equipped with an interface like RS485 or Fiber Optic.



If the device is equipped with an Fiber Optic Interface, the Optical Rest Position has to be set within the Device Parameters .

The time-controlled IEC60870-5-103 protocol is based on the Master-Slave working principle. This means that the substation control and protection system sends an enquiry or instruction to a certain device (slave address) which will then be answered or carried out accordingly.

The device meets the compatibility mode 2. Compatibility mode 3 is not supported.

The following IEC60870-5-103-functions will be supported:

- Initialization (Reset)
- Time Synchronization
- Reading out of time stamped, instantaneous signals
- General Queries
- Cyclic Signals
- General Commands
- Transmission of Disturbance Data

#### Initialization

The communication has to be reset by a Reset Command each time that the device is turned on or that communication parameters have been changed. The "Reset CU" Command resets. The relay acts on both Reset Commands (Reset CU or Reset FCB).

The relay acts on the reset command by an identification signal ASDU 5 (Application Service Data Unit), as a reason (Cause Of Transmission, COT) for the transmission of the answer either a "Reset CU" or a "Reset FCB" will be sent depending on the type of the reset command. This information can be part of the data section of the ASDU-signal.

#### Name of the Manufacturer

The section for the identification of the software contains three digits of the device code for the identification of the device type. Beside the upper mentioned identification number the device generates a communication start event.

#### Time Synchronization

Time and date of the relay can be set by means of the time synchronization function of the IEC60870-5-103 protocol. If the time synchronization signal is send out with a confirmation request, the device will answer with a confirmation signal.

#### Spontaneous Events

The events that are generated by the device will be forwarded to the master with numbers for standard function types / standard information. The data point list comprises all events that can be generated by the device.

#### Cyclic Measurement

The device generates on a cyclic base measured values by means of ASDU 9. They can be read out via a class 2 query. Please take into account that the measured values will be send out as multiples (1.2 or 2.4 times the rated value). How to set 1.2 or 2.4 as multiplier for a value can be taken from the data point list.

The parameter "Transm priv meas val" defines if additional measurement values should be transmitted in the private part. Public and private measured values are transmitted by ASDU9. That means that either a "private" or a "public" ASDU9 will be transmitted. If this parameter is set, the ASDU9 will contain additional measured values that are an enhancement of the standard. The "private" ASDU9 is send with a fixed function type and information number that does not depend the type of device. Please refer to the data point list.

#### Commands

The data point list comprises a list of the supported commands. Any command will be responded by the device with a positive or negative confirmation. If the command is executable, the execution with the corresponding reason for the transmission (COT) will be lead in at first, and subsequently the execution will be confirmed with COT1 within a ASDU9.

#### Disturbance Recording

The disturbances recorded by the device can be read out by means described in standard IEC60870-5-103. The device is in compliance with the VDEW-Control System by transmission of an ASDU 23 without disturbance records at the beginning of an GI-Cycle.

A disturbance record contains the following information:

- Analog Measured Values, IL1, IL2, IL3, IN, Voltages VL1, VL2, VL3, VEN;
- Binary States, transmitted as marks, e.g. Alarms and Trips.
- The Transmission ratio will not be supported. The transmission ratio is included in the "Multiplier".

#### Blocking the Transmission Direction

The relay does not support functions to block the transmission in a certain direction (supervision direction).

## **Global Protection Parameters of the IEC60870-5-103**

Parameter	Description	Setting range	Default	Menu path
Slave ID	Device address (Slave ID) within the bus system. Each device address has to be unique within a bus system.	1 - 247	1	[Device Para /IEC 103]
$\bigcirc$				
t-call	If there is no request telegram sent from Scada to the	1 - 3600s	60s	[Device Para
$\bigotimes$	device after expiry of this time - the device concludes a communication failure within the Scada system.			/IEC 103]
Transm priv meas	Transmit additional (private) measuring values	inactive,	inactive	[Device Para
val		active		/IEC 103]
$\otimes$				
Baud rate	Baud rate	1200,	19200	[Device Para
		2400,		/IEC 103]
$\bigcirc$		4800,		
		9600,		
		19200,		
		38400,		
		57600		
Physical Settings		8E1,	8E1	[Device Para
	parity, N=no parity. Digit 3: Number of stop bits. More information on the parity: It is possible that the last data	801,		/IEC 103]
	bit is followed by a parity bit which is used for recognition of communication errors. The parity bit	8N1,		
	ensures that with even parity ("EVEN") always an even number of bits with valence "1" or with odd parity ("ODD") an odd number of "1" valence bits are transmitted. But it is also possible to transmit no parity bits (here the setting is "Parity = None"). More information on the stop-bits: The end of a data byte is terminated by the stop-bits.	8N2		

# IEC60870-5-103 Signals (Output States)

Signal	Description
Scada Cmd 1	Scada Command
Scada Cmd 2	Scada Command
Scada Cmd 3	Scada Command
Scada Cmd 4	Scada Command
Scada Cmd 5	Scada Command
Scada Cmd 6	Scada Command
Scada Cmd 7	Scada Command
Scada Cmd 8	Scada Command
Scada Cmd 9	Scada Command
Scada Cmd 10	Scada Command
Transmission	Signal: SCADA active
Fail phy Interf	Failure in the physical interface
Failure Event lost	Failure event lost

## IEC60870-5-103 Values

Value	Description	Default	Size	Menu path
Internal errors	Internal errors	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NReceived	Total Number of received Messages	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NSent	Total Number of sent Messages	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NBadFramings	Number of bad Messages	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NBadParities	Number of Parity Errors	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NBreakSignals	Number of Communication Interrupts	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NInternalError	Number of Internal Errors	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]
NBadCharChecksum	Number of Checksum Errors	0	0 - 999999999	[Operation
				/Count and RevData
				/IEC 103]

## IEC61850

#### IEC61850

#### Introduction


To understand the functioning and mode of operation of a substation in an IEC61850 automation environment, it is useful to compare the commissioning steps with those of a conventional substation in a Modbus TCP environment.

In a conventional substation the individual IEDs (Intelligent Electronic Devices) communicate in vertically direction with the higher level control center via SCADA. The horizontal communication is exclusively realized by wiring output relays (OR) and digital inputs (DI) among each other.

In an IEC61850 environment communication between the IEDs takes place digitally (via Ethernet) by a service called GOOSE (Generic Object Oriented Substation Event). By means of this service information about events is submitted between each IED. Therefore each IED has to know about the functional capability of all other connected IEDs.

Each IEC61850 capable device includes a description of it's own functionality and communications skills (IED Capability Description, \*.ICD).

By means of a Substation Configuration Tool to describe the structure of the substation, assignment of the devices to the primary technique, etc. a virtual wiring of the IEDs among each other and with other switch gear of the substation can be done. A description of the substation configuration will be generated in form of a \*.SCD file. At last this file has to be submitted to each device. Now the IEDs are able to communicate closed among each other, react to interlockings and operate switch gear.

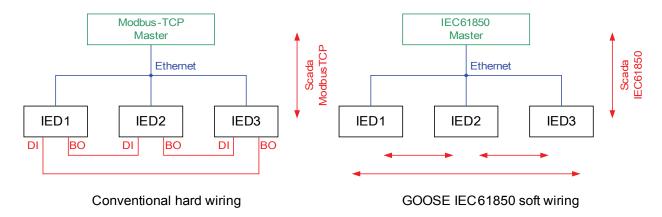

Commissioning steps for a conventional substation with modbus TCP environment:

- Parameter setting of the IEDs
- Ethernet installation
- · TCP/IP settings for the IEDs
- Wiring according to wiring scheme

Commissioning steps for a substation with IEC61850 environment:

- Parameter setting of the IEDs Ethernet installation TCP/IP settings for the IEDs
- 2. IEC61850 configuration (software wiring)
  - a) Exporting an ICD file from each device
  - b) Configuration of the substation (generating a SCD file)
  - c) Transmit SCD file to each device

## Generation/Export of a device specific ICD file

Each device of the HighPROTEC line includes a description of it's own functionality and communications skills in form of an \*.ICD file (IED Capability Description). This file can be exported as follows and be used for the configuration of the substation.



- A change of the devices parameters has an influence on the content of the ICD file.
- 1. Connect the device with your PC/Notebook.
- 2. Start Smart view.
- 3. Click on »Receive data from Device« in the menu »Device«.
- 4. Click on »IEC61850« in the menu »Device Para«.
- 5. Click on the ICD icon in the IEC61850 window.
- 6. Select a drive and file name for the ICD file and click "save".
- 7. Repeat the steps 1 to 6 for all connected devices in this IEC61850 environment.

## Generation/Export of a SCD file

Each device of the HighPROTEC can create an export it's own functionality and communications skills in form of a \*.SCD file.

- Connect the device with your PC/Notebook.
- 2. Start Smart view.
- 3. Click on » Receive data from Device« in the menu » Device«.
- 4. Click on »IEC61850« in the menu »Device Para«.
- 5. Click on the SCD icon in the IEC61850 window.
- 6. Select a drive and file name for the SCD file and click "save".
- 7. Repeat the steps 1 to 6 for all connected devices in this IEC61850 environment.

# Substation configuration, Generation of .SCD file (Station Configuration Description)

The substation configuration, i. e. connection of all logical nodes of protection and control devices, as well as switch gear usually is done with a "Substation Configuration Tool". Therefore the ICD files of all connected IEDs in the IEC61850 environment have to be available. The result of the station wide "software wiring" can be exported in the form of a SCD file (Station Configuration Description).

Suitable Substation Configuration Tools (SCT) are available by the following Companies:

H&S, Hard- & Software Technologie GmbH & Co. KG, Dortmund (Germany) (www.hstech.de). Applied Systems Engineering Inc. (www.ase-systems.com)
Kalki Communication Technologies Limited (www.kalkitech.com)

## Import of the .SCD file into the device

When the substation configuration is completed, the .SCD file has to be transmitted to all connected devices. This is has to be done as follows:

- 1. Connect the device with your PC/Notebook.
- 2. Start Smart view.
- 3. Click on »Receive data from Device« in the menu »Device«.
- 4. Click on »IEC61850« in the menu »Device Para«.
- 5. Switch the parameter » *IEC61850 Communication«* to » *OFF«* and submit the changed parameter set into the device.
- 6. Click on the IEC icon in the IEC61850 window.
- 7. Select the folder, where the .SCD file is stored. Select the .SCD file and click "open".
- 8. Now a password is requested. Enter the same password, which you use for parameter setting of the device (4 digits).
- 9. Acc. to step 5 switch on again the IEC Communication and submit the changed parameter set into the device.
- 10. Repeat the steps 1 to 9 for all devices connected to this IEC61850 environment.
- 11. If no error message occurs, the configuration has been completed successfully.



- When changing the substation configuration, usually a new .SCD file has to be generated. This .SCD file has to be mandatory transmitted to all devices by means of Smart view. For the case, that this step will be forgotten, IEC61850 malfunctions will be the result
- Provided that parameters of the devices are changed after the substation configuration completion, changes in the corresponding .ICD file may result – this in turn may make an update of the .SCD file necessary.

## **IEC 61850 Virtual Outputs**

Additionally to the standardized logical node status information up to 16 free configurable status information can be assigned to 16 Virtual Outputs. This can be done in the menu [Device Para/IEC61850].

## **Device Planning Parameters of the IEC 61850**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	use	[Device planning]
		use		

## **Direct Commands of the IEC 61850**

Parameter	Description	Setting range	Default	Menu path	
ResetStatistic	Reset of all IEC61850 diagnostic counters	inactive,	inactive	[Operation	
		active		/Reset]	

## **Global Parameters of the IEC 61850**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive, active	inactive	[Device Para /IEC61850]
VirtualOutput1	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput2	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput3	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput4	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput5	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput6	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput7	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]

Parameter	Description	Setting range	Default	Menu path
VirtualOutput8	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput9	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-:-	[Device Para /IEC61850]
VirtualOutput10	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	7.7	[Device Para /IEC61850]
VirtualOutput11	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput12	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput13	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput14	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	7.7	[Device Para /IEC61850]
VirtualOutput15	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput16	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput17	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]

Parameter	Description	Setting range	Default	Menu path
VirtualOutput18	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput19	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput20	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput21	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput22	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput23	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List	-,-	[Device Para /IEC61850]
VirtualOutput24	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput25	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput26	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput27	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]

Parameter	Description	Setting range	Default	Menu path
VirtualOutput28	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput29	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput30	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput31	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]
VirtualOutput32	Virtual Output. This signal can be assigned or visualized via the SCD file to other devices within the IEC61850 substation.	1n, Assignment List		[Device Para /IEC61850]

# States of the Inputs of the IEC 61850

Name	Description	Assignment via
VirtOut1-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut2-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut3-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut4-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut5-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut6-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut7-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut8-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut9-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut10-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut11-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut12-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut13-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut14-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut15-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut16-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut17-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut18-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]

Name	Description	Assignment via
VirtOut19-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut20-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut21-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut22-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut23-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut24-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut25-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut26-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut27-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut28-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut29-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut30-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut31-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]
VirtOut32-I	Module input state: Binary state of the Virtual Output (GGIO)	[Device Para
		/IEC61850]

# IEC 61850 Module Signals (Output States)

Signal	Description
VirtInp1	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp2	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp3	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp4	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp5	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp6	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp7	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp8	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp9	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp10	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp11	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp12	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp13	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp14	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp15	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp16	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp17	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp18	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp19	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp20	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp21	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp22	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp23	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp24	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp25	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp26	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp27	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp28	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp29	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp30	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp31	Signal: Virtual Input (IEC61850 GGIO Ind)
VirtInp32	Signal: Virtual Input (IEC61850 GGIO Ind)

## IEC 61850 Module Values

Value	Description	Default	Size	Menu path
NoOfGooseRxAll	Total number of received GOOSE messages including messages for other devices (subscribed and not subscribed messages).	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfGooseRxSubscr ibed	Total Number of subscribed GOOSE messages including messages with incorrect content.	0	0 - 999999999	[Operation /Count and RevData /IEC61850]
NoOfGooseRxCorrec t	Total Number of subscribed and correctly received GOOSE messages.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfGooseRxNew	Number of subscribed and correctly received GOOSE messages with new content.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfGooseTxAll	Total Number of GOOSE messages that have been published by this device.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfGooseTxNew	Total Number of new GOOSE messages (modified content) that have been published by this device.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfServerRequests All	Total number of MMS Server requests including incorrect requests.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfDataReadAll	Total Number of values read from this device including incorrect requests.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfDataReadCorre ct	Total Number of correctly read values from this device.	0	0 - 999999999	[Operation /Count and RevData /IEC61850]
NoOfDataWrittenAll	Total Number of values written by this device including incorrect ones.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]

Value	Description	Default	Size	Menu path
NoOfDataWrittenCorr ect	Total Number of correctly written values by this device.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]
NoOfDataChangeNot ification	Number of detected changes within the datasets that are published with GOOSE messages.	0	0 - 9999999999	[Operation /Count and RevData /IEC61850]

## Values of the IEC 61850

Value	Description	Default	Size	Menu path
GoosePublisherState	State of the GOOSE Publisher (on or off)	Off	Off,	[Operation
			On,	/Status display
			Error	/IEC61850]
GooseSubscriberStat	State of the GOOSE Subscriber (on or off)	Off	Off,	[Operation
е			On,	/Status display
			Error	/IEC61850]
MmsServerState	State of MMS Server (on or off)	Off	Off,	[Operation
			On,	/Status display
			Error	/IEC61850]

# **Time Synchronisation**

#### **TimeZones**

The user has the possibility to synchronise the device with a central time generator. This offers the following advantages:

- The time does not drift off from the reference time. A continuously accumulating deviation from the reference time thereby will be balanced. Also refer to the chapter Specifications (Tolerances Real Time Clock).
- All time synchronised devices operate with the same time. Thus logged events of the individual devices can be compared exactly and be evaluated in conjunction (single events of the event recorder, disturbance records).

The device's time can be synchronised via the following protocols:

- IRIG-B
- SNTP
- Communications-Protocol Modbus (RTU or TCP)
- Communications-Protocol IEC60870-5-103

The provided protocols use different hardware interfaces and differ also in their achieved time accuracy. Further information can be found in the chapter Specifications.

Used Protocol	Hardware-Interface	Recommended Application
Without time synchronisation		Not recommended
IRIG-B	IRIG-B Terminal	Recommended, if interface available
SNTP	RJ45 (Ethernet)	Recommended alternative to IRIG-B, especially when using IEC 61850 or Modbus TCP
Modbus RTU	RS485, D-SUB or Fibre Optic	Recommended when using Modbus RTU communication protocol and when no IRIG-B code generator is available
Modbus TCP	RJ45 (Ethernet)	Limited recommendation when Modbus TCP communication protocol is used and no IRIG-B code generator or SNTP-Server is available
IEC 60870-5-103	RS485, D-SUB or Fibre Optic	Recommended when using IEC 10870-5-103 communication protocol and no IRIG-B code generator is available

## **Accuracy of Time Synchronisation**

The accuracy of the device's synchronised system time depends on several factors:

- accuracy of the connected time generator
- used synchronisation protocol
- when using Modbus TCP or SNTP: Network load and data package transmission times



Please consider the accuracy of the used time generator. Fluctuations of the time generator's time will cause the same fluctuations of the protection relay's system time.

## **Selection of Timezone and Synchronisation Protocol**

The protection relay masters both UTC and local time. This means that the device can be synchronised with UTC time while using local time for user display.

#### Time Synchronisation with UTC time (recommended):

Time synchronisation is usually done using UTC time. This means for example that an IRIG-B time generator is sending UTC time information to the protection relay. This is the recommended use case, since here a continuous time synchronisation can be ensured. There are no "leaps in time" through change of summer- and wintertime.

To achieve that the device shows the current local time, the timezone and the change between summer- and wintertime can be configured.

Please carry out the following parameterization steps under [Device Para/ Time]:

- 1. Select your local timezone in the timezone menu.
- 2. There also configure the switching of daylight saving time.
- 3.Select the used time synchronisation protocol in the TimeSync menu (e.g. "IRIG-B").
- 4.Set the parameters of the synchronisation protocol (refer to the according chapter).

#### Time Synchronisation with local time:

Should the time synchronisation however be done using local time, then please leave the timezone to » *UTC+0 London«* and do not use switching of daylight saving time.



The synchronisation of the relay's system time is exclusively done by the synchronisation protocol selected in the menu [Device Para/ Time/ TimeSync/ Used Protocol].

## Without Time Synchronisation:

To achieve that the device shows the current local time, the timezone and the change between summer- and wintertime can be configured.

Please carry out the following parameterization steps under [Device Para/ Time]:

- 5. Select your local timezone in the timezone menu.
- 6. There also configure the switching of daylight saving time.
- 7.Select » manual« as your used protocol in the TimeSync menu.
- 8.Set date and time.

# **Global Protection Parameters of the Time Synchronization**

Parameter	Description	Setting range	Default	Menu path
DST offset	Difference to wintertime	-180 - 180min	60min	[Device Para
				/Time
				/Timezone]
DST manual	Manual setting of the Daylight Saving Time	inactive,	active	[Device Para
		active		/Time
				/Timezone]
Summertime	Daylight Saving Time	inactive,	inactive	[Device Para
	Only available if: DST manual = active	active		/Time
	on, available in 201 manda. doi:10			/Timezone]
Summertime m	Month of clock change summertime	January,	March	[Device Para
	Only available if: DST manual = active	February,		/Time
	City available ii. Be'l manaal adave	March,		/Timezone]
		April,		
		May,		
		June,		
		July,		
		August,		
		September,		
		October,		
		November,		
		December		
Summertime d	Day of clock change summertime	Sunday,	Saturday	[Device Para
	Only available if: DST manual = active	Monday,		/Time
$\bigotimes$	,	Tuesday,		/Timezone]
		Wednesday,		
		Thursday,		
		Friday,		
		Saturday,		
		General day		
Summertime w	Place of selected day in month (for clock change	First,	Last	[Device Para
	summertime)	Second,		/Time
$\bigcirc$	Only available if: DST manual = active	Third,		/Timezone]
•		Fourth,		
		Last		

Parameter	Description	Setting range	Default	Menu path
Summertime h	Hour of clock change summertime	0 - 23h	2h	[Device Para
	Only available if: DST manual = active			/Time
$\bigotimes$				/Timezone]
Summertime min	Minute of clock change summertime	0 - 59min	0min	[Device Para
	Only available if: DST manual = active			/Time
$\bigcirc$	Only available ii. Bo'l maridal addive			/Timezone]
Wintertime m	Month of clock change wintertime	January,	October	[Device Para
	Only available if: DST manual = active	February,		/Time
$\bigcirc$	Only available ii. DOT manual – active	March,		/Timezone]
•		April,		
		May,		
		June,		
		July,		
		August,		
		September,		
		October,		
		November,		
		December		
Wintertime d	Day of clock change wintertime	Sunday,	Saturday	[Device Para
	Only available if: DST manual = active	Monday,		/Time
$\bigcirc$	5 m, 1 m 20 m 20 m 20 m	Tuesday,		/Timezone]
		Wednesday,		
		Thursday,		
		Friday,		
		Saturday,		
		General day		
Wintertime w	Place of selected day in month (for clock change	First,	Last	[Device Para
	wintertime)	Second,		/Time
$\bigotimes$	Only available if: DST manual = active	Third,		/Timezone]
<b>—</b>		Fourth,		
		Last		
Wintertime h	Hour of clock change wintertime	0 - 23h	3h	[Device Para
	Only available if: DST manual = active			/Time
$\bigotimes$				/Timezone]
Wintertime min	Minute of clock change wintertime	0 - 59min	0min	[Device Para
	Only available if: DST manual = active			/Time
$\bigcirc$	only available in Bot mandar delive			/Timezone]

Parameter	Description	Setting range	Default	Menu path
Time Zones	Time Zones	UTC+14 Kiritimati	UTC+0 London	[Device Para
		UTC+13 Rawaki,		/Time
		UTC+12.75 Chatham Island,		/Timezone]
		UTC+12 Wellington,		
		UTC+11.5 Kingston,		
		UTC+11 Port Vila,		
		UTC+10.5 Lord Howe Island,		
		UTC+10 Sydney,		
		UTC+9.5 Adelaide	,	
		UTC+9 Tokyo,		
		UTC+8 Hong Kon	<b>3</b> ,	
		UTC+7 Bangkok,		
		UTC+6.5 Rangooi	1,	
		UTC+6 Colombo,		
		UTC+5.75 Kath- mandu,		
		UTC+5.5 New Del hi,	-	
		UTC+5 Islamabad	,	
		UTC+4.5 Kabul,		
		UTC+4 Abu Dhab	,	
		UTC+3.5 Tehran,		
		UTC+3 Moscow,		
		UTC+2 Athens,		
		UTC+1 Berlin,		
		UTC+0 London,		
		UTC-1 Azores,		
		UTC-2 Fern. d. No ronha,	-	
		UTC-3 Buenos Aires,		
		UTC-3.5 St. John'	5,	
		UTC-4 Santiago,		
		UTC-5 New York,		
		UTC-6 Chicago,		
		UTC-7 Salt Lake City,		
		UTC-8 Los Angeles,		

# Time Synchronisation

Parameter	Description	Setting range	Default	Menu path
TimeSync	Time synchronisation	-,	-	[Device Para
		IRIG-B,		/Time
		SNTP,		/TimeSync
		Modbus,		/TimeSync]
		IEC60870-5-103		

## **SNTP**

**SNTP** 




Important pre-condition: The protective relay needs to have access to a SNTP server via the connected network. This server preferably should be installed locally.

## Principle – General Use

SNTP is a standard protocol for time synchronisation via a network. For this at least one SNTP server has to be available within the network. The device can be configured for one or two SNTP servers.

The protection relay's system time will be synchronised with the connected SNTP server 1-4 times per minute. In turn the SNTP server synchronises its time via NTP with other NTP servers. This is the normal case. Alternatively it can synchronise its time via GPS, radio controlled clock or the like.



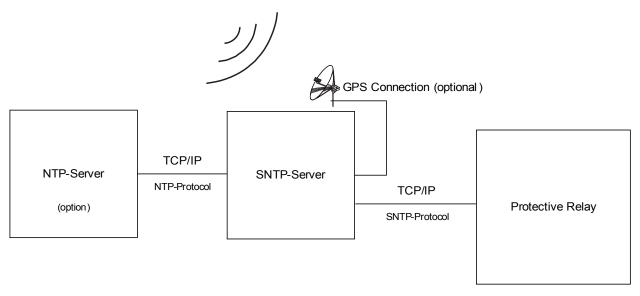

## **Accuracy**

The accuracy of the used SNTP server and the excellence of its reference clock influences the accuracy of the protection relay's clock.

For further information about accuracy refer to chapter Specifications.

With each transmitted time information, the SNTP server also sends information about its accuracy:

- Stratum: The stratum indicates over how many interacting NTP-Servers the used SNTP server is connected to an atomic or radio controlled clock.
- Precision: This indicates the accuracy of the system time provided by the SNTP server.

Additionally the performance of the connected network (traffic and data package transmission times) has an influence on the accuracy of the time synchronisation.

Recommended is a locally installed SNTP server with an accuracy of ≤200 µsec. If this cannot be realised, the connected server's excellence can be checked in the menu [Operation/Status Display/TimeSync]:

- The server quality gives information about the accuracy of the used server. The quality should be GOOD or SUFFICIENT. A server with BAD quality should not be used, because this could cause fluctuations in time synchronisation.
- The network quality gives information about the network's load and data package transmission time. The quality should be GOOD or SUFFICIENT. A network with BAD quality should not be used, because this could cause fluctuations in time synchronisation.

## **Using two SNTP Servers**

When configuring two SNTP servers, the device selects the server with the lower stratum value, because this generally provides a more precise time synchronisation. If the servers have the same stratum value, the device selects the server with the better precision. It does not matter, which of the servers is configured as server 1 or server 2.

When the last used server fails, the device automatically switches to the other server. Should the first server recover after some time, the device switches back to this (better) server automatically.

## **SNTP Commissioning**

Activate the SNTP time synchronisation by means of the menu [Device Para/ Time/ TimeSync]:

- Select » SNTP« in the time synchronisation menu.
- Set the IP address of the first server in the SNTP menu.
- Set the IP address of the second server, if available.
- Set all configured servers to "active".

## **Fault Analysis**

If there is no SNTP signal for more than 120 sec, the SNTP status changes from "active" to "inactive" and an entry in the Event Recorder will be created.

The SNTP functionality can be checked in the menu [Operation/Status Display/TimeSync/Sntp]: If the SNTP status is not indicated as being "active", please proceed as follows:

- Check if the wiring is correct (Ethernet-cable connected).
- Check if a valid IP address is set in the device (Device Para/TCP/IP).
- Check if the Ethernet connection is active (Device Para/TCP/IP/Link = Up?).
- Check if both the SNTP server and the protection device answer to a Ping.
- Check if the SNTP server is up and working.

# **Device Planning Parameters of the SNTP**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Direct Commands of the SNTP**

Parameter	Description	Setting range	Default	Menu path
Res Counter	Reset all Counters.	inactive,	inactive	[Operation
		active		/Reset]

## **Global Protection Parameters of the SNTP**

Parameter	Description	Setting range	Default	Menu path
Server1	Server 1	inactive,	inactive	[Device Para
		active		/Time
$\bigcirc$				/TimeSync
				/SNTP]
IP Byte1	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
				/SNTP]
IP Byte2	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
				/TimeSync
				/SNTP]
IP Byte3	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
				/SNTP]
IP Byte4	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
				/SNTP]

Parameter	Description	Setting range	Default	Menu path
Server2	Server 2	inactive,	inactive	[Device Para
		active		/Time
				/TimeSync
•				/SNTP]
IP Byte1	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
				/SNTP]
IP Byte2	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
				/TimeSync
•				/SNTP]
IP Byte3	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
<b>O</b>				/SNTP]
IP Byte4	IP1.IP2.IP3.IP4	0 - 255	0	[Device Para
				/Time
$\bigcirc$				/TimeSync
				/SNTP]

# Signals of the SNTP

Signal	Description
SNTP active	Signal: If there is no valid SNTP signal for 120 sec, SNTP is regarded as inactive.

## **SNTP Counters**

Value	Description	Default	Size	Menu path
NoOfSyncs	Total Number of Synchronizations.	0	0 - 999999999	[Operation
				/Count and RevData
				/TimeSync
				/SNTP]
NoOfConnectLost	Total Number of lost SNTP Connections (no sync	0	0 - 999999999	[Operation
	for 120 sec).			/Count and RevData
				/TimeSync
				/SNTP]
NoOfSmallSyncs	Service counter: Total Number of very small Time	0	0 - 999999999	[Operation
	Corrections.			/Count and RevData
				/TimeSync
				/SNTP]
NoOfNormSyncs	Service counter: Total Number of normal Time Corrections	0	0 - 999999999	[Operation
				/Count and RevData
				/TimeSync
				/SNTP]
NoOfBigSyncs	Service counter: Total Number of big Time	0	0 - 999999999	[Operation
	Corrections			/Count and RevData
				/TimeSync
				/SNTP]
NoOfFiltSyncs	Service counter: Total Number of filtered Time	0	0 - 999999999	[Operation
	Corrections			/Count and RevData
				/TimeSync
				/SNTP]
NoOfSlowTrans	Service counter: Total Number of slow Transfers.	0	0 - 999999999	[Operation
				/Count and RevData
				/TimeSync
				/SNTP]

Value	Description	Default	Size	Menu path
NoOfHighOffs	Service counter: Total Number of high Offsets.	0	0 - 999999999	[Operation
				/Count and RevData
				/TimeSync
				/SNTP]
NoOfIntTimeouts	Service counter: Total Number of internal	0	0 - 999999999	[Operation
	timeouts.			/Count and RevData
				/TimeSync
				/SNTP]
StratumServer1	Stratum of Server 1	0	0 - 999999999	[Operation
				/Status display
				/TimeSync
				/SNTP]
StratumServer2	Stratum of Server 2	0	0 - 999999999	[Operation
				/Status display
				/TimeSync
				/SNTP]

## **SNTP Values**

Value	Description	Default	Size	Menu path
Used Server	Which Server is used for SNTP synchronization.	None	Server1,	[Operation
			Server2,	/Status display
			None	/TimeSync
				/SNTP]
PrecServer1	Precision of Server 1	0ms	0 -	[Operation
			1000.00000ms	/Status display
				/TimeSync
				/SNTP]
PrecServer2	Precision of Server 2	0ms	0 - 1000.00000ms	[Operation
				/Status display
				/TimeSync
				/SNTP]
ServerQlty	Quality of Server used for Synchronization	-	GOOD,	[Operation
	(GOOD, SUFFICIENT, BAD)		SUFFICENT,	/Status display
			BAD,	/TimeSync
			-	/SNTP]

## Time Synchronisation

Value	Description	Default	Size	Menu path
NetConn Quality of Network Connection (GOOD, SUFFICIENT, BAD).	` '	-	GOOD,	[Operation
	SUFFICIENT, BAD).		SUFFICENT,	/Status display
			BAD,	/TimeSync
			-	/SNTP]

#### **IRIG-B00X**

#### IRIG-B



Requirement: An IRIG-B00X time code generator is needed. IRIG-B004 and higher will support/transmit the "year information".

If you are using an IRIG time code that does not support the "year information" (IRIG-B000, IRIG-B001, IRIG-B002, IRIG-B003), you have to set the "year" manually within the device. In these cases the correct year information is a precondition for a properly working IRIG-B.


## **Principle - General Use**

The IRIG-B standard is the most used standard to synchronize the time of protection devices in medium voltage applications.

The protection device supports IRIG-B according to the IRIG STANDARD 200-04.

This means that all time synchronization formats IRIG-B00X (IRIG-B000 / B001 / B002 / B003 / B004 / B005 / B006 / B007) are supported. It is recommended to use IRIG-B004 and higher which also transmits the "year information".

The system time of the protection device is being synchronized with the connected IRIG-B code generator once a second. The accuracy of the used IRIG-B code generator can be increased by connecting a GPS-receiver to it.

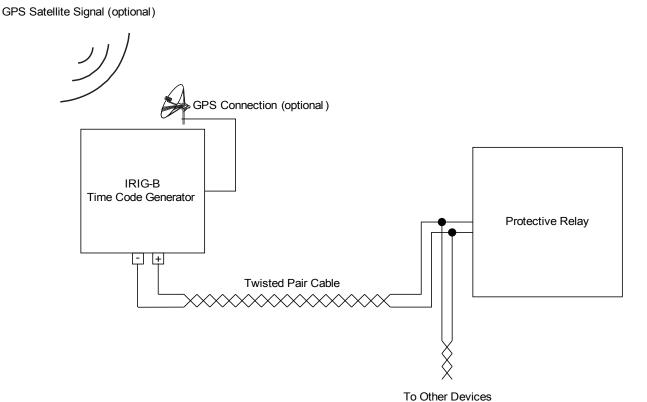

The location of the IRIG-B interface depends to the device type. Please refer to the wiring diagram supplied with the protective device.

## **IRIG-B Commissioning**

Activate the IRIG-B synchronization within menu [Device Para/ Time/ TimeSync]:

- Select » IRIG-B« in the time synchronisation menu.
- Set the time synchronization in the IRIG-B menu to »Active«.
- Select the IRIG-B type (choose B000 through B007).

## **Fault Analysis**

If the device does not receive any IRIG-B time code for more than 60 s, the IRIG-B status switches from *active«* to *inactive«* and there is created an entry within the Event Recorder.

Check the IRIG-B functionality through the menu [Operation/ Status display/ TimeSync/ IRIG-B]: Should the IRIG-B status not be reported as being *active*, please proceed as follows:

- To begin with check the IRIG-B wiring.
- Check, if the correct IRIG-B00X type is configured.

#### **IRIG-B Control Commands**

In addition to the date and time information, the IRIG-B code offers the option to transmit up to 18 control commands that can be processed by the protective device. They have to be set and issued by the IRIG-B code generator.

The protective device offers up to 18 IRIG-B assignment options for those control commands in order to carry out the assigned action. If there is a control command assigned to an action, this action is being triggered as soon as the control command is transmitted as being true. As an example there can be triggered the start of statistics or the street lighting can be switched on through a relay.

## **Device Planning Parameters of the IRIG-B00X**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Direct Commands of the IRIG-B00X**

Parameter	Description	Setting range	Default	Menu path
Res IRIG-B Cr	Resetting of the Diagnosis Counters: IRIG-B	inactive,	inactive	[Operation
		active		/Reset]

## **Global Protection Parameters of the IRIG-B00X**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Device Para
		active		/Time
				/TimeSync
				/IRIG-B]
IRIG-B00X	Determination of the Type: IRIG-B00X. IRIG-B types	IRIGB-000,	IRIGB-000	[Device Para
	differ in types of included "Coded Expressions" (year, control-functions, straight-binary-seconds).	IRIGB-001,		/Time
	John Strandstone, Strangen Lands J. Cooperation.	IRIGB-002,		/TimeSync
		IRIGB-003,		/IRIG-B]
		IRIGB-004,		
		IRIGB-005,		
		IRIGB-006,		
		IRIGB-007		

# Signals of the IRIG-B00X (Output States)

Signal	Description
active	Signal: active
inverted	Signal: IRIG-B inverted
Control Signal1	Signal: IRIG-B Control Signal
Control Signal2	Signal: IRIG-B Control Signal
Control Signal4	Signal: IRIG-B Control Signal
Control Signal5	Signal: IRIG-B Control Signal
Control Signal6	Signal: IRIG-B Control Signal
Control Signal7	Signal: IRIG-B Control Signal
Control Signal8	Signal: IRIG-B Control Signal
Control Signal9	Signal: IRIG-B Control Signal
Control Signal10	Signal: IRIG-B Control Signal
Control Signal11	Signal: IRIG-B Control Signal
Control Signal12	Signal: IRIG-B Control Signal
Control Signal13	Signal: IRIG-B Control Signal
Control Signal14	Signal: IRIG-B Control Signal
Control Signal15	Signal: IRIG-B Control Signal
Control Signal16	Signal: IRIG-B Control Signal
Control Signal17	Signal: IRIG-B Control Signal
Control Signal18	Signal: IRIG-B Control Signal

## **IRIG-B00X Values**

Value	Description	Default	Size	Menu path
NoOfFramesOK	Total Number valid Frames.	0	0 - 65535	[Operation
				/Count and RevData
				/TimeSync
				/IRIG-B]
NoOfFrameErrors	Total Number of Frame Errors. Physically corrupted Frame.	0	0 - 65535	[Operation
				/Count and RevData
				/TimeSync
				/IRIG-B]
Edges	Edges	0	0 - 65535	[Operation
				/Count and RevData
				/TimeSync
				/IRIG-B]

## **Parameters**

Parameter setting and planning can be done:

- directly at the device or
- by way of the Smart view software.

#### **Parameter Definitions**

#### **Device Parameters**

Device Parameters are part of the Parameter Tree. By means of them you can (depending on the type of device):

- Set cutoff levels.
- · Configure Digital Inputs,
- Configure Output Relays,
- Assign LEDs,
- Assign Acknowledgment Signals,
- Configure Statistics,
- · Configure Protocol Parameters,
- Adapt HMI Settings,
- Configure Recorders (reports),
- Set Date and Time,
- · Change Passwords,
- · Check the version (build) of the device.

## **Field Parameters**

*Field Parameters* are part of the Parameter Tree. Field Parameters comprise the essential, basic settings of your switchboard such as rated frequency, transformer ratios.

#### **Protection Parameters**

Protection Parameters are part of the Parameter Tree. This tree comprises:

- Global Protection Parameters are part of the Protection Parameters: All settings and assignments that
  are done within the Global Parameter Tree are valid independent of the Setting Groups. They have to be
  set once only. In addition to that they comprise the CB Management.
- The Parameter Setting Switch is part of the Protection Parameters: You can either direct switch onto a
  certain parameter setting group or you can determine the conditions for switching onto another parameter
  setting group.
- **Setting Group Parameters are part of the Protection Parameters:** By means of the Parameter Setting Group Parameters you can individually adapt your protective device to the current conditions or grid conditions. They can be individually set in each Setting group.

## **Device Planning Parameters**

**Device Planning Parameters** are part of the Parameter Tree.

- Improving the Usability (clearness): All protection modules that are currently not needed can be
- de-protected (switched to invisible) by means of Device Planning. In Menu Device Planning you can adapt
  the scope of functionality of the protective device exactly to your needs. You can improve the usability by
  de-projecting all modules that are currently not needed.
- **Adapting the device to your application:** For those modules that you need, determine how they should work (e.g. directional, non-directional, <, >...).

#### **Direct Commands**

**Direct Commands** are part of the Device Parameter Tree but they are **NOT** part of the parameter file. They will be executed directly (e.g. Resetting of a Counter).

## State of the Module Inputs

**Module Inputs** are part of the Parameter Tree. The State of the Module Input is context-dependent.

By means of the Module Inputs influence can be taken on the Modules. You can assign Signals onto **Module Inputs**. The state of the signals that are assigned to an input can be taken from the Status Display. Module Inputs can be identified by an **"-I"** at the end of the name.

#### **Signals**

Signals are part of the Parameter Tree. The state of the signal is context-dependent.

- Signals represent the state of your installation/equipment (e.g. Position Indicators of the Circuit Breaker).
- **Signals** are assessments of the state of the grid and the equipment (System OK, Transformer failure detected...).
- **Signals** represent decisions that are taken by the device (e.g. Trip command) based on your parameter settings.

# Parameters **Adaptive Parameter Sets** H2Blo [0.05...n] [0...s] [0..\*In] [0...\*In] [0...\*In] [0...\*In] ∞ active/inactive Protection Para/Global Prot Para / I-Prot / I[1]...[n] / AdaptSet... Parameter Set 1

Adaptive Parameter Sets are part of the Parameter Tree.

By means of *Adaptive Parameter Sets* you can modify temporarily single parameters within the parameter setting groups.

## NOTICE

Adaptive Parameters fall back automatically, if the acknowledged signal, that has activated them, has fallen back. Please take into account that Adaptive Set 1 is dominant to Adaptive Set 2. Adaptive Set 2 is dominant to Adaptive Set 3. Adaptive Set 3 is dominant to Adaptive Set 4.

## NOTICE

In order to increase the usability (clearness) Adaptive Parameter Sets become visible if an corresponding activation signals has been assigned (Smart view 2.0 and higher).

Example: In order to use Adaptive Parameters within Protective Element I[1] please proceed as follows:

- Assign within the Global Parameter tree within Protective Element I[1] an activation signal for AdaptiveParameterSet 1.
- AdaptiveParameterSet 1 becomes now visible within the Protection Parameter Sets for element I[1].

By means of additional activation signals further Adaptive Parameter Sets can be used.

The functionality of the IED (relay) can be enhanced / adapted by means of **Adaptive Parameters** in order to meet the requirements of modified states of the grid or the power supply system respectively to manage unpredictable events.

Moreover, the adaptive parameter can also be used to realize various special protective functions or to expand the existing function modules in a simple way without to redesign the existing hardware or software platform costly.

The *Adaptive Parameter* feature allows, besides a standard parameter set, one of the four parameter sets labeled from 1 to 4, to be used for example in a time overcurrent element under the control of the configurable Set Control Logics. The dynamical switch-over of the adaptive parameter set is only active for a particular element when its adaptive set control logic is configured and only as long as the activation signal is true.


For some protection elements such as time overcurrent and instantaneous overcurrent (50P, 51P, 50G, 51G...), besides the "default" setting there exist another 4 "alternative" settings for pickup value, curve type, time dial, reset mode set values which can be switched-over dynamically by means of the configurable adaptive setting control logics in the single set parameter.

If the *Adaptive Parameter* feature is not used, the adaptive set control logics will not be selected (assigned). The protective elements work in this case just like a normal protection using the "Default" settings. If one of the *Adaptive Set* Control logics" is assigned to a logic function, the protective element will be "switched-over" to the corresponding adaptive settings if the assigned logic function is asserted and will fall back to the "Default" Setting if the assigned signal that has been activated the *Adaptive Set* has fallen back.

#### Application Example

During a Switch-OnTo-Fault condition, it is usually requested to make the embedded protective function tripping the faulted line faster, instantaneously or sometimes non-directionally.

Such a Switch-OnTo-Fault application can easily be realized using the *Adaptive Parameter* features above mentioned: The standard time overcurrent protection element (e.g. 51P) normally works with an inverse curve type (e.g. ANSI Type A), while in case of  $\underline{SOTF}$  condition, it should trip instantaneously. If the  $\underline{SOTF}$  logic function »SOTF ENABLED« is detecting a manual circuit breaker close condition the relay switches to  $\underline{AdaptiveSet1}$  if the signal »SOTF.ENABLED« is assigned to  $\underline{AdaptiveSet1}$ . The corresponding  $\underline{AdaptiveSet1}$  will become active and that means e.g. » $\underline{curve}$  type =  $\underline{DEFT}$ « and » $\underline{t}$  = 0« sec.

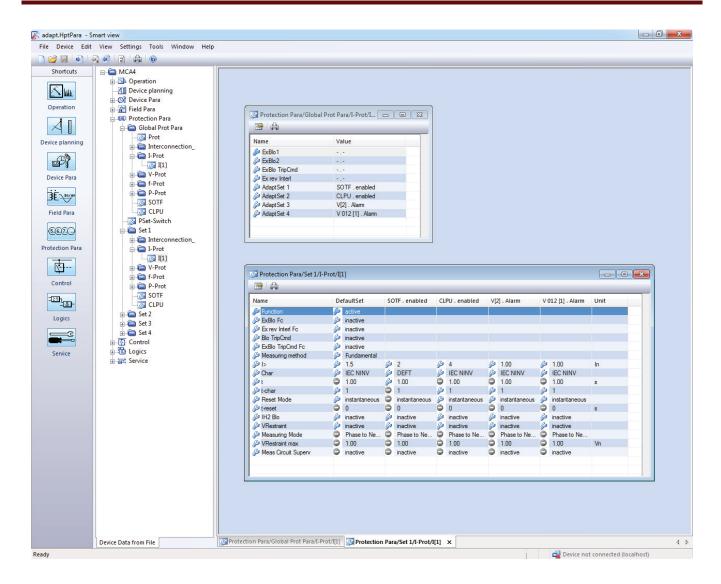

The screenshot above shows the adaptive setting configurations following applications based on only one simple overcurrent protection element:

- 1. Standard Set: Default settings
- 2. Adaptive Set 1: SOTF application (Switch-Onto-Fault)
- 3. Adaptive Set 2: <u>CLPU</u> application (Cold Load Pickup)
- 4. Adaptive Set 3: Voltage-Controlled time overcurrent protection (ANSI 51V)
- 5. Adaptive Set 4: Negative- Phase- Sequence- Voltage-Controlled time overcurrent protection

#### Application Examples

- The output signal of the <u>Switch Onto Fault</u> module can be used to activate an **Adaptive Parameter Set** that sensibilizes the overcurrent protection.
- The output signal of the <u>Cold Load Pickup</u> module can be used to activate an **Adaptive Parameter Set** that desensitizes the overcurrent protection.
- By means of Adaptive Parameter Sets an Adaptive <u>Auto Reclosure</u> can be realized. After a reclosure attempt the tripping thresholds or tripping curves of the overcurrent protection can be adapted.
- Depending on undervoltage the overcurrent protection can be modified (Voltage Controlled).
- The earth overcurrent protection can be modified by the residual voltage.
- Matching the ground current protective settings dynamically and automatically according to the singlephase load diversity (Adaptive relay Setting – Normal Setting/Alternative Setting)



Adaptive Parameter Sets are only available for devices with current protection modules.

# **Adaptive Parameter Set Activation Signals**

Name	Description
-,-	No assignment
IH2[1].Blo L1	Signal: Blocked L1
IH2[1].Blo L2	Signal: Blocked L2
IH2[1].Blo L3	Signal: Blocked L3
IH2[1].Blo IG meas	Signal: Blocking of the ground (earth) protection module (measured ground current)
IH2[1].Blo IG calc	Signal: Blocking of the ground (earth) protection module (calculated ground current)
IH2[1].3-ph Blo	Signal: Inrush was detected in at least one phase - trip command blocked.
IH2[2].Blo L1	Signal: Blocked L1
IH2[2].Blo L2	Signal: Blocked L2
IH2[2].Blo L3	Signal: Blocked L3
IH2[2].Blo IG meas	Signal: Blocking of the ground (earth) protection module (measured ground current)
IH2[2].Blo IG calc	Signal: Blocking of the ground (earth) protection module (calculated ground current)
IH2[2].3-ph Blo	Signal: Inrush was detected in at least one phase - trip command blocked.
ExP[1].Alarm	Signal: Alarm
ExP[2].Alarm	Signal: Alarm
ExP[3].Alarm	Signal: Alarm
ExP[4].Alarm	Signal: Alarm
Ext Sudd Press.Alarm	Signal: Alarm
Ex Oil Temp.Alarm	Signal: Alarm
Ext Temp Superv[1].Alarm	Signal: Alarm
Ext Temp Superv[2].Alarm	Signal: Alarm
Ext Temp Superv[3].Alarm	Signal: Alarm
SOTF.enabled	Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.
CLPU.enabled	Signal: Cold Load enabled
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input

Name	Description
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate Out	Signal: Output of the logic gate
Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output
Logics.LE8.Out	Signal: Latched Output (Q)
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output
Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate Out	Signal: Output of the logic gate
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)
Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE30.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate Out	Signal: Output of the logic gate
Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output
Logics.LE48.Out	Signal: Latched Output (Q)
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate Out	Signal: Output of the logic gate
Logics.LE54.Timer Out	Signal: Timer Output
Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate Out	Signal: Output of the logic gate
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)
Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)
Logics.LE68.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE69.Gate Out	Signal: Output of the logic gate
Logics.LE69.Timer Out	Signal: Timer Output
Logics.LE69.Out	Signal: Latched Output (Q)
Logics.LE69.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE70.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE70.Timer Out	Signal: Timer Output
Logics.LE70.Out	Signal: Latched Output (Q)
Logics.LE70.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE71.Gate Out	Signal: Output of the logic gate
Logics.LE71.Timer Out	Signal: Timer Output
Logics.LE71.Out	Signal: Latched Output (Q)
Logics.LE71.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE72.Gate Out	Signal: Output of the logic gate
Logics.LE72.Timer Out	Signal: Timer Output
Logics.LE72.Out	Signal: Latched Output (Q)
Logics.LE72.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE73.Gate Out	Signal: Output of the logic gate
Logics.LE73.Timer Out	Signal: Timer Output
Logics.LE73.Out	Signal: Latched Output (Q)
Logics.LE73.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE74.Gate Out	Signal: Output of the logic gate
Logics.LE74.Timer Out	Signal: Timer Output
Logics.LE74.Out	Signal: Latched Output (Q)
Logics.LE74.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE75.Gate Out	Signal: Output of the logic gate
Logics.LE75.Timer Out	Signal: Timer Output
Logics.LE75.Out	Signal: Latched Output (Q)
Logics.LE75.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE76.Gate Out	Signal: Output of the logic gate
Logics.LE76.Timer Out	Signal: Timer Output
Logics.LE76.Out	Signal: Latched Output (Q)
Logics.LE76.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE77.Gate Out	Signal: Output of the logic gate
Logics.LE77.Timer Out	Signal: Timer Output
Logics.LE77.Out	Signal: Latched Output (Q)
Logics.LE77.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE78.Gate Out	Signal: Output of the logic gate
Logics.LE78.Timer Out	Signal: Timer Output
Logics.LE78.Out	Signal: Latched Output (Q)
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate Out	Signal: Output of the logic gate

## Parameters

Name	Description
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)

# **Access Authorizations (access areas)**

## Passwords – Areas

The following table shows the access areas and the authorization passwords that they require in order to access them.


Area Symbol		Authorization Password	Access to:
	ð	Read Only-Lv0	Level 0 provides Read Only access to all settings and parameters of the device.  The device will fall back into this level automatically after a longer period or inactivity
	а	Prot-Lv1	This password provides access to the reset- and acknowledge options. In addition to that, it permits the execution of manual trigger signals.
	9	Prot-Lv2	This password provides access to the reset and acknowledge options. In addition to that it permits changing of protection settings and the configuration of the trip manager.
	а	Control-Lv1	This password grants permission for switching operations (switching switchgears)
	<b>a</b>	Control-Lv2	This password grants permission for switching operations (switching switchgears). In addition to that it gives access to the switchgear settings (switching authority, interlockings, general settings of switchgears, Breaker wear).
	3	Supervisor-Lv3	This password grants non-restricted access to all parameters and settings of the device (device configuration). This includes also the devices planning, device parameters (e.g. Date and Time), Field Parameters, Service Parameters and Logic Parameters.



If the device was not active within the parameter setting mode for a longer time (can be set between 20 – 3600 seconds) it changes into »Read Only-Lv0« mode automatically. This parameter (t-max-Edit) can be modified within menu [Device Para\HMI].

Access Areas (Password Level):



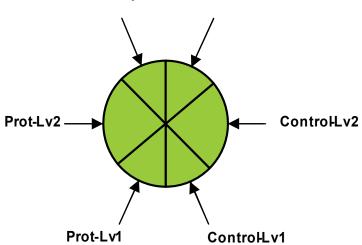

## NOTICE

You have to ensure, that the access authorizations are protected by secure passwords. These passwords have to be kept as a secret and to be known only by the authorized persons.

# NOTICE

A lock symbol indicates in the upper right corner of the display if there are any access authorizations active at the moment . That means, within the mode "Read Only Lv0" a closed (locked) lock symbol will be shown in the upper right corner of the display. As soon as there are any access authorizations active (above the "Read Only-Lv0" level), the upper right corner of the display will show an unlocked (open) lock symbol.

# NOTICE

During setting parameters the C-Button will be used for the cancelling of parameter changes. Because of that it is not possible, to acknowledge (LEDs, Output Relays...) as long as there are non saved (cached only) parameters.

Acknowledgement can only be executed, when the upper right corner of the display shows this symbol:



# NOTICE

The passwords are part of the device (fixed assignments). That means, passwords will not be overwritten, if a parameter file is transmitted into a device.

Existing passwords are persistent (assined to a device). If an offline created parameter file is transmitted into a device, or if a parameter file is transmitted from one device to another, this will have no impact on existing passwords within the device.


## Available Levels/Access Authorizations

The access authorizations are designed in form of two hierachic strings.

The supervisor (administrator) password provides access to all parameters and settings.

Access Level for Protection Settings

Access Level for Control Settings

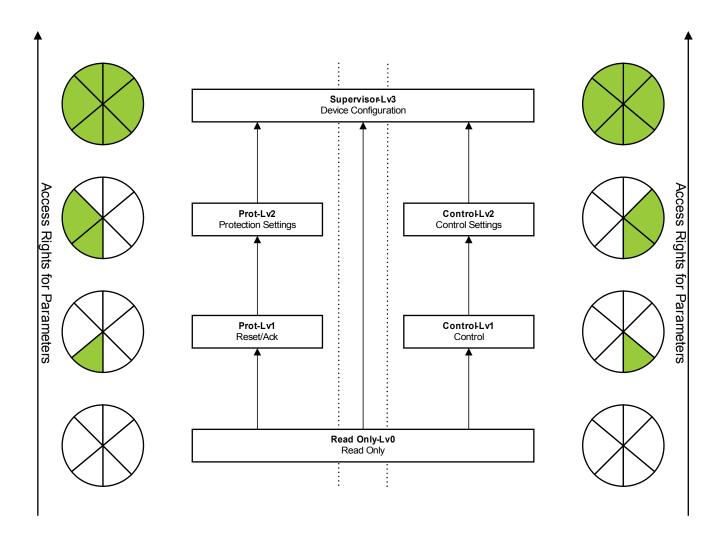

Legend: Lv = Level

Parameters are read only

Parameters can be modified

#### How to find out what access areas/levels are unlocked?

The menu [Device para\Access levels] provides the information, which access areas (authorizations) are currently unlocked.

As soon as there is an unlocked access area (authorization) above *»Read Only-Lv0«*, this will be indicated by an unlocked lock symbol within the upper right corner of the device display.

## **Unlocking Access Areas**

Within the menu [Device Para\Access level] access areas can be unlocked or locked (at the HMI).

## **Changing Passwords**

Passwords can be changed at the device in menu [Device Para/Passwords] or by means of the *Smart view* software.



A password must be a user-defined combination of the numerics 1, 2, 3 and 4.

All other characters and keys won't be accepted.

When you want to change a password, the existing one has to be entered firstly. The new password (up to 8 digits) is then to be confirmed twice. Please proceed as follows:

- In order to change the password please enter your old password by means of the Softkeys followed by pressing the »OK«-key.
- Enter the new password by means of the Softkeys and press the »OK«-key.
- Afterwards enter the new password once again by means of the Softkeys and press the »OK«-key.

## **Deactivating Passwords during Commissioning**

It is possible optionally to deactivate passwords during commissioning. It is not allowed to use this feature for other purposes than commissioning. In order to deactivate the password protection replace the existing password with an empty one for the corresponding access areas. All access authorizations (access areas) that are protected by an empty password are unlocked permanent. That means, that all parameters and settings within those areas can be modified without any further access authorization. It is no longer possible to change into the » *Read Only-Lv0«* level (the protective device will also not fall back into this mode if the maximum edit time is expired (t-max-Edit).



You have to ensure that all passwords are activated again after the commissioning. That means, that all access areas have to be protected by a password that consists of 4 digits as minimum.

Woodward will not overtake any liability for any personal injuries or damages that are caused by deactivated password protection.


## **Changing Passwords via Smart view**

Download the parameter file from the device.

- Passwords can be changed by a double-click within menu [Device Para\Password\Change Password] on the corresponding password.
- Enter the old password and the new password twice
- Confirm the changes by a cklick on »OK«.

## **Password Entry at the Panel**

Passwords can be entered by way of the Softkeys.



Example: For password (3244) press successively:

- Softkey 3
- Softkey 2
- Softkey 4
- Softkey 4

## **Password Forgotten**

By pressing the »C« key during cold booting a reset menu will be called up. By selecting »Reset All Passwords?« and confirming with »Yes« all passwords will be reset to the defaults »1234«.

## Parameter Setting at the HMI

Every parameter belongs to an access area. Editing and changing of a parameter requires a sufficient access authorization.

The User can obtain the required access authorizations by unlocking access areas in advance of parameter changes or context-dependent. In the following sections both options will be explained.

## **Option 1: Direct Authorization for an Access Area**

Call up menu [Device Para\Access level].

Select the required access level respectively navigate to the required access authorization (level). Enter the required password. If the correct password has been entered, the required access authorization will be obtained. In order to do the parameter changes please proceed as follows:

■ Move to the parameter you want to change by using the Softkeys. If the parameter is selected, the lower right corner of the display should show a »Wrench« symbol.



This symbol indicates, that the parameter is unlocked and can be edited, because the required access authorization is available. Confirm the Softkey »Wrench«, in order to edit the parameter. Change the parameter.

## Now you can:

- save the change you made and have them adopted by the system or:
- change additional parameters and save finally all the altered parameters and have them adopted by the system.

To save parameter changes immediately,

■ press the »OK« key for saving changed parameters directly and to have them adopted by the device. Confirm the parameter changes by pressing the »Yes« Softkey or dismiss by pressing »No«.

To change additional parameters and save afterwards,

move to other parameters and change them



A star symbol in front of the changed parameters indicates that the modifications have only been saved temporarily, they are not yet finally stored and adopted by the device.

In order to make things easier to follow, especially where complex parameter changes are involved, on every superior/higher-ranking menu level the intended change of the parameter is indicated by the star symbol (star trace). This makes it possible to control or follow up from the main menu level at any time where parameter changes have been made and have not been saved finally.

In addition to the star trace to the temporary saved parameter changes, a

general parameter changing symbol is faded-in at the left corner of the display, and so it is possible from each point of the menu tree to see that there are parameter changes still not adopted by the device.

Press the »OK« key to initiate the final storage of all parameter changes. Confirm the parameter changes by pressing the »Yes« softkey or dismiss by pressing Softkey »No«.

## NOTICE

If the display shows a Key Symbol instead of a Wrench-Symbol, this will indicate, that the required access authorization is not available.



In order to edit this parameter, a password is required, that provides the required authorization.

# NOTICE

Plausibility check: In order to prevent obvious wrong settings the device monitors constantly all temporary saved parameter changes. If the device detects an implausibility, this is indicated by a question mark in front of the respective parameter.

In order to make things easier to follow up, especially where complex parameter changes are involved, on every superior/higher-ranking menu level, above the temporarily saved parameters an invalidity is indicated by the question mark (plausibility trace). This makes it possible to control or follow from the main menu level at any time where implausibilities are intended to be saved.

In addition to the question mark trace to the temporary saved implausible parameter changes a general implausibility symbol/question mark is fadedin at the left corner of the display, and so it is possible to see from each point of the menu tree that implausibilities have been detected by the device.

A star/parameter change indication is always overwritten by the question mark/implausibility symbol.

If a device detects an implausibility, it rejects saving and adopting of the parameters.

#### **Option 2: Context-dependent Access Authorization**

Navigate to the parameter, that is to be changed. If the parameter is selected, the lower right corner of the display shows a *»Key«*-Symbol.



This symbol indicates, that the device is still within the »Read Only Lv0«-Level, or that the current level does not provide sufficient access rights to allow editing of this parameter.

Press this Softkey and enter the password<sup>1)</sup> that provides access to this parameter. Please change the parameter settings.

#### Now you can:

- save the change you made and have them adopted by the system or:
- change additional parameters and save finally all the altered parameters and have them adopted by the system.

To save parameter changes immediately,

■ press the »OK« key for saving changed parameters directly and to have them adopted by the device. Confirm the parameter changes by pressing the »Yes« Softkey or dismiss by pressing »No«.

To change additional parameters and save afterwards,

move to other parameters and change them



A star symbol in front of the changed parameters indicates that the modifications have only been saved temporary, they are not yet finally stored and adopted by the device.

In order to make things easier to follow up, especially where complex parameter changes are involved, on every superior/higher-ranking menu level the intended change of the parameter is indicated by the star symbol (star trace). This makes it possible to control or follow from the main menu level at any time where parameter changes have been made and have not been saved finally.

In addition to the star trace to the temporary saved parameter changes, a general parameter changing symbol is faded-in at the left corner of the display, and so it is possible from each point of the menu tree to see that there are parameter changes still not adopted by the device.

Press the »OK« key to initiate the final storage of all parameter changes. Confirm the parameter changes by pressing the »Yes« Softkey or dismiss by pressing Softkey »No«.

<sup>1)</sup> This page provides also information, which password/access authorization is required to do changes on this parameter.

# NOTICE

Plausibility check: In order to prevent obvious wrong settings the device monitors constantly all temporary saved parameter changes. If the device detects an implausibility, this is indicated by a question mark in front of the respective parameter.

In order to make things easier to follow up, especially where complex parameter changes are involved, on every superior/higher-ranking menu level, above the temporary saved parameters an invalidity is indicated by the question mark (plausibility trace). This makes it possible to control or follow from the main menu level at any time where implausibilities are intended to be saved.

In addition to the question mark trace to the temporary saved implausible parameter changes a general implausibility symbol/question mark is fadedin at the left corner of the display, and so it is possible to see from each point of the menu tree that implausibilities have been detected by the device.

A star/parameter change indication is always overwritten by the question mark/implausibility symbol.

If a device detects an implausibility, it rejects saving and adopting of the parameters.

### **Parameter Setting via Smart view**

Smart view shows within the windows, where parameters are edited also the required access level for the parameters and settings. The required access authorizations will be verified when the parameter file should be transferred into the protective device. For the transmission, two options are available.

- 1. The transfer of all Parameters. This always requires the Supervisor (administrator) password.
- 2. The transfer of the <u>modified Parameters</u> only. It has to be taken into account, the passwords that are required by this are determined by those parameters, that require the highest passwords (access authorizations).

#### Example1:

A » *Prot-Lv1* «-parameter and a » *Prot-Lv2* « parameter have been edited and should be transferred. The User will be asked for the » *Prot-Lv2* « password.

#### Example2:

A »*Prot-Lv1«* parameter and a »*Prot-Lv2«* parameter and a device planning parameter have been changed and should be transferred. The User will be asked for the »*Supervisor-Lv3«* password.

#### Example3:

A » Prot-Lv1« parameter and a » Prot-Lv2« parameter as well as a » Ctrl-Lv2« parameter have been changed and should be transferred. The User will be asked for the » Prot-Lv2« and the » Ctrl-Lv2« password.

## Changing of Parameters when using the Smart View - Example

Example: Changing of a protective parameter (to alter the characteristic for the overcurrent protection function I[1] in parameter set 1).

- In case *Smart view* is not in operation start this software.
- In case the device data has not been loaded select »Data To Be Received From The Device« in menu »Device«.
- Double-click the »Protection Para Icon« in the navigation tree.
- Double-click the »Protection Para Set Icon« in the navigation tree.
- Double-click the »Set 1 Icon« in the navigation tree.
- Double-click the »protection stage I[1]« in the navigation tree.
- In the working window a tabulated overview appears, showing the parameters assigned to this protective function.
- In this table double-click the value/parameter you want to change (here: »Char«).
- Another window (popup) is opened where you can select the required characteristic.
- Close this window by clicking the »OK« key.

## NOTICE

A star symbol in front of the changed parameters indicates that the alterations have only been saved temporarily. They are not yet finally stored and adopted by the software/device.

In order to make things easier to follow, especially where complex parameter changes are involved, on every superior/higher menu level, the intended change of the parameter is indicated by the star symbol (star trace). This makes it possible to control or follow up from the main menu level at any time where parameter changes have been made and have not been saved finally.

## NOTICE

Plausibility check: In order to prevent obvious wrong settings the software monitors constantly all temporary saved parameter changes. If it detects an implausibility, this is indicated by a question mark in front of the respective parameter.

In order to make things easier to follow up, especially where complex parameter changes are involved, on every superior/higher menu level above of the temporary saved parameters, an implausibility is indicated by a question mark (plausibility trace). This makes it possible to control or follow from the main menu level at any time where implausibilities exist.

So it is possible to see from each point of the menu tree that implausibilities have been detected by the software.

A star/parameter change indication is always overwritten by the question mark/implausibility symbol.

If the software detects an implausibility it rejects saving and adopting of the parameters.

- Additional parameters can be changed if required.
- There are two options available to transfer changed parameters into the device within menu »Device«.
- 1. »Transfer all Parameters into the Device«. This always requires the Supervisor (administrator) password.
- 2. »Transfer only modified parameters into the Device«. For this parameter transfer the User needs passwords that provide sufficient access authorization for all parameters that are to be transferred.
- Confirm the safety inquiry »Shall The Parameters Be Overwritten?«.
- Enter the password for setting parameters in the popup window.
- Confirm the inquiry »Shall The Data Be Saved Locally?« with »Yes« (recommended). Select a suitable storing location on your hard disk.
- Confirm the chosen storing location by clicking »Save«.
- The changed parameter data is saved now in the data file chosen by you. Thereafter the changed data is transferred to the device and adopted. .

## NOTICE

Once you have entered the parameter setting password, Smart view wont ask you again for the password for 10 minutes at least. This time interval will start again, each time parameters are transmitted into the device. If for more than 10 minutes no parameters are transmitted into the device, Smart view will ask you again for the password, when you are trying to transmit parameters into the device.

**Protection Parameters** 



It has to be taken into account that by deactivating, for instance, protective functions, you also change the functionality of the device.

The manufacturer does not accept liability for any personal or material damage as a result of wrong planning.

A planning/parameter setting service is also offered by *Woodward Kempen GmbH*.

The protection parameters include the following protection parameter trees:

- Global Protection Parameters: »Global Prot Para«: Here you can find all protection parameters that are valid universally, that means that they are valid independent of the protection parameter sets.
- Setting Group Parameters: »Set1..4«. The protection parameters that you set within a parameter set are only valid, if the parameter set where you set them is switched to active.

## **Setting Groups**

## **Setting Group Switch**

Within the menu »Protection Para/P-Set Switch« you have the following possibilities:

- To set one of the four setting groups active manually.
- To assign a signal to each setting group that sets this group to active.
- Scada switches the setting groups.

Option	Setting Group Switch			
Manual Selection	Switch over, if another setting group is chosen manually within the menu »Protection Para/P-Set Switch«			
Via Input Function (e.g. Digital Input)	Switch over not until the request is clear.  That means, if there is more or less than one request signal active, no switch over will be executed.			
	Example::			
	DI3 is assigned onto Parameter set 1. DI3 is active "1".			
	DI4 is assigned onto Parameter set 2. DI4 is inactive "0".			
	Now the device should switch from parameter set 1 to parameter set 2. Therefore at first DI3 has to become inactive "0". Than DI4 has to be active "1".			
	If DI4 becomes again inactive "0", parameter set 2 will remain active "1" as long as there is no clear request (e.g. DI3 becomes active "1", all the other assignments are inactive "0")			
Via Scada	Switch over if there is a clear SCADA request.			
	Otherwise no switch over will be executed.			



The description of the parameters can be found within chapter System Parameters.

# Signals that can be used for PSS

Name	Description
-,-	No assignment
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate Out	Signal: Output of the logic gate
Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output
Logics.LE8.Out	Signal: Latched Output (Q)
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate Out	Signal: Output of the logic gate
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output
Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate Out	Signal: Output of the logic gate
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate Out	Signal: Output of the logic gate
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)
Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE30.Gate Out	Signal: Output of the logic gate
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate Out	Signal: Output of the logic gate
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate Out	Signal: Output of the logic gate
Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output
Logics.LE48.Out	Signal: Latched Output (Q)
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate Out	Signal: Output of the logic gate
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate Out	Signal: Output of the logic gate
Logics.LE54.Timer Out	Signal: Timer Output
Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)

DOK-HB-MRDT4E

Name	Description
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate Out	Signal: Output of the logic gate
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate Out	Signal: Output of the logic gate
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)
Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)
Logics.LE68.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE69.Gate Out	Signal: Output of the logic gate
Logics.LE69.Timer Out	Signal: Timer Output
Logics.LE69.Out	Signal: Latched Output (Q)
Logics.LE69.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE70.Gate Out	Signal: Output of the logic gate
Logics.LE70.Timer Out	Signal: Timer Output
Logics.LE70.Out	Signal: Latched Output (Q)
Logics.LE70.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE71.Gate Out	Signal: Output of the logic gate
Logics.LE71.Timer Out	Signal: Timer Output
Logics.LE71.Out	Signal: Latched Output (Q)
Logics.LE71.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE72.Gate Out	Signal: Output of the logic gate
Logics.LE72.Timer Out	Signal: Timer Output
Logics.LE72.Out	Signal: Latched Output (Q)
Logics.LE72.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE73.Gate Out	Signal: Output of the logic gate
Logics.LE73.Timer Out	Signal: Timer Output
Logics.LE73.Out	Signal: Latched Output (Q)
Logics.LE73.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE74.Gate Out	Signal: Output of the logic gate
Logics.LE74.Timer Out	Signal: Timer Output
Logics.LE74.Out	Signal: Latched Output (Q)
Logics.LE74.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE75.Gate Out	Signal: Output of the logic gate
Logics.LE75.Timer Out	Signal: Timer Output
Logics.LE75.Out	Signal: Latched Output (Q)
Logics.LE75.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE76.Gate Out	Signal: Output of the logic gate
Logics.LE76.Timer Out	Signal: Timer Output
Logics.LE76.Out	Signal: Latched Output (Q)
Logics.LE76.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE77.Gate Out	Signal: Output of the logic gate
Logics.LE77.Timer Out	Signal: Timer Output
Logics.LE77.Out	Signal: Latched Output (Q)
Logics.LE77.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE78.Gate Out	Signal: Output of the logic gate
Logics.LE78.Timer Out	Signal: Timer Output
Logics.LE78.Out	Signal: Latched Output (Q)
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate Out	Signal: Output of the logic gate
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)

### **Setting Group Switch via Smart view**

- In case *Smart view* is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«.
- Double click the »Protection Para« icon in the navigation tree.
- Double click the »P-Set Switch« within the protection parameters.
- Configure the Setting Group Switch respectively choose an active set manually.



The description of the parameters can be found within chapter System Parameters.

#### Copying Setting Groups (Parameter Sets) via Smart view

# NOTICE

Setting groups can only be copied if there are no implausibilities (no red question mark).

It is not necessary to set up two setting groups that only differ in a few parameters.

With the help of "Smart view" you can copy simply an existing setting group to another one(not yet configured) . You only need to change those parameters where the two setting groups are different.

To establish efficiently a second parameter set where only a few parameters are different, proceed as follows:

- In case Smart view is not running please start it.
- Open an (offline) parameter file of a device or load data of a connected device.
- By way of precaution, save (the relevant) device parameters [File\Save as].
- Select »Copy Parameter Sets« out of the menu "Edit".
- Then define both, source and destination of the parameter set that should be copied (source = copy from; destination: copy to ).
- Mouse click on »OK« to start copy procedure.
- The copied parameter set is cached now (not yet saved!).
- Then, modify the copied parameter set(s), if applicable.
- Assign a new file name to the revised device parameter file and save it on your hard disk (backup copy).
- To transfer the modified parameters back to the device, click on menu item »Device« and select »Transfer All Parameters into the Device«.

### **Comparing Setting Groups via Smart View**

- In case Smart view is not running please start it.
- Click on menu item »Edit« and select »Compare Parameter Sets«.
- Select the two parameter sets from the (two) drop down menus you would like to have compared with each other.
- Press the pushbutton »compare«.
- The values that are different from the set parameters will be listed in tabular form.

## Comparing Parameter Files via Smart view

With the help of "Smart view" you can simply compare/diff the currently open parameter/device file against a file on your hard disk. The precondition is that the versions and type of devices match. Please proceed as follows:

- Click on »Compare with a Parameter File« within the menu »Device«.
- Click on the Folder icon in order to select a file on your hard disk.
- The differences will be shown in tabular form.

### **Converting Parameter Files via Smart view**

Parameter files of the same type can be up- or downgraded (converted). As many parameters as possible will be taken over.

- Parameters, that are added newly will be set to default.
- Parameters, that are not included in the target file version will be deleted.

In order to convert a parameter file please proceed as follows:

- In case *Smart view* is not in operation start this software.
- Open a parameter file or load the parameters from a device that should be converted.
- Make a backup of this file at a fail safe place.
- Choose »Save as« from menu »File«
- Enter a new file name (in order to prevent overwriting the original file)
- Choose the new file type from drop down menu »File Type«.
- Confirm the security check by clicking on »yes« if and only you are sure that the file conversion should be executed.
- In tabular form the modifications will be shown as follows.

Added parameter:	₺
Deleted parameter:	<b>%</b>

## **Setting Lock**

By means of the <u>Setting Lock</u>, parameter settings can be locked against any changes as long as the assigned signal is true (active). The <u>Setting Lock</u> can be activated within menu [Field Para/General Settings/Lock Settings].

## **Bypass of the Setting Lock**

The setting lock can be overwritten (temporarily) in case that the status of the signal that activates the setting lock cannot be modified or should not be modified (spare key).

The <u>Setting Lock</u> can be bypassed by means of the Direct Control Parameter » Setting Lock Bypass« [Field Para/General Settings/Setting Lock Bypass]. The protective device will fall back into the <u>Setting Lock</u> either:

- Directly after a parameter change has been saved, else
- 10 minutes after the bypass has been activated.

## **Device Parameters**

Sys

#### **Date and Time**

In menu »Device parameters/Date/Time« you can set date and time.

## Synchronize Date and Time via Smart View

- In case *Smart view* is not running please start it.
- If device data has not been loaded yet click »Receive Data From The Device« in menu »Device«
- Double click the »Device parameters« icon in the navigation tree.
- Double click the »Date/time-icon« within the operational data.
- Out of the working window you can now synchronize date and time of the device with your PC i.e. That means, that the device takes over date and time from your PC.

#### Version

Within this menu »Device parameters/Version« you can obtain information on the soft- and hardware version.

### **Version via Smart view**

Within this menu *»File/Properties«* you can obtain detailed information on the currently opened file like e.g. soft- and hardware version....



In order to be able to transmit a parameter file (e.g. offline created) into the device the following issues must comply:

- Type Code (written on the top of the device/type label) and
- Version of the device model (can be found in menu [Device Parameters\Version].

# **TCP/IP Settings**

Within menu »Device Para / TCP/IP« the TCP/IP settings have to be set.

The first-time setting of the TCP/IP Parameters can be done at the panel (HMI) only.



Establishing a connection via TCP/IP to the device is only possible if your device is equipped with an Ethernet Interface (RJ45).

Contact your IT administrator in order to establish the network connection.

Set the TCP/IP Parameters

Call up »Device parameter/TCP/IP« at the HMI (panel) and set the following parameters:

- TCP/IP address
- Subnetmask
- Gateway

# **Direct Commands of the System Module**

Parameter	Description	Setting range	Default	Menu path
Ack LED	All acknowledgeable LEDs will be acknowledged.	inactive,	inactive	[Operation
		active		/Acknowledge]
Ack BO	All acknowledgeable binary output relays will be	inactive,	inactive	[Operation
	acknowledged.	active		/Acknowledge]
Ack Scada	SCADA will be acknowledged.	inactive,	inactive	[Operation
		active		/Acknowledge]
Ack BO LED Scd	Reset the binary output relays, LEDs, SCADA and the	inactive,	inactive	[Operation
TCmd	Trip Command.	active		/Acknowledge]
Reboot	Rebooting the device.	no,	no	[Service
		yes		/General]
Setting Lock	Short-period unlock of the Setting Lock	inactive,	inactive	[Field Para
Bypass		active		/General settings]



CAUTION, rebooting the device manually will release the Supervision Contact.

# **Global Protection Parameters of the System**

Parameter	Description	Setting range	Default	Menu path
PSet-Switch	Switching Parameter Set	PS1,	PS1	[Protection Para
		PS2,		/PSet-Switch]
		PS3,		
		PS4,		
		PSS via Inp fct,		
		PSS via Scada		

Parameter	Description	Setting range	Default	Menu path
PS1: activated by	This Setting Group will be the active one if: The Parameter Setting Group Switch is set to "Switch via Input" and the other three input functions are inactive at the same time. In case that there is more than one input function active, no Parameter Setting Group Switch will be executed. In case all input functions are inactive, the device will keep working with the Setting Group that was activated lastly.  Only available if: PSet-Switch = PSS via Inp fct	1n, PSS	-,-	[Protection Para /PSet-Switch]
PS2: activated by	This Setting Group will be the active one if: The Parameter Setting Group Switch is set to "Switch via Input" and the other three input functions are inactive at the same time. In case that there is more than one input function active, no Parameter Setting Group Switch will be executed. In case all input functions are inactive, the device will keep working with the Setting Group that was activated lastly.	1n, PSS		[Protection Para /PSet-Switch]
PS3: activated by	Only available if: PSet-Switch = PSS via Inp fct  This Setting Group will be the active one if: The Parameter Setting Group Switch is set to "Switch via Input" and the other three input functions are inactive at the same time. In case that there is more than one input function active, no Parameter Setting Group Switch will be executed. In case all input functions are inactive, the device will keep working with the Setting Group that was activated lastly.	1n, PSS		[Protection Para /PSet-Switch]
PS4: activated by	Only available if: PSet-Switch = PSS via Inp fct  This Setting Group will be the active one if: The Parameter Setting Group Switch is set to "Switch via Input" and the other three input functions are inactive at the same time. In case that there is more than one input function active, no Parameter Setting Group Switch will be executed. In case all input functions are inactive, the device will keep working with the Setting Group that was activated lastly.  Only available if: PSet-Switch = PSS via Inp fct	1n, PSS	-:-	[Protection Para /PSet-Switch]
Ack LED	All acknowledgeable LEDs will be acknowledged if the state of the assigned signal becomes true.	1n, Assignment List		[Device Para /Ex Acknowledge]
Ack BO	All acknowledgeable binary output relays will be acknowledged if the state of the assigned signal becomes true.	1n, Assignment List	7.7	[Device Para /Ex Acknowledge]
Ack Scada	SCADA will be acknowledged if the state of the assigned signal becomes true.	1n, Assignment List	-,-	[Device Para /Ex Acknowledge]

Parameter	Description	Setting range	Default	Menu path
Scaling	Display of the measured values as primary, secondary or per unit values	Per unit values, Primary values,	Per unit values	[Device Para /Measurem Display
		Secondary values		/General settings]
Lock Settings	No parameters can be changed as long as this input is true. The parameter settings are locked.	1n, Assignment List		[Field Para /General settings]

# **System Module Input States**

Name	Description	Assignment via
Ack LED-I	Module input state: LEDs acknowledgement by digital input	[Device Para
		/Ex Acknowledge]
Ack BO-I	Module input state: Acknowledgement of the binary Output	[Device Para
	Relays	/Ex Acknowledge]
Ack Scada-I	Module input state: Acknowledge Scada via digital input. The	[Device Para
	replica that SCADA has got from the device is to be reset.	/Ex Acknowledge]
PS1-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.	[Protection Para
		/PSet-Switch]
PS2-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.	[Protection Para
		/PSet-Switch]
PS3-I	State of the module input respectively of the signal, that should	[Protection Para
	activate this Parameter Setting Group.	/PSet-Switch]
PS4-I	State of the module input respectively of the signal, that should	[Protection Para
	activate this Parameter Setting Group.	/PSet-Switch]
Lock Settings-I	State of the module input: No parameters can be changed as	[Field Para
	long as this input is true. The parameter settings are locked.	/General settings]

# **System Module Signals**

Signal	Description
Reboot	Signal: Rebooting the device: 1=Restart initiated by power supply; 2=Restart initiated by the user; 3=Set on defaults (Super Reset); 4=Restart by the debugger; 5=Restart because of configuration change; 6=General failure; 7=Restart initiated by System Abort (host side); 8=Restart initiated by watchdog timeout (host side); 9=Restart initiated by System Abort (dspside); 10=Restart initiated by watchdog timeout (dspside); 11=Power supply failure (short term interruption) or power supply voltage too low; 12=illegal memory access.
Act Set	Signal: Active Parameter Set
PS 1	Signal: Parameter Set 1
PS 2	Signal: Parameter Set 2
PS 3	Signal: Parameter Set 3
PS 4	Signal: Parameter Set 4
PSS manual	Signal: Manual Switch over of a Parameter Set
PSS via Scada	Signal: Parameter Set Switch via Scada
PSS via Inp fct	Signal: Parameter Set Switch via input function
min 1 param changed	Signal: At least one parameter has been changed
Setting Lock Bypass	Signal: Short-period unlock of the Setting Lock
Param to be saved	Number of parameters to be saved. 0 means that all parameter changes are overtaken.
Ack LED	Signal: LEDs acknowledgement
Ack BO	Signal: Acknowledgement of the Binary Outputs
Ack Counter	Signal: Reset of all Counters
Ack Scada	Signal: Acknowledge Scada
Ack TripCmd	Signal: Reset Trip Command
Ack LED-HMI	Signal: LEDs acknowledgement :HMI
Ack BO-HMI	Signal: Acknowledgement of the Binary Outputs :HMI
Ack Counter-HMI	Signal: Reset of all Counters :HMI
Ack Scada-HMI	Signal: Acknowledge Scada :HMI
Ack TripCmd-HMI	Signal: Reset Trip Command :HMI
Ack LED-Sca	Signal: LEDs acknowledgement :SCADA
Ack BO-Sca	Signal: Acknowledgement of the Binary Outputs :SCADA
Ack Counter-Sca	Signal: Reset of all Counters :SCADA
Ack Scada-Sca	Signal: Acknowledge Scada :SCADA
Ack TripCmd-Sca	Signal: Reset Trip Command :SCADA
Res OperationsCr	Signal:: Res OperationsCr
Res AlarmCr	Signal:: Res AlarmCr
Res TripCmdCr	Signal:: Res TripCmdCr
Res TotalCr	Signal:: Res TotalCr

# **Special Values of the System Module**

Value	Description	Menu path
Build	Build	[Device Para
		/Version]
Version	Version	[Device Para
		/Version]
Operating hours Cr	Operating hours counter of the protective device	[Operation
		/Count and RevData
		/Sys]

# **Field Parameters**

### Field Para

Within the field parameters you can set all parameters, that are relevant for the primary side and the mains operational method like frequency, primary and secondary values...

## **General Field Parameters**

Parameter	Description	Setting range	Default	Menu path
Phase Sequence	Phase Sequence direction	ABC,	ABC	[Field Para
		ACB		/General settings]
f	Nominal frequency	50Hz,	50Hz	[Field Para
		60Hz		/General settings]

## **Field Parameters - Phase Differential Current**

Parameter	Description	Setting range	Default	Menu path
Id Cutoff Level	The Differential Current shown in the Display or within the PC Software will be displayed as zero, if the Differential Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100In	0.005In	[Device Para /Measurem Display /Diff]
IS Cutoff Level	The Restraint Current shown in the Display or within the PC Software will be displayed as zero, if the Restraint Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100In	0.005In	[Device Para /Measurem Display /Diff]

# Field Parameters – Earth Differential Current

Parameter	Description	Setting range	Default	Menu path
IdG Cutoff Level	The Ground Differential Current shown in the Display or within the PC Software will be displayed as zero, if the Ground Differential Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100ln	0.005ln	[Device Para /Measurem Display /Diff]
ISG Cutoff Level	The GroundRestraint Current shown in the Display or within the PC Software will be displayed as zero, if the Ground Restraint Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100In	0.005ln	[Device Para /Measurem Display /Diff]

# Field Parameters - Current Related

Parameter	Description	Setting range	Default	Menu path
CT pri	Nominal current of the primary side of the current transformers.	1 - 50000A	1000A	[Field Para /CT W1]
CT sec	Nominal current of the secondary side of the current transformers.	1A, 5A	1A	[Field Para /CT W1]
CT dir	Protection functions with directional feature can only work properly if the connection of the current transformers is free of wiring errors. If all current transformers are connected to the device with an incorrect polarity, the wiring error can be compensated by this parameter. This parameter turns the current vectors by 180 degrees.	0°, 180°	0°	[Field Para /CT W1]
ECT pri	This parameter defines the primary nominal current of the connected earth current transformer. If the earth current is measured via the Holmgreen connection, the primary value of the phase current transformer must be entered here.	1 - 50000A	1000A	[Field Para /CT W1]
ECT sec	This parameter defines the secondary nominal current of the connected earth current transformer. If the earth current is done via the Holmgreen connection, the primary value of the phase current transformer must be entered here.	1A, 5A	1A	[Field Para /CT W1]
ECT dir	Earth fault protection with directional feature depends also on the correct wiring of the earth current transformer. An incorrect polarity/wiring can be corrected by means of the settings "0°" or "180°". The operator has the possibility of turning the current vector by 180 degrees (change of sign) without modification of the wiring. This means, that – in terms of figures - the determined current indicator was turned by 180° by the device.	0°, 180°	0°	[Field Para /CT W1]
IL1, IL2, IL3 Cutoff Level	The Current shown in the Display or within the PC Software will be displayed as zero, if the Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100ln	0.005ln	[Device Para /Measurem Display /CT W1]

Parameter	Description	Setting range	Default	Menu path
IG meas Cutoff Level	The measured Earth Current shown in the Display or within the PC Software will be displayed as zero, if the measured Earth Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100ln	0.005In	[Device Para /Measurem Display /CT W1]
IG calc Cutoff Level	The calculated Earth Current shown in the Display or within the PC Software will be displayed as zero, if the calculated Earth Current falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100ln	0.005In	[Device Para /Measurem Display /CT W1]
I012 Cutoff Level	The Symmetrical Component shown in the Display or within the PC Software will be displayed as zero, if the Symmetrical Component falls below this Cutoff Level. This parameter has no impact on recorders.	0.0 - 0.100ln	0.005In	[Device Para /Measurem Display /CT W1]

# **Field Parameters of the Transformer**

## <u>Transformer</u>

## **Global Protection Parameters of the Transformer**

Parameter	Description	Setting range	Default	Menu path
SN	Rated Power of the Transformer in MVA	0.001 - 2000.000MVA	11MVA	[Field Para /Transformer]
Rated Voltage (W1)	Rated Voltage (Phase-Phase) Winding Side 1	60 - 500000V	10500V	[Field Para
				/Transformer]
Rated Voltage (W2)	Rated Voltage (Phase-Phase) Winding Side 2	60 - 500000V	110000V	[Field Para
				/Transformer]
W1	Note: The zero current will be removed in order to	Υ,	D	[Field Para
Connection/Ground ing	star point is connected to ground according to the winding connection, the zero current (symmetrical	D,		/Transformer]
9		Z,		
	components) will be removed.	YN,		
		ZN		
W2 Connection/Ground	Note: The zero current will be removed in order to prevent faulty tripping of the differential protection. If a	y,	yn	[Field Para
ing	star point is connected to ground according to the	d,		/Transformer]
	winding connection, the zero current (symmetrical components) will be removed.	Z,		
	components) will be removed.	yn,		
		zn		
Phase Shift	Phase Shift between primary and secondary side. The phase shift angle is factor (1,2,311) multiplied with 30	0 - 11	1	[Field Para
	degrees.			/Transformer]
Tap changer	Tap changer, the tapchanger refers to the primary side	-15 - 15%	0%	[Field Para
	(W1).			/Transformer]

# **Blockings**

The device provides a function for temporary and permanent blocking of the complete protection functionality or of single protection stages.



Make absolutely sure that no illogical or even life-threatening blockings are allocated.

Make sure that you do not carelessly deactivate protection functions which have to be available according to the protection concept.

## **Permanent Blocking**

Switching ON or OFF the complete protection functionality

In module <u>»Protection«</u> the complete protection of the device can be switched on or off. Set the parameter *Function* to <u>»active«</u> or <u>»inactive«</u> in module <u>»Prot«</u>.



Only if in module »Prot« the parameter »Function« is = »active«, the protection is activated; i.e. with »Function« = »inactive«, no protection function is operating. Then the device cannot protect any components.

Switching modules ON or OFF

Each of the modules can be switched on or off (permanently). This is achieved when the parameter »Function« is set to »active« or »inactive« in the respective module.

Activating or deactivating the tripping command of a protection stage permanently

In each of the protection stages the tripping command to the CB can be permanently blocked. For this purpose the parameter *»TripCmd Blo«* has to be set to *»active«*.

## **Temporary Blocking**

To block the complete protection of the device temporarily by a signal

In module <u>»Prot«</u> the complete protection of the device can be blocked temporarily by a signal. On condition that a module-external blocking is permitted <u>»ExBlo Fc=active«</u>. In addition to this, a related blocking signal from the wassignment list« must have been assigned. For the time the allocated blocking signal is active, the module is blocked.



If the module <u>»Prot«</u> is blocked, the complete protection function does not work. As long as the blocking signal is active, the device cannot protect any components.

To block a complete protection module temporarily by an active assignment

- In order to establish a temporary blockage of a protection module, the parameter *»ExBlo Fc«* of the module has to be set to *»active«*. This gives the permission: »This module can be blocked«.
- Within the general protection parameters a signal has to be additionally chosen from the »ASSIGNMENT LIST«.


  The blocking only becomes active when the assigned signal is active.

To block the tripping command of a protection stage temporarily by an active assignment.

The tripping command of any of the protection modules can be blocked from external. In this case, external does not only mean from outside the device, but also from outside the module. Not only real external signals are permitted to be used as blocking signals, as for example, the state of a digital input, but you can also choose any other signal from the "assignment list".


- In order to establish a temporary blockage of a protection stage, the parameter »ExBlo TripCmd Fc« of the module has to be set to »active«. This gives the permission: »The tripping command of this stage can be blocked«.
- Within the general protection parameters, a signal has to be chosen additionally and assigned to the parameter *»ExBlo«* from the *»*assignment list«. If the selected signal is activated, the temporary blockage becomes effective.

# To Activate or Deactivate the Tripping Command of a Protection Module

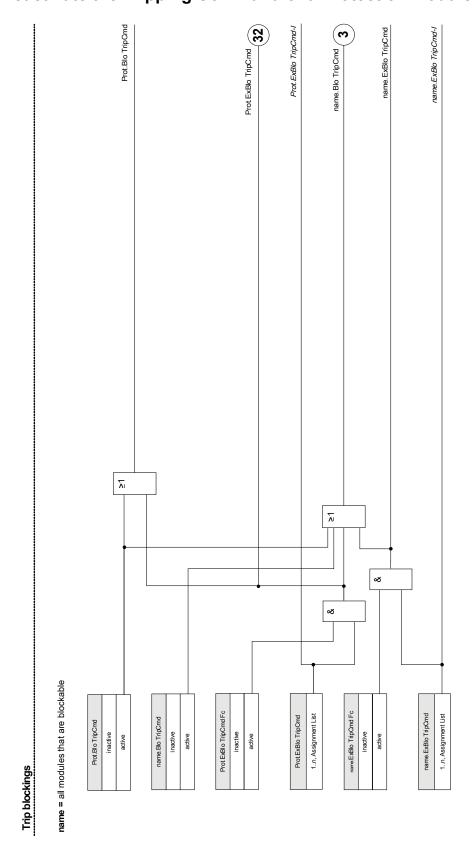


# **Activate, Deactivate Respectively Block Temporarily Protection Functions**

The following diagram applies to all protective elements except: Phase current, Earth current and Q->&V< protection elements.

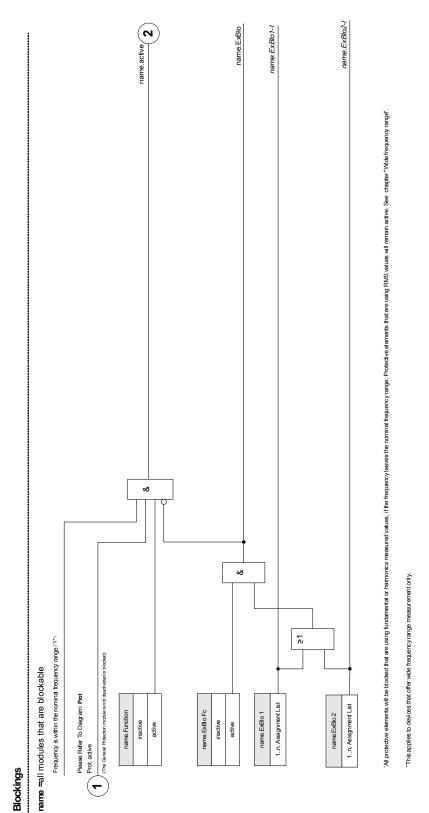


The following diagram is applies to the Q->&V< Protection:

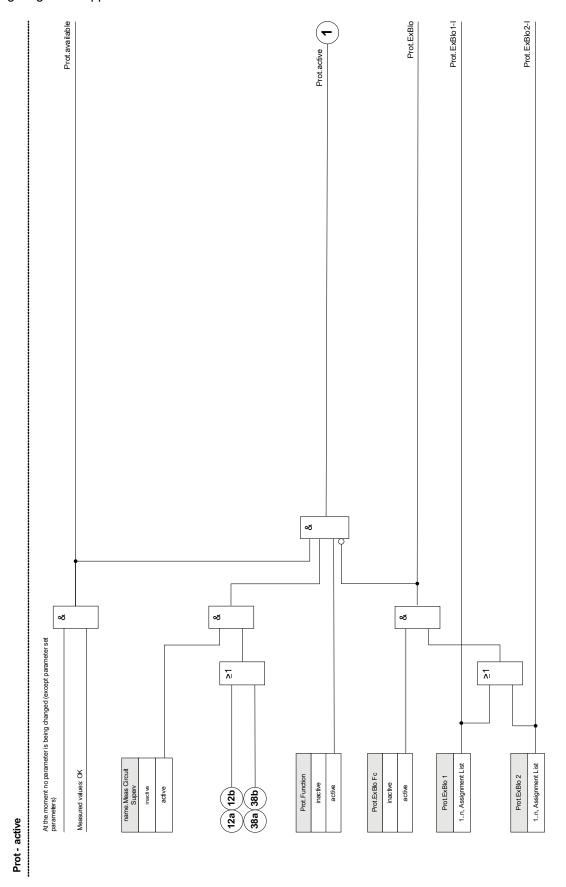


Current protective functions cannot only be blocked permanently (*»function = inactive«*) or temporarily by any blocking signal from the *»assignment list«*, but also by *»reverse Interlocking«*.

The following diagram applies phase current elements:

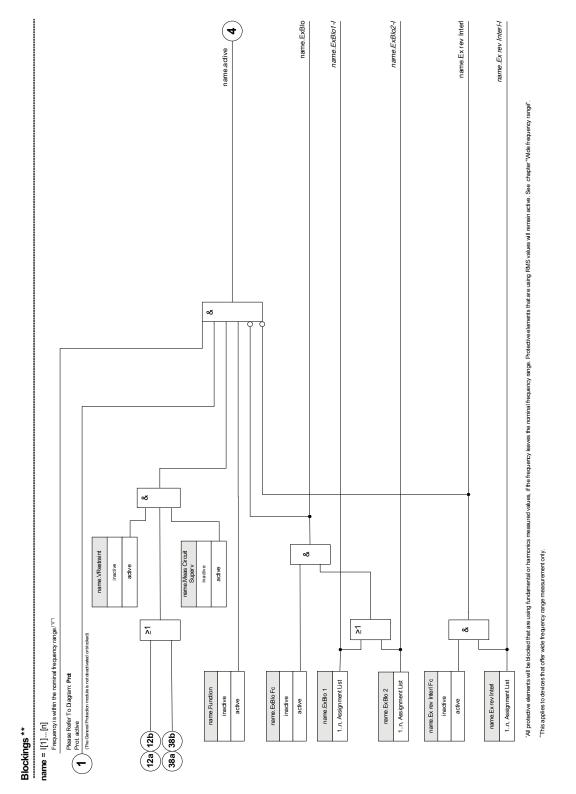

Earth current protective functions cannot only be blocked permanently (»function = inactive«) or temporarily by any blocking signal from the »assignment list«, but also by »reverse Interlocking«.

The following diagram applies to earth current elements:

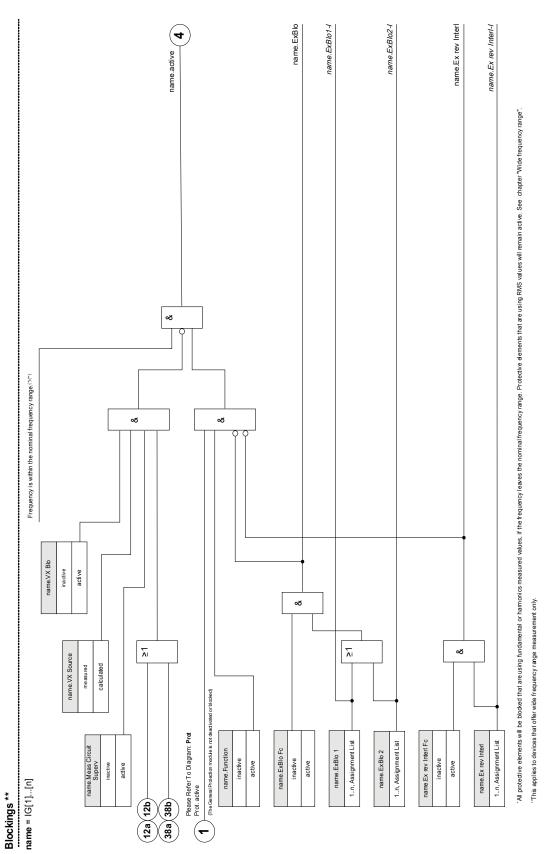

# **Module: Protection (Prot)**

**Prot** 

The module <u>»Protection«</u> serves as outer frame for all other protection modules, i.e. they are all enclosed by the module <u>»Protection«</u>.



If in module <u>»Protection«</u> the parameter »Function« is set on »inactive« or in case the module is blocked, then the complete protective function of the device does not work anymore.

#### Protection inactive

If the master module <u>»Protection«</u> was permanently deactivated or if a temporary blockage of this module has occurred and the allocated blocking signal is still active, then the complete functionality (protection) of the device is zero. In such a case the protective function is »inactive«.

#### Protection active

If the master module <u>»Protection«</u> was activated and a blockade for this module was not activated respectively the assigned blocking signal is inactive at that moment, then the <u>»Protection«</u> is <u>»active«</u>.

### **Blocking all Protective Elements enduringly**

In order to allow (the principle use) of blocking the entire protection call up the menu [Protection/Para/Global Prot Para/Prot]:

■ Set the parameter »Function = inactive«.

### **Blocking all Protective Elements temporarily**

In order to allow (the principle use) of blocking the entire protection call up the menu [Protection/Para/Global Prot Para/Prot]:

- Set the parameter » ExBlo Fc = active«;
- Choose an assignment for » ExBlo1«; and
- Optionally choose an assignment for »ExBlo2«.

If one of the signals becomes true, then the entire protection will be blocked as long as one of these signals are true.

### **Blocking all Trip Commands enduringly**


In order to allow (the principle use) of blocking the entire protection call up the menu [Protection/Para/Global Prot Para/Prot]:

■ Set the parameter »Blo TripCmd = inactive«.

## **Blocking all Trip Commands temporarily**

In order to allow (the principle use) of blocking the entire protection, call up the menu [Protection/Para/Global Prot Para/Prot]:

- Set the parameter » ExBlo TripCmd Fc= active«.
- Choose an assignment for » ExBlo TripCmd«. All Trip commands will be blocked temporarily if this assginment becomes true.

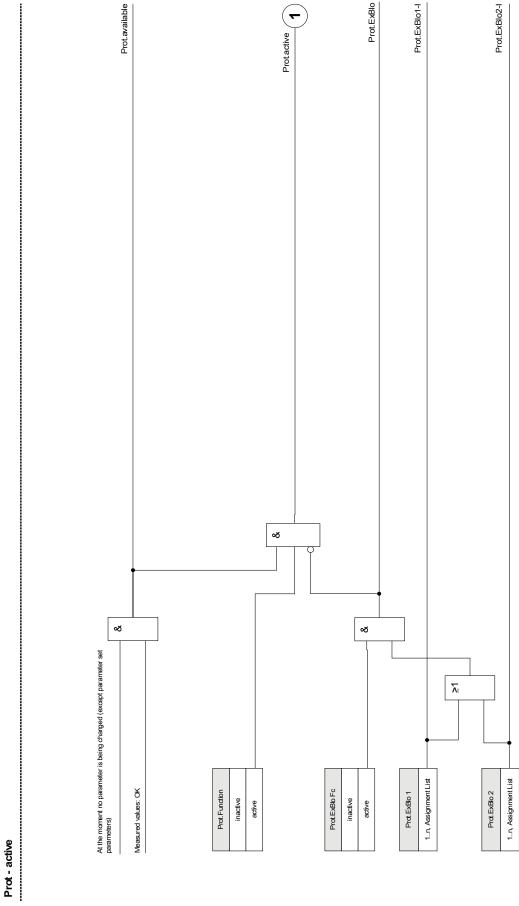

### **General Alarms and General Trips**

Each protective element generates it's own alarm and trip signals. All alarms and trip decision are passed on to the master module <u>»Prot«</u>.

If a protective element picks up, respectively has decided about a trip, two signals will be issued:

- 1. The module or the protection stage issues an alarm e.g. »I[1].ALARM« or »I[1].TRIP«.
- 2. The master module <u>»Prot«</u> collects/summarizes the signals and issues an alarm or a trip signal »Prot.Alarm« »Prot.Trip«.

Further examples: »PROT.ALARM L1« is a collective signal (OR-connected) for all alarms issued by any of the protective elements concerning Phase L1.

»Prot.Trip L1« is a collective signal (OR-connected) for all trips issued by any of the protective elements concerning Phase L1.

»Prot.Alarm« is the collective alarm signal OR-ed from all protection elements.»Prot.Trip« is the collective alarm signal OR-ed from all protection elements.


The trip commands of a the protective elements have to be assigned within the Circuit Breaker Manager <u>CB</u> <u>Manager</u>. Only those trip decisions that are assigned within the <u>CB Manager</u> are isssued to the Circuit Breaker.




Caution: Trip commands that are not assigned within the Circuit Breaker Manager (CB Manager) are not issued to a circuit breaker.

The CB Manager issues the trip commands to a circuit breaker.


Assign within the Circuit Breaker Manager all trip commands that have to switch a circuit breaker.

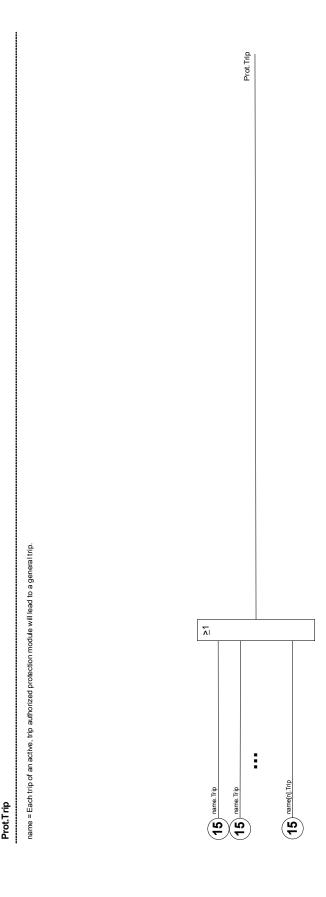

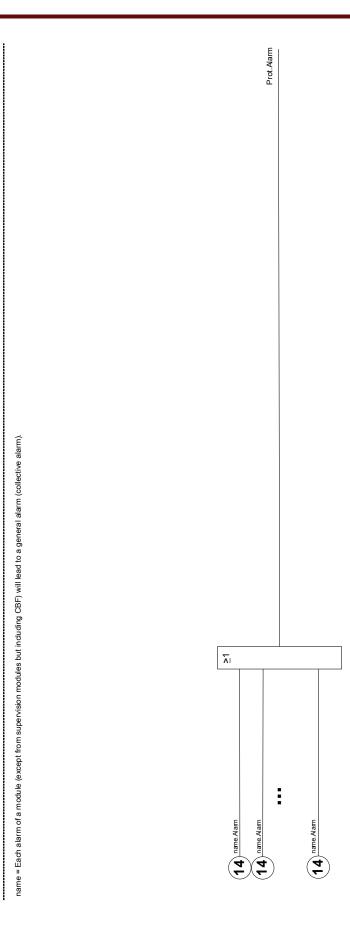

Prot.Trip G Prot.Trip L3 Each phase selective trip of a trip authorized module (I, IG, V, VX depending on the device type) will lead to a phase selective general trip. 7 7 7 7 VG[n].TripCmd (16) [[n]. Trip L1 20 Vinj.TripL1 (21) V(1).TripL2 (22) V(1].TripL3 20 V(1).TripL1 21 Vinj.TripL2 (17) [[n]].Trip L2 (19) IGINI.Trip (16) I[1]. Trip L1 (17) I[1]. Trip L2 18) I[1].Trip L3 (18) [[n].Trip L3 (19) IG[1].Trip

Prot.Trip

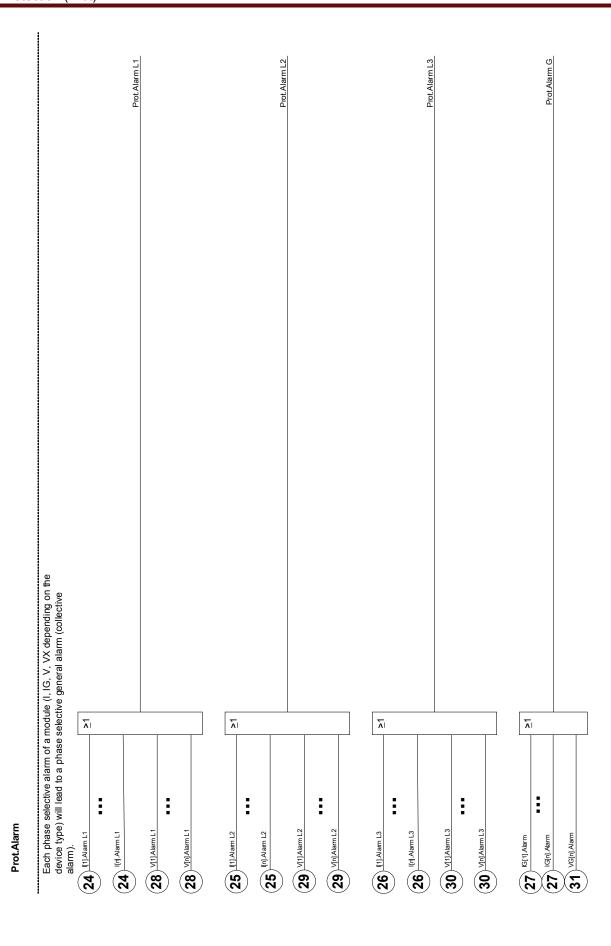

## **Direct Commands of the Protection Module**

Parameter	Description	Setting range	Default	Menu path
Res Fault a Mains	Resetting of fault number and number of grid faults.	inactive,	inactive	[Operation
No		active		/Reset]

## **Global Protection Parameters of the Protection Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	active	[Protection Para
		active		/Prot]
ExBlo Fc	Activate (allow) the external blocking of the global protection functionality of the device.	inactive,	inactive	[Protection Para
		active		/Global Prot Para /Prot]
ExBlo1	If external blocking of this module is activated (allowed), the global protection functionality of the	1n, Assignment List		[Protection Para
	device will be blocked if the state of the assigned signal becomes true.			/Prot]
ExBlo2	If external blocking of this module is activated (allowed), the global protection functionality of the device will be blocked if the state of the assigned signal becomes true.	1n, Assignment List		[Protection Para /Global Prot Para /Prot]
Blo TripCmd	Permanent blocking of the Trip Command of the entire Protection.	inactive,	inactive	[Protection Para /Global Prot Para
				/Prot]
ExBlo TripCmd Fc	Activate (allow) the external blocking of the trip command of the entire device.	inactive,	inactive	[Protection Para
		active		/Prot]
ExBlo TripCmd	If external blocking of the tripping command is activated (allowed), the tripping command of the entire device will be blocked if the state of the assigned signal becomes			[Protection Para /Global Prot Para
	true.			/Prot]

# **Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Prot]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Prot]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Prot]

# **Protection Module Signals (Output States)**

Signal	Description
available	Signal: Protection is available
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm L1	Signal: General-Alarm L1
Alarm L2	Signal: General-Alarm L2
Alarm L3	Signal: General-Alarm L3
Alarm G	Signal: General-Alarm - Earth fault
Alarm	Signal: General Alarm
Trip L1	Signal: General Trip L1
Trip L2	Signal: General Trip L2
Trip L3	Signal: General Trip L3
Trip G	Signal: General Trip Ground fault
Trip	Signal: General Trip
Res Fault a Mains No	Signal: Resetting of fault number and number of grid faults.

## **Protection Module Values**

Parameter	Description
FaultNo	Disturbance No
	Number of grid faults: A grid fault, e.g. a short circuit, might cause several faults with trip and autoreclosing, each fault being identified by an increased fault number. In this case, the grid fault number remains the same.

## Switchgear/Breaker - Manager



WARNING Misconfiguration of the switchgear can result in death or serious injury.

Beside protection functions, protective relays more and more will take care about controlling switchgear, like circuit breakers, load break switches, disconnectors and ground connectors.

The Switchgear/Breaker-Manager of this protective device is designed to manage one switchgear.

The correct configuration is an indispensable precondition for the proper functioning of the protective device. This also is the case, when the switchgear is not controlled, but supervised only.

### Single Line Diagram

The single line diagram includes the graphically description of the switchgear and its designation (name) as well as its features (short circuit proof or not ...). For displaying in the devices software, the switchgear' designations (e. g. QA1, QA2, instead of SG[x]) will be taken from the single line diagram (configuration file).

The configuration file includes the single line diagram and the switchgear properties. Switchgear properties and single line diagram are coupled via the configuration file.

### **Switchgear Configuration**

#### Wiring

At first the switchgears' positioning indicators have to be connected to the digital inputs of the protection device. One of the position indicators (either the »Aux ON« or the »Aux OFF«) contact has to be connected necessarily. It is recommended to connect both contacts.

Thereafter the command outputs (relay outputs) have to be connected with the switchgear.



Please observe the following option: In the general settings of a circuit breaker, the ON/OFF commands of a protection element can be issued to the same output relays, where the other control commands are issued.

If the commands are issued to different relays output relays the amount of wiring increases.

#### **Assignment of Position Indications**

The position indication is needed by the device to get (evaluate) the information about the current status /position of the breaker. The switchgears' position is shown in the devices display. Each position change results in a change of the switchgear symbol.

## NOTICE

For the detection of a switchgear's position always two separate Aux contacts are recommended! If only one Aux contact is used, no intermediate or disturbed positions can be detected.

A reduced transition supervision (time between issue of the command and position feedback indication of the switchgear) is also possible by one Aux contact.

In the menu [Control/Bkr/Pos Indicators wiring] the assignments for the position indications have to be set.

Detection of switchgear position with two Aux contacts - Aux ON and Aux OFF (recommended!)

For detection of position the switchgear is provided with Aux contacts (Aux ON and Aux OFF). It is recommended to use both contacts to detect intermediate and disturbed positions too.

The protection device continuously supervises the status of the inputs *»Aux ON-I«* and *»Aux OFF-I«*. These signals are validated based on the supervision timers *»t-Move ON«* and *»t-Move OFF«* validation functions. As a result, the switchgear position will be detected by the following signals:

- Pos ON
- Pos OFF
- Pos Indeterm
- Pos Disturb.
- Pos (State=0,1,.2 or 3)

#### Supervision of the ON command

When an ON command is initiated, the »*t-Move ON«* timer will be started. While the timer is running, the »POS INDETERM« State will become true. If the command is executed and properly fed back from the switchgear before the timer has run down, »POS ON« will become true. Otherwise, if the timer has expired »POS DISTURB« will become true.

#### Supervision of the OFF command

When an OFF command is initiated, the »*t-Move OFF«* timer will be started. While the timer is running, the »POS INDETERM« State will become true. If the command is executed and properly fed back before the timer has run down, »POS OFF« will become true. Otherwise, if the timer has expired »POS DISTURB« will become true.

The following table shows how switchgear positions are validated:

States of the	Digital Inputs	Validated Switchgear Positions				
Aux ON-I	Aux OFF-I	POS ON	POS OFF	POS Indeterm	POS Disturb	POS State
0	0	0	0	1 (while a Moving timer is running)	0 (while a Moving timer is running)	0 Intermediate
1	1	0	0	1 (while a Moving timer is running)	0 (while a Moving timer is running)	0 Intermediate
0	1	0	1	0	0	1 OFF
1	0	1	0	0	0	2 ON
0	0	0	0	0 (Moving timer elapsed)	1 (Moving timer elapsed)	3 Disturbed
1	1	0	0	0 (Moving timer elapsed)	1 (Moving timer elapsed)	3 Disturbed

#### Single Position Indication Aux ON or Aux OFF

If the single pole indication is used, the »SI SINGLE CONTACTIND « will become true.

The moving time supervision works only in one direction. If the Aux OFF signal is connected to the device, only the "OFF command" can be supervised and if the Aux ON signal is connected to the device, only the "ON command" can be supervised.

#### Single Position Indication - Aux ON

If only the Aux ON signal is used for the Status Indication of an "ON command", the switch command will also start the moving time, the position indicates an INTERMEDIATE position during this time interval. When the switchgear reaches the end position indicated by the signals »Pos ON« and »CES success« before the moving time has elapsed the signal Pos Indeterm disappears.

If the moving time elapsed before the switchgear has reached the end position, the switching operation was not successful and the Position Indication will change to POS Disturb and the signal Pos Indeterm disappears.

The following table shows how breaker positions are validated based on Aux ON:

States of the	e Digital Input	Validated Switchgear Positions				
Aux ON-I	Aux OFF-I	POS ON	POS OFF	POS Indeterm	POS Disturb	POS State
0	Not wired	0	0	1 (while t-Move ON is running)	0 (while t-Move ON is running)	0 Intermediate
0	Not wired	0	1	0	0	1 OFF
1	Not wired	1	0	0	0	2 ON

If there is no digital input assigned to the »Aux On« contact, the position indication will have the value 3 (disturbed).

#### Single Position Indication - Aux OFF

If only the Aux OFF signal is used for the monitoring of the "OFF command", the switch command will start the moving timer. The Position Indication will indicate an INTERMEDIATE position. When the the switchgear reaches its end position before the moving timer elapses, and »CES succesf« will be indicated. At the same time the signal »Pos Indeterm« disappears.

If the moving time elapsed before the switchgear has reached the OFF position, the switching operation was not successful and the Position Indication will change to »Pos Disturb« and the signal »Pos Indeterm« disappears.

The following table shows how breaker positions are validated based on Aux OFF:

States of the	e Digital Input	Validated Switchgear Positions				
Aux ON-I	Aux OFF-I	POS ON	POS OFF	POS Indeterm	POS Disturb	POS State
Not wired	0	0	0	1 (while t-Move OFF is running)	0 (while t-Move OFF is running)	0 Intermediate
Not wired	0	0	1	0	0	1 OFF
Not wired	1	1	0	0	0	2 ON

If there is no digital input assigned to the »Aux OFF« contact, the position indication will have the value 3 (disturbed).

#### **Setting of Supervision Times**

In the menu [Control/Bkr/General Settings] the supervision times of the individual switchgear have to be set. Dependent on the type of switchgear it can be necessary to set further parameters.

#### Interlockings


To avoid faulty operations, interlockings have to be provided. This can be realised mechanically, or electrically within the menu [Control/Bkr/General Settings].

For a controllable switchgear up to three interlockings can be assigned in both switching directions (ON/OFF). These interlockings prevent switching in the corresponding direction.

The protection OFF command and the reclosing command of the AR\* module are always executed without interlockings. For the case, that a protection OFF command must not be issued, this must be blocked separately.

Further interlockings can be realised by means of the Logic module.

<sup>\*=</sup>availability depends on ordered device.

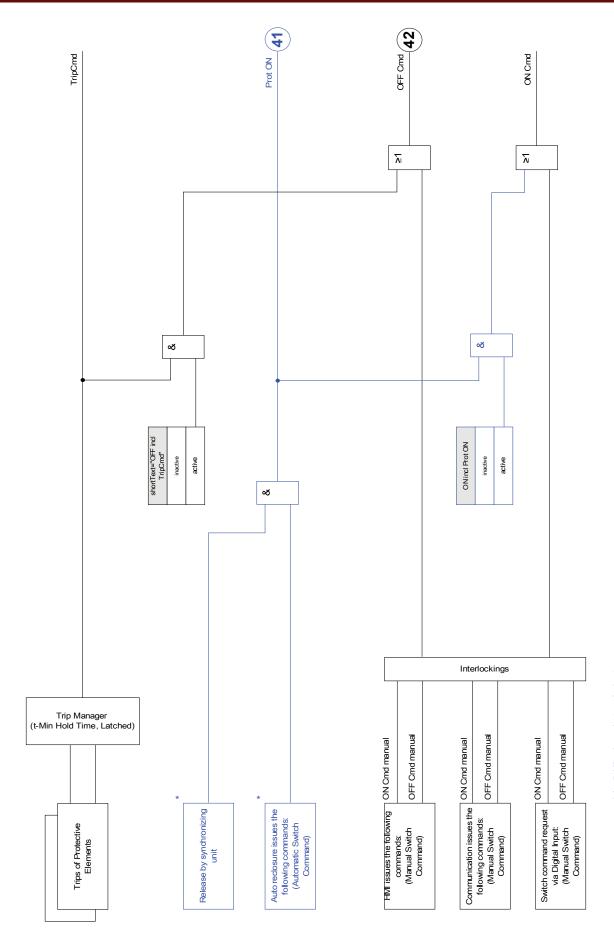



\* Availability dependent on device type

#### **Trip Manager – Assignment of commands**

The trip commands of the protection elements have to be assigned within menu [Control/Bkr/Trip Manager] to the switchgear (presumed, that the switchgear is make/break capable).

In the Trip Manger all tripping commands are combined by an "OR" logic. The actual tripping command to the switchgear is exclusively given by the Trip Manager. This means, that only tripping commands which are assigned in the Trip Manager lead to an operation of the switchgear. In addition to that, the User can set the minimum hold time of the tripping command within this module and define whether the tripping command is latched or not.

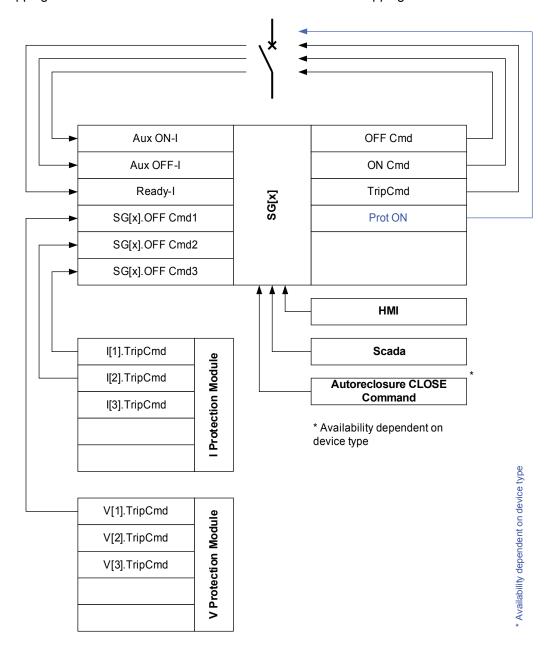

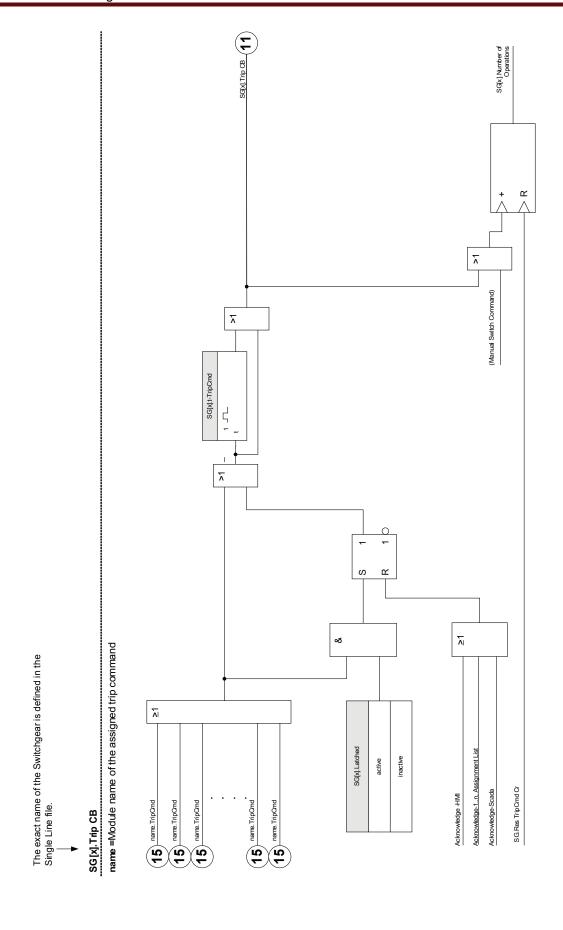

#### Ex ON/OFF

If the switchgear should be opened or closed by an external signal, the User can assign one signal that will trigger the ON and one signal that will trigger the OFF command (e.g. digital inputs or output signals of the Logics) within menu [Control/Bkr/Ex ON/OFF Cmd] . An OFF command has priority. ON commands are slope oriented, OFF commands are level oriented

### Synchronised Switching\*


\*=availability depends on ordered device type

Before a switchgear may connect two mains sections, synchronism of these sections must be assured. In the submenu [Synchronous Switching] the parameter »Synchronism« defines which signal indicates synchronism.

If the synchronism condition shall be evaluated by the internal Synch-Check module the signal »Sync. Ready to Close« (release by synch-check module) has to be assigned. Alternatively a digital input or a logic output can be assigned.

In the synchronisation mode "Generator-to-System" additionally the synchronism request has to be assigned to the Sync-check function in the menu [Protection Para\Global Prot Para\Sync].

If a synchronism signal is assigned, the switching command will only be executed, when the synchronism signal will become true within the maximum supervision time » *t-MaxSyncSuperv«*. This supervision time will be started with the issued ON command. If no synchronism signal has been assigned, the synchronism release is permanently.

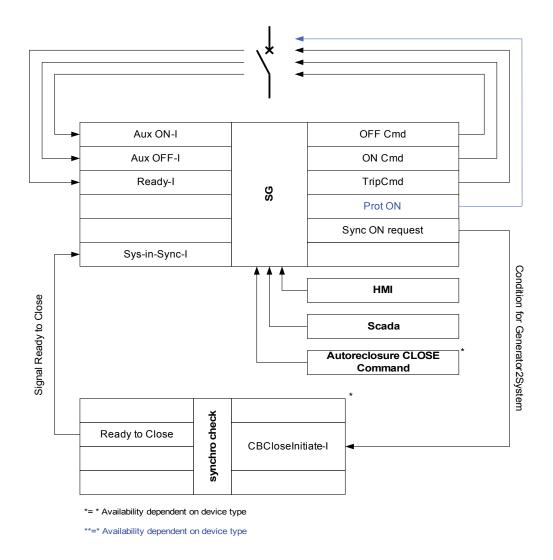

### **Switching Authority**

For the Switching Authority [Control\General Settings], the following general settings are possible:

NONE: No control function;

LOCAL: Control only via push buttons at the panel;

REMOTE: Control only via SCADA, digital inputs, or internal signals; and LOCAL&REMOTE: Control via push buttons, SCADA, digital inputs, or internal signals.

#### Non interlocked Switching

For test purposes, during commissioning and temporarily operations, interlockings can be disabled.



WARNING: Non interlocked Switching can lead to serious injuries or death!

For non interlocked switching the menü [Control\General Settings] provides the following options:

- Non interlocked switching for one single command
- Permanent
- Non interlocked switching for a certain time
- Non interlocked switching, activated by an assigned signal

The set time for non interlocked switching applies also for the "single Operation" mode.

#### **Manual Manipulation of the Switchgear Position**

In case of faulty position indication contacts (Aux contacts) or broken wires, the position indication resulted from the assigned signals can be manipulated (overwritten) manually, to keep the ability to switch the affected switchgear. A manipulated switchgearposition will be indicated on the display by an exclamation mark "!" beside the switchgear symbol.



WARNING: Manipulation of the Switchgear Position can lead to serious injuries or death!

#### **Double Operation Locking**

All control commands to any switchgear in a bay have to be processed sequentially. During a running control command no other command will be handled.

#### **Switch Direction Control**

Switching command are validated before execution. When the switchgear is already in the desired position, the switch command will not be issued again. An opened circuit breaker cannot be opened again. This also applies for switching command at the HMI or via SCADA.

#### **Anti Pumping**

By pressing the ON command softkey only a single switching ON impulse will be issued independent, how low the softkey is actuated. The switchgear will close only once per close command.

#### **Counters of the Switching Authority**

Name	Description	Assignment via
CES SAuthority	Command Execution Supervision: Number of rejected Commands because of missing switching authority.	
CES DoubleOperating	Command Execution Supervision: Number of rejected Commands because a second switch command is in conflict with a pending one.	
CES No. of rej. Com	Command Execution Supervision: Number of rejected Commands because Locked by ParaSystem	

### **Switchgear Wear**



**NOTICE:** Current related functions of the swichtgear wear element (e.g. breaker wear curve) are available in devices only, that offer minimum one current measurement (card).

#### **Switchgear Wear Features**

The sum of the accumulated interrupted currents.

A »SGwear Slow Switchgear« might indicate malfunction at an early stage.

The protective relay will calculate the »SG OPEN Capacity « continuously. 100% means, that switchgear maintenance is mandatory now.

The protective relay will make a alarm decision based on the curve that the user provides.

The relay will monitor the frequency of ON/OFF cycles. The User can set thresholds for the maximum allowed sum of interrupt currents and the maximum allowed sum of interrupt currents per hour. By means of this alarm, excessive switchgear operations can be detected at an early stage.

#### **Slow Switchgear Alarm**

An increase of the close or opening time of the switchgear is an indication for the maintenance need. If the measured time exceeds the time »*t-Move OFF«* or »*t-Move ON«*, the signal »SGwear Slow Switchgear« will be activated.


#### **Switchgear Wear Curve**

In order to keep the switchgear in good working condition, the switchgear needs to be monitored. The switchgear health (operation life) depends above all on:

- The number of CLOSE/OPEN cycles.
- The amplitudes of the interrupting currents.
- The frequency that the switchgear operates (Operations per hour).

The User has to maintain the switchgear accordingly to the maintenance schedule that is to be provided by the manufacturer (switchgear operation statistics). By means of up to ten points that the user can replicate the switchgear wear curve within menu [Control/SG/SG[x]/SGW] . Each point has two settings: the interrupt current in kilo amperes and the allowed operation counts. No matter how many points are used, the operation counts the last point as zero. The protective relay will interpolate the allowed operations based on the switchgear wear curve. When the interrupted current is greater than the interrupt current at the last point, the protective relay will assume zero operation counts.

#### Breaker Maintenance Curve for a typical 25kV Breaker

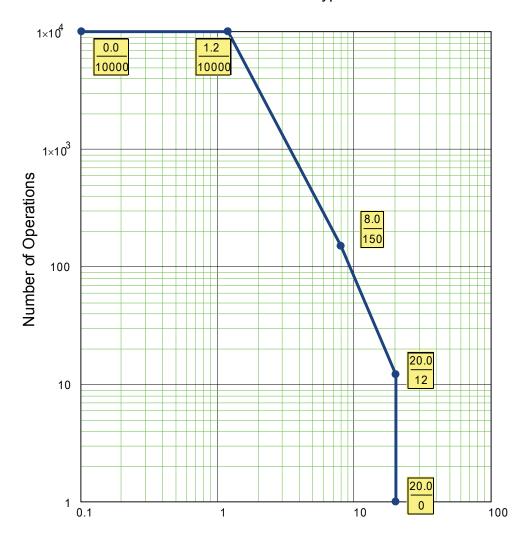

Interrupted Current in kA per operation

## **Global Protection Parameters of the Breaker Wear Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Control
		W2		/SG
				/SG[1]
				/SG Wear]
Operations Alarm	Service Alarm, too many Operations	1 - 100000	9999	[Control
				/SG
				/SG[1]
				/SG Wear]
Isum Intr Alarm	Alarm, the Sum (Limit) of interrupting currents has been	0.00 - 2000.00kA	100.00kA	[Control
	exceeded.			/SG
				/SG[1]
				/SG Wear]
Isum Intr ph Alm	Alarm, the per hour Sum (Limit) of interrupting currents	0.00 - 2000.00kA	100.00kA	[Control
	has been exceeded.			/SG
				/SG[1]
				/SG Wear]
SGwear Curve Fc	The Circuit Breaker (load-break switch) Wear Curve	inactive,	inactive	[Control
	defines the maximum allowed CLOSE/OPEN cycles depending on the brake currents. If the circuit breaker	active		/SG
	maintenance curve is exceeded, an alarm will be			/SG[1]
	issued. The breaker maintenance curve is to be taken from the technical data sheet of the breaker			/SG Wear]
	manufactor. By means of the available points this curve			
	is to be replicated.			
WearLevel Alarm	Threshold for the Alarm	0.00 - 100.00%	80.00%	[Control
	Only available if:SGwear Curve Fc = active			/SG
	Only available in Cowcar ourve r c - active			/SG[1]
				/SG Wear]
WearLevel Lockout	Threshold for the Lockout Level	0.00 - 100.00%	95.00%	[Control
	Only available if:SGwear Curve Fc = active			/SG
	Only available ii. Ooweal Oulve I C - active			/SG[1]
				/SG Wear]
Current1	Interrupted Current Level #1	0.00 - 2000.00kA	0.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
	Only available ii.30weai Ouive FC - active			/SG[1]
				/SG Wear]

Parameter	Description	Setting range	Default	Menu path
Count1	Open Counts Allowed #1	1 - 32000	10000	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Current2	Interrupted Current Level #2	0.00 - 2000.00kA	1.20kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
)				/SG Wear]
Count2	Open Counts Allowed #2	1 - 32000	10000	[Control
	Only available if:SGwear Curve Fc = active			/SG
$\bigcirc$	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			/SG[1]
•				/SG Wear]
Current3	Interrupted Current Level #3	0.00 - 2000.00kA	8.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Count3	Open Counts Allowed #3	1 - 32000	150	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Current4	Interrupted Current Level #4	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Count4	Open Counts Allowed #4	1 - 32000	12	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Current5	Interrupted Current Level #5	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Count5	Open Counts Allowed #5	1 - 32000	1	[Control
	Only available if:SGwear Curve Fc = active			/SG
	·			/SG[1]
				/SG Wear]

Parameter	Description	Setting range	Default	Menu path
Current6	Interrupted Current Level #6	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
	, , , , , , , , , , , , , , , , , , , ,			/SG[1]
				/SG Wear]
Count6	Open Counts Allowed #6	1 - 32000	1	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Current7	Interrupted Current Level #7	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
0	On a tr O a water Allianus d #7	4 20000	4	/SG Wear]
Count7	Open Counts Allowed #7	1 - 32000	1	[Control /SG
	Only available if:SGwear Curve Fc = active			
				/SG[1] /SG Wear]
Current8	Interrupted Current Level #8	0.00 - 2000.00kA	20.00kA	[Control
Currento	·	0.00 - 2000.00KA	20.00KA	/SG
	Only available if:SGwear Curve Fc = active			/SG[1]
				/SG Wear]
Count8	Open Counts Allowed #8	1 - 32000	1	[Control
	·			/SG
	Only available if:SGwear Curve Fc = active			/SG[1]
				/SG Wear]
Current9	Interrupted Current Level #9	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
	only available in Sowean Surve 16 active			/SG[1]
				/SG Wear]
Count9	Open Counts Allowed #9	1 - 32000	1	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]
Current10	Interrupted Current Level #10	0.00 - 2000.00kA	20.00kA	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]

Parameter	Description	Setting range	Default	Menu path
Count10	Open Counts Allowed #10	1 - 32000	1	[Control
	Only available if:SGwear Curve Fc = active			/SG
				/SG[1]
				/SG Wear]

# **Breaker Wear Signals (Output States)**

Signal	Description
Operations Alarm	Signal: Service Alarm, too many Operations
Isum Intr trip: IL1	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL1
Isum Intr trip: IL2	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL2
Isum Intr trip: IL3	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL3
Isum Intr trip	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded in at least one phase.
Res TripCmd Cr	Signal: Resetting of the Counter: total number of trip commands
Res Sum trip	Signal: Reset summation of the tripping currents
WearLevel Alarm	Signal: Threshold for the Alarm
WearLevel Lockout	Signal: Threshold for the Lockout Level
Res SGwear Curve	Signal: Reset of the Circuit Breaker (load-break switch) Wear maintenance curve.
Isum Intr ph Alm	Signal: Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.
Res Isum Intr ph Alm	Signal: Reset of the Alarm, "the per hour Sum (Limit) of interrupting currents has been exceeded".

### **Breaker Wear Counter Values**

Value Description Default	fault Size I	Menu path
TripCmd Cr  Counter: Total number of trips of the switchgear (circuit breaker, load break switch). Resettable with Total or All.		[Operation /Count and RevData /Ctrl /SG[1]]

### **Breaker Wear Values**

Value	Description	Default	Size	Menu path
Sum trip IL1	Summation of the tripping currents phase	0.00A	0.00 - 1000.00A	[Operation
				/Count and RevData
				/Ctrl
				/SG[1]]
Sum trip IL2	Summation of the tripping currents phase	0.00A	0.00 - 1000.00A	[Operation
				/Count and RevData
				/Ctrl
				/SG[1]]
Sum trip IL3	Summation of the tripping currents phase	0.00A	0.00 - 1000.00A	[Operation
				/Count and RevData
				/Ctrl
				/SG[1]]
Isum Intr per hour	Sum per hour of interrupting currents.	0.00kA	0.00 - 1000.00kA	[Operation
				/Count and RevData
				/Ctrl
				/SG[1]]
SG OPEN capacity	Used capacity. 100% means, that the switchgear	0.0%	0.0 - 100.0%	[Operation
	is to be maintenanced.			/Count and RevData
				/Ctrl
				/SG[1]]

## **Direct Commands of the Breaker Wear Module**

Parameter	Description	Setting range	Default	Menu path
Res TripCmd Cr	Resetting of the Counter: total number of trip	inactive,	inactive	[Operation
	commands	active		/Reset]
Res Sum trip	Reset summation of the tripping currents	inactive,	inactive	[Operation
		active		/Reset]
Res Isum Intr per	Reset of the Sum per hour of interrupting currents.	inactive,	inactive	[Operation
hour		active		/Reset]
$\otimes$				
Res CB OPEN	Resetting of the CB OPEN capacity. 100% means, that	inactive,	inactive	[Operation
capacity	the circuit breaker is to be maintenanced.	active		/Reset]
$\bigoplus$				

### **Control Parameters**

<u>Ctrl</u>

### **Direct Commands of the Control Module**

Parameter	Description	Setting range	Default	Menu path
Switching Authority	Switching Authority	None,	Local	[Control
		Local,		/General settings]
		Remote,		
•		Local and Remote		
NonInterl	DC for Non-Interlocking	inactive,	inactive	[Control
		active		/General settings]

### **Global Protection Parameters of the Control Module**

Parameter	Description	Setting range	Default	Menu path
Res NonIL	Resetmode Non-Interlocking	single Operation,	single Operation	[Control
		timeout,		/General settings]
		permanent		
Timeout NonIL	Timeout Non-Interlocking	2 - 3600s	60s	[Control
$\otimes$	Only available if: Res NonIL = permanent			/General settings]
NonIL Assign	Assignment Non-Interlocking	1n, Assignment		[Control
		List		/General settings]

# **Control Moduel Input States**

Name	Description	Assignment via
NonInterl-I	Non-Interlocking	[Control
		/General settings]

# Signals of the Control Module

Signal	Description
Local	Switching Authority: Local
Remote	Switching Authority: Remote
NonInterl	Non-Interlocking is active
SG Indeterm	Minimum one Switchgear is moving (Position cannot be determined).
SG Disturb	Minimum one Switchgear is disturbed.

# Synchronization inputs

Parameter	Description
	No assignment
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate Out	Signal: Output of the logic gate

Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output
Logics.LE8.Out	Signal: Latched Output (Q)
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate Out	Signal: Output of the logic gate
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output

Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate Out	Signal: Output of the logic gate
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate Out	Signal: Output of the logic gate
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)

Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE30.Gate Out	Signal: Output of the logic gate
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)

Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate Out	Signal: Output of the logic gate
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate Out	Signal: Output of the logic gate

Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output
Logics.LE48.Out	Signal: Latched Output (Q)
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate Out	Signal: Output of the logic gate
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate Out	Signal: Output of the logic gate

Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate Out	Signal: Output of the logic gate
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate Out	Signal: Output of the logic gate
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)

Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)
Logics.LE68.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE69.Gate Out	Signal: Output of the logic gate
Logics.LE69.Timer Out	Signal: Timer Output
Logics.LE69.Out	Signal: Latched Output (Q)
Logics.LE69.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE70.Gate Out	Signal: Output of the logic gate
Logics.LE70.Timer Out	Signal: Timer Output
Logics.LE70.Out	Signal: Latched Output (Q)
Logics.LE70.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE71.Gate Out	Signal: Output of the logic gate
Logics.LE71.Timer Out	Signal: Timer Output
Logics.LE71.Out	Signal: Latched Output (Q)
Logics.LE71.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE72.Gate Out	Signal: Output of the logic gate
Logics.LE72.Timer Out	Signal: Timer Output
Logics.LE72.Out	Signal: Latched Output (Q)
Logics.LE72.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE73.Gate Out	Signal: Output of the logic gate
Logics.LE73.Timer Out	Signal: Timer Output
Logics.LE73.Out	Signal: Latched Output (Q)
Logics.LE73.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE74.Gate Out	Signal: Output of the logic gate
Logics.LE74.Timer Out	Signal: Timer Output
Logics.LE74.Out	Signal: Latched Output (Q)
Logics.LE74.Out inverted	Signal: Negated Latched Output (Q NOT)

Logics.LE75.Gate Out	Signal: Output of the logic gate
Logics.LE75.Timer Out	Signal: Timer Output
Logics.LE75.Out	Signal: Latched Output (Q)
Logics.LE75.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE76.Gate Out	Signal: Output of the logic gate
Logics.LE76.Timer Out	Signal: Timer Output
Logics.LE76.Out	Signal: Latched Output (Q)
Logics.LE76.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE77.Gate Out	Signal: Output of the logic gate
Logics.LE77.Timer Out	Signal: Timer Output
Logics.LE77.Out	Signal: Latched Output (Q)
Logics.LE77.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE78.Gate Out	Signal: Output of the logic gate
Logics.LE78.Timer Out	Signal: Timer Output
Logics.LE78.Out	Signal: Latched Output (Q)
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate Out	Signal: Output of the logic gate
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)

# **Assignable Trip Commands (Trip Manager)**

Name	Description
	No assignment
Id.TripCmd	Signal: Trip Command
IdH.TripCmd	Signal: Trip Command
IdG[1].TripCmd	Signal: Trip Command
IdGH[1].TripCmd	Signal: Trip Command
IdG[2].TripCmd	Signal: Trip Command
IdGH[2].TripCmd	Signal: Trip Command
I[1].TripCmd	Signal: Trip Command
I[2].TripCmd	Signal: Trip Command
I[3].TripCmd	Signal: Trip Command
I[4].TripCmd	Signal: Trip Command
IG[1].TripCmd	Signal: Trip Command

Name	Description
IG[2].TripCmd	Signal: Trip Command
IG[3].TripCmd	Signal: Trip Command
IG[4].TripCmd	Signal: Trip Command
ThR.TripCmd	Signal: Trip Command
I2>[1].TripCmd	Signal: Trip Command
I2>[2].TripCmd	Signal: Trip Command
ExP[1].TripCmd	Signal: Trip Command
ExP[2].TripCmd	Signal: Trip Command
ExP[3].TripCmd	Signal: Trip Command
ExP[4].TripCmd	Signal: Trip Command
Ext Sudd Press.TripCmd	Signal: Trip Command
Ex Oil Temp.TripCmd	Signal: Trip Command
Ext Temp Superv[1].TripCmd	Signal: Trip Command
Ext Temp Superv[2].TripCmd	Signal: Trip Command
Ext Temp Superv[3].TripCmd	Signal: Trip Command
RTD.TripCmd	Signal: Trip Command

### **Controlled Circuit Breaker**

SG[1],SG[2]

#### **Direct Commands of a Controlled Circuit Breaker**

Parameter	Description	Setting range	Default	Menu path
Manipulate Position		inactive,	inactive	[Control
	Manipulation	Pos OFF,		/SG
		Pos ON		/SG[1]
				/General settings]
Res SGwear SI SG	Resetting the slow Switchgear Alarm	inactive,	inactive	[Operation
		active		/Reset]
Ack TripCmd	Acknowledge Trip Command	inactive,	inactive	[Operation
		active		/Acknowledge]

### **Global Protection Parameters of a Controlled Circuit Breaker**

Parameter	Description	Setting range	Default	Menu path
Aux ON	The CB is in ON-position if the state of the assigned	1n, DI-LogicList	SG[1]: DI Slot X	[Control
	signal is true (52a).		1.DI 1	/SG
			SG[2]: DI Slot X 1.DI 3	/SG[1]
				/Pos Indicatrs Wirng]
Aux OFF	The CB is in OFF-position if the state of the assigned	1n, DI-LogicList	SG[1]: DI Slot X	[Control
	signal is true (52b).		1.DI 2	/SG
			SG[2]: DI Slot X 1.DI 4	/SG[1]
				/Pos Indicatrs Wirng]
Ready	Circuit breaker is ready for operation if the state of the	1n, DI-LogicList		[Control
	assigned signal is true. This digital input can be used by some protective elements (if they are available			/SG
	within the device) like Auto Reclosure (AR), e.g. as a			/SG[1]
	trigger signal.			/Pos Indicatrs Wirng]
Removed	The withdrawable circuit breaker is Removed	1n, DI-LogicList		[Control
	Dependency			/SG
				/SG[1]
				/Pos Indicatrs Wirng]

Parameter	Description	Setting range	Default	Menu path
Interl ON1	Interlocking of the ON command	1n, Assignment List	7.7	[Control /SG /SG[1] /Interlockings]
Interl ON2	Interlocking of the ON command	1n, Assignment List		[Control /SG /SG[1] /Interlockings]
Interl ON3	Interlocking of the ON command	1n, Assignment List		[Control /SG /SG[1] /Interlockings]
Interl OFF1	Interlocking of the OFF command	1n, Assignment List		[Control /SG /SG[1] /Interlockings]
Interl OFF2	Interlocking of the OFF command	1n, Assignment List	-,-	[Control /SG /SG[1] /Interlockings]
Interl OFF3	Interlocking of the OFF command	1n, Assignment List		[Control /SG /SG[1] /Interlockings]
SCmd ON	Switching ON Command, e.g. the state of the Logics or the state of the digital input	1n, DI-LogicList		[Control /SG /SG[1] /Ex ON/OFF Cmd]
SCmd OFF	Switching OFF Command, e.g. the state of the Logics or the state of the digital input	1n, DI-LogicList		[Control /SG /SG[1] /Ex ON/OFF Cmd]
t-TripCmd	Minimum hold time of the OFF-command (circuit breaker, load break switch)	0 - 300.00s	0.2s	[Control /SG /SG[1] /Trip Manager]

Parameter	Description	Setting range	Default	Menu path
Latched	Defines whether the Binary Output Relay will be	inactive,	inactive	[Control
	Latched when it picks up.	active		/SG
				/SG[1]
				/Trip Manager]
Ack TripCmd	Ack TripCmd	1n, Assignment		[Control
		List		/SG
				/SG[1]
				/Trip Manager]
Off Cmd1	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds	Id.TripCmd	[Control
	assigned signal becomes true.			/SG
				/SG[1]
				/Trip Manager]
Off Cmd2	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds	IdH.TripCmd	[Control
	assigned signal becomes true.			/SG
				/SG[1]
				/Trip Manager]
Off Cmd3	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds	SG[1]:	[Control
	assigned signal becomes true.		I[1].TripCmd	/SG
			SG[2]:	/SG[1]
				/Trip Manager]
Off Cmd4	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds		[Control
	assigned signal becomes true.			/SG
				/SG[1]
				/Trip Manager]
Off Cmd5	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds		[Control
	assigned signal becomes true.			/SG
				/SG[1]
				/Trip Manager]
Off Cmd6	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds		[Control
	assigned signal becomes true.			/SG
				/SG[1]
				/Trip Manager]
Off Cmd7	Off Command to the Circuit Breaker if the state of the	1n, Trip Cmds		[Control
	assigned signal becomes true.			/SG
				/SG[1]
•				/Trip Manager]

Parameter	Description	Setting range	Default	Menu path
Off Cmd8	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd9	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.7	[Control /SG /SG[1] /Trip Manager]
Off Cmd10	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.5	[Control /SG /SG[1] /Trip Manager]
Off Cmd11	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd12	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd13	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.5	[Control /SG /SG[1] /Trip Manager]
Off Cmd14	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd15	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	7.7	[Control /SG /SG[1] /Trip Manager]
Off Cmd16	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]

Parameter	Description	Setting range	Default	Menu path
Off Cmd17	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd18	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	7.7	[Control /SG /SG[1] /Trip Manager]
Off Cmd19	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.5	[Control /SG /SG[1] /Trip Manager]
Off Cmd20	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd21	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd22	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd23	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	-:-	[Control /SG /SG[1] /Trip Manager]
Off Cmd24	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	-:-	[Control /SG /SG[1] /Trip Manager]
Off Cmd25	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]

Parameter	Description	Setting range	Default	Menu path
Off Cmd26	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd27	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	7.7	[Control /SG /SG[1] /Trip Manager]
Off Cmd28	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.5	[Control /SG /SG[1] /Trip Manager]
Off Cmd29	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd30	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd31	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	5.5	[Control /SG /SG[1] /Trip Manager]
Off Cmd32	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd33	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds	7-7	[Control /SG /SG[1] /Trip Manager]
Off Cmd34	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]

Parameter	Description	Setting range	Default	Menu path
Off Cmd35	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd36	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd37	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd38	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd39	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Off Cmd40	Off Command to the Circuit Breaker if the state of the assigned signal becomes true.	1n, Trip Cmds		[Control /SG /SG[1] /Trip Manager]
Synchronism	Synchronism	1n, In-SyncList		[Control /SG /SG[1] /Synchron Switchg]
t-MaxSyncSuperv	Synchron-Run timer: Max. time allowed for synchronizing process after a close initiate. Only used for GENERATOR2SYSTEM working mode.	0 - 3000.00s	0.2s	[Control /SG /SG[1] /Synchron Switchg]
ON incl Prot ON	The ON Command includes the ON Command issued by the Protection module.	inactive, active	active	[Control /SG /SG[1] /General settings]

Parameter	Description	Setting range	Default	Menu path
OFF incl TripCmd	The OFF Command includes the OFF Command	inactive,	active	[Control
	issued by the Protection module.	active		/SG
				/SG[1]
				/General settings]
t-Move ON	Time to move to the ON Position	0.01 - 100.00s	0.1s	[Control
				/SG
				/SG[1]
				/General settings]
t-Move OFF	Time to move to the OFF Position	0.01 - 100.00s	0.1s	[Control
				/SG
				/SG[1]
				/General settings]
t-Dwell	Dwell time	0 - 100.00s	0s	[Control
				/SG
				/SG[1]
				/General settings]

# **Controlled Circuit Breaker Input States**

Name	Description	Assignment via
Aux ON-I	Module Input State: Position indicator/check-back signal of the	[Control
	CB (52a)	/SG
		/SG[1]
		/Pos Indicatrs Wirng]
Aux OFF-I	Module input state: Position indicator/check-back signal of the	[Control
	CB (52b)	/SG
		/SG[1]
		/Pos Indicatrs Wirng]
Ready-I	Module input state: CB ready	[Control
		/SG
		/SG[1]
		/Pos Indicatrs Wirng]
Sys-in-Sync-I	State of the module input: This signals has to become true within	[Control
	the synchronization time. If not, switching is unsuccessful.	/SG
		/SG[1]
		/Synchron Switchg]

Name	Description	Assignment via
Removed-I	State of the module input: The withdrawable circuit breaker is	[Control
	Removed	/SG
		/SG[1]
		/Pos Indicatrs Wirng]
Ack TripCmd-I	State of the module input: Acknowledgement Signal (only for	[Control
	automatic acknowledgement) Module input signal	/SG
		/SG[1]
		/Trip Manager]
Interl ON1-l	State of the module input: Interlocking of the ON command	[Control
		/SG
		/SG[1]
		/Interlockings]
Interl ON2-I	State of the module input: Interlocking of the ON command	[Control
		/SG
		/SG[1]
		/Interlockings]
Interl ON3-I	State of the module input: Interlocking of the ON command	[Control
		/SG
		/SG[1]
		/Interlockings]
Interl OFF1-I	State of the module input: Interlocking of the OFF command	[Control
		/SG
		/SG[1]
		/Interlockings]
Interl OFF2-I	State of the module input: Interlocking of the OFF command	[Control
		/SG
		/SG[1]
		/Interlockings]
Interl OFF3-I	State of the module input: Interlocking of the OFF command	[Control
		/SG
		/SG[1]
		/Interlockings]
SCmd ON-I	State of the module input: Switching ON Command, e.g. the state of the Logics or the state of the digital input	[Control
		/SG
		/SG[1]
		/Ex ON/OFF Cmd]

DOK-HB-MRDT4E

Name	Description	Assignment via
SCmd OFF-I	, , , , , , , , , , , , , , , , , , , ,	[Control
	state of the Logics or the state of the digital input	/SG
		/SG[1]
		/Ex ON/OFF Cmd]

# Signals of a Controlled Circuit Breaker

Signal	Description
SI SingleContactInd	Signal: The Position of the Switchgear is detected by one auxiliary contact (pole) only. Thus indeterminate and disturbed Positions cannot be detected.
Pos not ON	Signal: Pos not ON
Pos ON	Signal: Circuit Breaker is in ON-Position
Pos OFF	Signal: Circuit Breaker is in OFF-Position
Pos Indeterm	Signal: Circuit Breaker is in Indeterminate Position
Pos Disturb	Signal: Circuit Breaker Disturbed - Undefined Breaker Position. The Position Indicators contradict themselves. After expiring of a supervision timer this signal becomes true.
Pos	Signal: Circuit Breaker Position (0 = Indeterminate, 1 = OFF, 2 = ON, 3 = Disturbed)
Ready	Signal: Circuit breaker is ready for operation.
t-Dwell	Signal: Dwell time
Removed	Signal: The withdrawable circuit breaker is Removed
Interl ON	Signal: One or more IL_On inputs are active.
Interl OFF	Signal: One or more IL_Off inputs are active.
CES succesf	Signal: Command Execution Supervision: Switching command executed successfully.
CES Disturbed	Signal: Command Execution Supervision: Switching Command unsuccessful. Switchgear in disturbed position.
CES Fail TripCmd	Signal: Command Execution Supervision: Command execution failed because trip command is pending.
CES SwitchDir	Signal: Command Execution Supervision respectively Switching Direction Control: This signal becomes true, if a switch command is issued even though the switchgear is already in the requested position. Example: A switchgear that is already OFF should be switched OFF again (doubly). The same applies to CLOSE commands.
CES ON d OFF	Signal: Command Execution Supervision: On Command during a pending OFF Command.
CES SG not ready	Signal: Command Execution Supervision: Switchgear not ready
CES Fiel Interl	Signal: Command Execution Supervision: Switching Command not executed because of field interlocking.
CES SyncTimeout	Signal: Command Execution Supervision: Switching Command not executed. No Synchronization signal while t-sync was running.
CES SG removed	Signal: Command Execution Supervision: Switching Command unsuccessful, Switchgear removed.
Prot ON	Signal: ON Command issued by the Prot module
TripCmd	Signal: Trip Command
Ack TripCmd	Signal: Acknowledge Trip Command
ON incl Prot ON	Signal: The ON Command includes the ON Command issued by the Protection module.

Signal	Description	
OFF incl TripCmd	Signal: The OFF Command includes the OFF Command issued by the Protection module.	
Position Ind manipul	Signal: Position Indicators faked	
SGwear Slow SG	Signal: Alarm, the circuit breaker (load-break switch) becomes slower	
Res SGwear SI SG	Signal: Resetting the slow Switchgear Alarm	
ON Cmd	Signal: ON Command issued to the switchgear. Depending on the setting the signal may include the ON command of the Prot module.	
OFF Cmd	Signal: OFF Command issued to the switchgear. Depending on the setting the signal may include the OFF command of the Prot module.	
ON Cmd manual	Signal: ON Cmd manual	
OFF Cmd manual	Signal: OFF Cmd manual	
Sync ON request	Signal: Synchronous ON request	

# Trigger signals for Sync-check



**NOTICE:** The availability depends on the ordered device.

### Control - Example: Switching of a Circuit Breaker


The following example shows how to switch a circuit breaker via the HMI at the device.



Change into the menu »Control« or alternatively push the »CTRL« button at the device front.




Change to the control page by pushing the »right arrow« softkey.



**Information only:** On the control page the current switchgear positions is displayed. By means of the softkey »Mode« it can be switched to the menu »General Settings«. In this menu switching authority and interlockings can be set.

By means of the softkey »SG« it can be switched to the menu »SG«. In this menu specific settings for the switch gear can be done.




To execute a switching operation, change into the switching menu by pushing the right arrow softkey button.




Executing a switching command via the devices HMI is only possible when the switching authority is set to »Local«. If no switching authority is given, this has to be set first to »Local« or »Local and Remote«.

With the softkey »OK« it can be switched back to the single line diagram page.




Pushing the softkey »Mode« leads to the menu »General Settings«.



In this menu the switching authority can be changed.



Select between »Local« or »Local and Remote«.



Now it is possible to execute switching commands at the HMI.



Push the »right arrow« softkey to get to the control page.



The circuit breaker is opened, therefore it can be closed only.

After pushing the softkey »CLOSE« a confirmation window appears.



When you are sure to proceed with the switching operation, press the softkey »YES«.



The switching command will be given to the circuit breaker. The display shows the intermediate position of the switchgear.



It will be shown on the display when the switchgear reaches the new end position. Further possible switching operations (OPEN) will be displayed by softkeys.



Notice: For the case, the switchgear does not reach the new end position within the set supervision time the following Warning appears on the display.

#### **Protective Elements**

### id - Phase Current Differential Protection [87TP]

Available elements:

ld

#### Description

The protective device provides restrained phase differential protection function with User-configurable multiple slope percentage restrained characteristic that allows to compensate both the static error and the dynamic error. The static error accounts for transformer static magnetizing current and current measurement circuit calibration errors. The dynamic error may be caused by Tap Changing (OLTC) and by CT saturation caused by heavy fault currents.

In addition, the static tripping characteristic can be modified temporarily at the User's choice to prevent some nuisance tripping from the harmonic inrush during energization, over-excitation, or deep CT saturation. The harmonic inrush is evaluated through 2<sup>nd</sup>, 4<sup>th</sup> harmonics and 5<sup>th</sup> harmonics transient is monitored through the CT saturation detector.

#### **Phase Differential Protection Applications**

The phase differential protection can be used for two application scenarios:

Transformer Phase Differential Protection - 87 TP

For this application, the phase differential protection will detect phase faults within the transformer windings. The differential zone is between the current transformers (CT) installed at both sides of the transformer.

The reference side for the phase differential protection is winding side 1 (W1).

The base (reference current) will be calculated as:


$$I_b = I_{b,WI} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W1}}} = \frac{Rated\ Power_{Transformer}}{\sqrt{3} * Rated\ Voltage_{Transformer}}$$

#### **Application Options Required Settings** ANSI 87TP-Note1: "CT W1" must be connected to the device current input X3 Transformer Differential Protection (W1) and "CT W2" side must be connected to device current terminal X4 (W2). Protected Zone Set the Field Parameters of the Transformer CT W1 CT W2 <u>IW1</u> <u>IW2</u> Where? Within [Field Para\Transformer] Set the Differential Protection Parameters. Where? Within [Protection Para\Set [x]\Diff-Prot] X4.IL1 X4.IL2 X4.IL3 ANSI 87TP

#### **Direction Definitions**

The direction convention adopted here is as shown in the following drawing.

Protection Principle of the Current Differential Protection

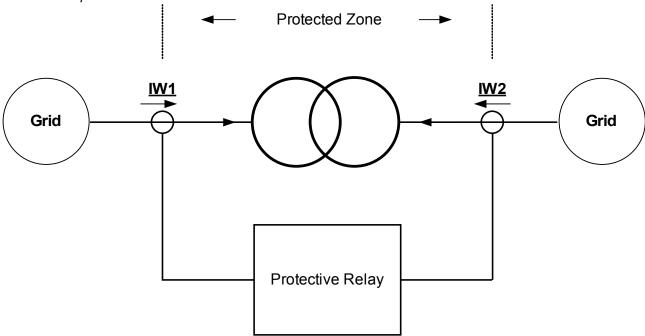

#### Legend

Symbol	Explanation
$S_N$	Rated Power from Protected Object (e.g. Generator or Stepup Transformer)
$V_{\mathrm{LL}}$	Rated Voltage from Protected Object (e.g. Generator)
$V_{\rm LL,W1}$	Rated Voltage from Transformer side W1 ( primary)
$V_{ m LL,W2}$	Rated Voltage from Transformer side W2 (secondary)
$CT_{ m pri,W1}$	Primary Rated current of Current Transformer on Transformer side W1
$CT_{\rm sec,W1}$	Secondary Rated current of Current Transformer on Transformer side W1
$CT_{ m pri,W2}$	Primary Rated current of Current Transformer on Transformer side W2
$CT_{\rm sec,W2}$	Secondary Rated current of Current Transformer on Transformer side W2
$I_b$	Base current (is depending on the applied context, in general, it is the Rated Current of Protected Object, e.g. Generator or Transformer)
$I_{b,Wl}$	Base current or Rated Current of Transformer primary side (W1)
$I_{b,W2}$	Base current or Rated Current of Transformer secondary side (W2)
$I_{ m pri,W1}$ $I_{ m pri,W2}$	Uncompensated primary current phasors on corresponding winding side
$\overrightarrow{I}_{WI}$ $\overrightarrow{I}_{W2}$	Uncompensated secondary current phasors on corresponding winding side

#### **Tripping curve**

The restrained percentage phase differential protection tripping characteristic can be expressed mathematically as:

$$|\overrightarrow{I_d}| \ge |\overrightarrow{I_{dmin}}| + \underbrace{K_1 * |\overrightarrow{I_s}|}_{I_s > I_{slamm} \text{ and } I_d < 2 * I_b} + \underbrace{K_2 * |\overrightarrow{I_s}|}_{I_s \ge 2 * I_b} + d(H, m)$$

Where

$$|\overrightarrow{I}_d| = |\overrightarrow{I}_{Wl}| + |\overrightarrow{I}_{W2}|$$
 is defined as fundamental differential current.

 $|\vec{I}_s| = 0.5 * |\vec{I}_{W1} - \vec{I}_{W2}|$  is defined as fundamental restraining current, and it is also called the through current for normal load and external faults.


 $\overline{I_{dmin}}$  is the minimum differential current scaled to the base current.

 $K_1$  and  $K_2$  are slope factors for two slope sections on the operating curve respectively.

d(H,m) is the temporary restraining current, which is a configurable multiple of the base current  $I_b$  .

 $\overline{I_{WI}}$  and  $\overline{I_{W2}}$  are the corresponding compensated secondary current phasors, which are scaled from the uncompensated primary phase current phasors  $\overline{I_{\mathrm{pri,W2}}}$  flowing into the protected object.

Under normal conditions, the differential current should be below  $|I_{dmin}|$ . When an internal fault occurs, the different current will raise above the restraining current to trip. To establish a correct trip criterion, two currents flowing into the protected object must be matched by compensating their magnitudes and phases.

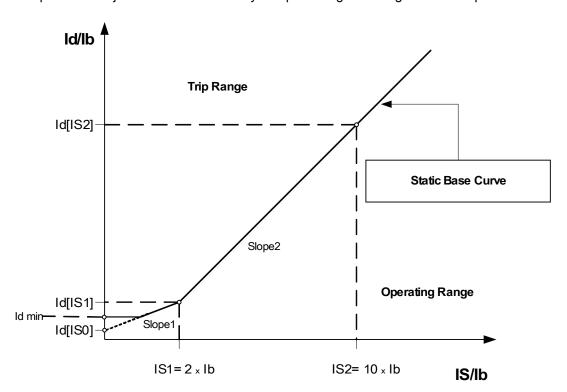

#### **Setting the Tripping Curve**

 $|\overline{I_{dmin}}|$  is the minimum differential current multiple scaled to the base current to get the restrained phase differential protection to trip, which should be set based on the static error (no load error, transformer magnetizing current, and measurement circuit noise).  $K_1$  and  $K_2$  are the restraining slopes that will be determined with the settings  $I_d(|\overline{I_{sd}}|)$ ,  $I_d(|\overline{I_{sl}}|)$ , and  $I_d(|\overline{I_{sl}}|)$  as follows:

$$K_1 = |I_d(|\vec{I}_{sl}|) - I_d(|\vec{I}_{so}|)|/2$$

$$K_2 = |I_d(|\vec{I_{s2}}|) - I_d(|\vec{I_{sI}}|)|/8$$

All current settings are expressed as multiples of the base current (lb). The base current will be calculated internally from the power rating and voltage ratings of the protected object under the field parameter menu.

For generator or motor differential protection the base current is defined as:

$$I_b = \frac{S_N}{\sqrt{3} * V_{LL}} = \frac{Rated\ Power_{Generator}}{\sqrt{3} * Rated\ Voltage_{Generator}}$$

For step-up transformers with two windings the two base currents for each winding are defined respectively as:

$$I_{b,WI} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W1}}} \qquad I_{b,W2} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W2}}}$$

## NOTICE

For setting the tripping characteristics of the 87 Transformer Phase Differential Protection, the base current  $I_b = I_{b,WI}$  is to be used. For the 87 Generator Phase Differential and Unit Phase Differential Protection, the base current  $I_b$  from Generator is to be used.

The procedures to configure:  $I_d(|\overrightarrow{I_{s0}}|)$ ,  $I_d(|\overrightarrow{I_{sl}}|)$ , and  $I_d(|\overrightarrow{I_{s2}}|)$ :

- 1. Use  $I_d(|\overrightarrow{I_{s0}}|)$  as a minimum differential current to trip when the restraining current is zero;
- 2. Select the slope  $K_1$  (usually around 15%-40% [typically 25%]);
- 3. Calculate set value  $I_d(|\overrightarrow{I_{sl}}|)$  using  $I_d(|\overrightarrow{I_{so}}|)$  and  $K_1:I_d(|\overrightarrow{I_{sl}}|)=I_d(|\overrightarrow{I_{so}}|)+2*K_1$ ;
- 4. Select the slope  $K_2$  (usually around 40%-90% [typically 60%]);
- 5. Calculate set value  $I_d(|\overrightarrow{I_{s2}}|)$  using  $I_d(|\overrightarrow{I_{sl}}|)$  and  $K_2$ :  $I_d(|\overrightarrow{I_{s2}}|) = I_d(|\overrightarrow{I_{sl}}|) + 8 * K_2$ ;

#### **Phasor Compensation**

Please note: This section applies only if a step up transformer is part of the protected differential zone.

Please note: The reference side for the phasor compensation is assigned fixed to current measuring card W1.

The phase current phasor compensations are performed automatically and involve amplitude and phase adjustments based on the system parameters, voltage ratings, tap position (assuming the tap changer is on the winding 1 side), winding connections and groundings, and the secondary winding phase shift (n) relative to the primary.

The compensated secondary current phaser on the transformer winding side W2 with winding side W1 as reference winding can be expressed as follows:

$$\overrightarrow{I_{\textit{W2}}} = \frac{V_{\text{LL,W2}}}{V_{\text{LL,W1}}*(1 + Tap \, Changer)}* \frac{CT_{\textit{pri,W2}}}{CT_{\textit{pri,W1}}}* \overrightarrow{I_{\textit{W2}}} \text{ for magnitude compensation,}$$

and

$$\overline{I_{W2}} = T_{Phase\ Shift\ (n)} * \overline{I_{W2}}$$
 for angle compensation.

Note:  $T_{\mathit{Phase Shift}(n)}$  is a complex factor due to transformer vector group setting.

#### **CT Mismatch**

Please note: This section applies only if a step up transformer is part of the protected differential zone.

# NOTICE

None of the Amplitudes Matching factors must exceed a value of 10.

$$k_{CTI} = \frac{CT_{pri,WI}}{Ib_{WI}} \le 10$$
 and  $k_{CT2} = \frac{CT_{pri,W2}}{Ib_{W2}} \le 10$ 

The ratio between the maximum and second largest amplitudes matching factors must not exceed a value of 3.

### **Phase Compensation (ABC Phase System)**

Please note: This section applies only if a step up transformer is part of the protected differential zone.

Note that the phase shift n is specified as a multiple of -30°. A positive n means the secondary is lagging the primary side. The User must select carefully the right number based on the winding connections. The following table lists the typical transformer connection types and their corresponding phase shifts for ABC phase sequence.

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
		Yy0	C B	c b
0	0°	Dd0	C B	a †
		Dz0	C B	a b

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
		Yd1	C B	a b
1	30°	Dy1	C B	c——
		Yz1	A	c b

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
2	60°	Yy2	C B	c a b
		Dd2	C B	c a
		Dz2	C B	c a

MRDT4

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
	90°	Yd3	C B	c b
3		Dy3	C B	c b
		Yz3	C B	<b>-</b> a

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
4	120°	Yy4	C B	b a
		Dd4	C B	b a
		Dz4	C B	b c

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
5	150°	Yd5	C B	b
		Dy5	C B	ba
		Yz5	C B	b

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
	180°	Yy6	C B	b c a
6		Dd6	C B	b a
		Dz6	C B	b c a

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
7	210°	Yd7	C B	b c
		Dy7	C B	b c
		Yz7	A B	b a

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
8	240°	Yy8	C B	a b
		Dd8	C B	a 🖈 c
		Dz8	C B	a c

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
		Yd9	C B	a <del>C</del>
9	270°	270° Dy9	C B	b c
		Yz9	C B	a c

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection	
	300°	Yy10	C B	a b	
10		Dd10	C B	a b	
		D <b>z</b> 10	C B	a b	

Vector Group	Phase Shift	Transformer Connection Type	Winding 1 Connection	Winding 2 Connection
11	330°	Yd11	C B	a b
		Dy11	C B	b c
		Yz11	C B	a b

#### Phase Compensation (ACB Phase System)

Please note: This section applies only if a step up transformer is part of the protected differential zone.

The phase shift n for the ACB phase sequence should be 12's complement to the corresponding transformer connection type. For instance, Dy5 for the ABC phase sequence will be Dy7 (12-5) for the ACB sequence, Dy11 becomes Dy1, and so on.

#### Zero Sequence Removal

Please note: This section applies only if a step up transformer is part of the protected differential zone.

Zero sequence currents must be removed to prevent the phase differential protection from tripping on external ground faults. For ground faults, the zero sequence current exits only on the transformer winding side whose neutral is grounded, but not on the ungrounded winding side. The differential current due to different groundings on two winding sides results in maloperation of phase differential function if it is not compensated (removed) before. The protective device does not require the zero sequence currents to be removed externally and they will be automatical removed internally according to the system parameters » W1 Connection/Grounding « and » W2 Connection/Grounding«.

$$\overrightarrow{I_{WI}} = \overrightarrow{I_{WI}} - \overrightarrow{I_{0,WI}}$$

$$\overline{I_{w2}} = \overline{I_{w2}} - \overline{I_{0,w2}}$$

## **Retrofitting – External Compensation**

Please note: This section applies only if a step up transformer is part of the protected differential zone.



ACAUTION By using the external removal approach, just like many elctromechnical relay do, the relay will not see the zero sequence current which other protection functions, such as residual overcurrent, ground differential, etc.

For a retrofit project, if the User has CTs externally connected in such a way that the zero sequence currents are removed automatically, then the internal zero sequence currents compensation will not be needed. However, if the User prefers the external approach of zero sequence current removal, the User must be aware that the protective device is a multi-function, digital protection system and the phase differential function is one of them. By using the external removal approach, the relay will not see the zero sequence current on which other functions such as residual overcurrent functions, ground differential function, etc. are just based on. If the User is only interested in the phase differential function in this relay, great attention must be paid to the phase shift and CT ratios. Under normal or external fault conditions, the CT secondary currents from two windings should be equal in magnitude, i.e.:

$$\left| \frac{CT_{Sec,W1}}{CT_{Pri,WI}/\sqrt{3}} * \overline{I_{Pri,WI}} \right| = \left| \frac{CT_{Sec,W2}}{CT_{Pri,W2}} * \overline{I_{Pri,W2}} \right|$$
 if the winding 1 CTs are delta-connected; or

$$\left|\frac{CT_{sec,Wl}}{CT_{pri,Wl}}*\overline{I_{Pri,Wl}}\right| = \left|\frac{CT_{sec,W2}}{CT_{pri,W2}/\sqrt{3}}*\overline{I_{Pri,W2}}\right| \quad \text{if the winding 2 CTs are delta-connected.}$$

The User must provide the relay with the modified CT primary rating to accommodate the current's effective decrease due to the CT delta connection. The CT primary rating setting on the CT delta connected side should be divided by  $\sqrt{3}$ .

The phase shift n for the CT delta connected case should include the phase shift from transformer winding connections and additional phase shift from CT delta connection. There are only two methods for the CT delta connection:

- •DAB (dy1); or
- •DAC (dy11).

For instance, if the User has a Yd1 transformer and the neutral on the Y side is grounded, the User must have CTs on the Y side connected as DAC (Dy11), then the User has total phase shift 1+11=12 (same as 0 in terms of phase shift). If the User has a Yd5 transformer and the neutral on the Y side is grounded, the User must have CTs on the Y side connected as DAB (Dy1), then the User has total phase shift 5+1=6.

Transformer Winding Connection Type	CT Delta Connection Type on Y or y side	Total Phase Shift Multiple n
Dy1	DAC (Dy11)	12 (0)
Dy5	DAB (Dy1)	6
Dy7	DAC (Dy11)	(18 % 12) =6
Dy11	DAB (Dy1)	12 (0)
Yd1	DAC (Dy11)	12 (0)
Yd5	DAB (Dy1)	6
Yd7	DAC (Dy11)	(18 % 12) =6
Yd11	DAB (Dy1)	12 (0)

Once a correct phase shift n is selected, the phase compensation calculations are done automatically using the corresponding phase shifting matrix listed in the table.

#### **Transient Restraining**

The transient behavior can be evoked by:

- 1. Directly energizing the transformer (inrush effect);
- 2. Sympathetic inrush current sharing due to adjacent transformer energization; and/or
- 3. Saturation of the CT.

Temporarily restraining can be triggered by:

- 1. 2nd harmonic trigger is enabled and the percentage of the 2nd harmonic exceeds its threshold;
- 2. 4th harmonic trigger is enabled and the percentage of the 4th harmonic exceeds its threshold;
- 3. 5th harmonic trigger is enabled and the percentage of the 5th harmonic exceeds its threshold; or
- 4. CT saturation trigger is enabled and saturation is detected.



By means of the *»Block mode«* (Cross Block), the User can specify if a harmonic signal or CT saturation within one phase temporarily causes restraining within this phase only or a cross block (3 phases).

#### Temporarily Restraining (by monitoring of the harmonics)

The protective device also offers the temporary restraining feature for further securing phase percentage restrained differential protection against harmonics and other transients such as CT saturation. Separating the temporary restraining from the fundamental restraining can make the differential protection more sensitive to internal faults and more secure when harmonics or other transients occur. The temporary restraining, whenever effective, will essential add a constant d(H,m) to the fundamental restraining. Graphically, the static tripping curve is temporarily raised by d(H,m). The amount of the temporary restraining is configured as multiple of the base current  $I_b$ . The 2nd, 4th, and 5th harmonics percentage relative to fundamental and CT saturation can trigger the temporary restraining. For each harmonic trigger function to be effective, it must be enabled and the percentage of the harmonic over fundamental must exceed its threshold.

Moreover, for the 2nd and 5th harmonics trigger functions, they can be configured independently as having different trigger levels for transient and stationary harmonics. The transient restraining will be effective for a specified t-Trans beginning with energization, which should be set according to the time duration expected for inrush (IH2) currents. For example, this can vary from around 1 second up to nearly 30 seconds for special applications like auto-transformer banks.

The stationary harmonic restraining will take place after t-Trans for time as long as one of the stationary harmonic triggers is active.

#### Temporarily Restraining (by CT saturation monitoring)

Beside the harmonic temporary restraining triggers, the protective device offers another trigger function - the Transients Monitor (Gradient Monitor). This monitor supervises the current transformer saturation. This monitor will be triggered by the behavior of the phase currents (their slopes, normalized derivative).

The normalized derivative is defined as:

$$m = \frac{1}{\omega * I_{peak}} * \frac{di}{dt}$$
,


where  $I_{\it peak}$  is the peak value within a half cycle and  $\,\omega\,$  is the system frequency.

For a pure sinusoidal waveform, the normalized derivative should be equal to 1. Under CT saturation, m will be greater than 1. The setting CT Satur Sensitvn should be set properly to identify effectively CT saturation but not to generate a nuisance trigger.

When the CT saturation monitor is active, it will trigger the temporary restraining if m exceeds an internal threshold. The temporary restraining, whenever effective, will essentially add a constant d(H,m) to the fundamental restraining. Graphically, the static tripping curve is temporarily raised by d(H,m) which the sensitivity of the differential protection function is reduced temporarily .

The internal threshold can be modified by means of the CT Saturation Sensitivn. The CT saturation monitor will behave more sensitively the lower the setting value is set.

Temporary Dynamic Rise of the Static Tripping Characteristic.

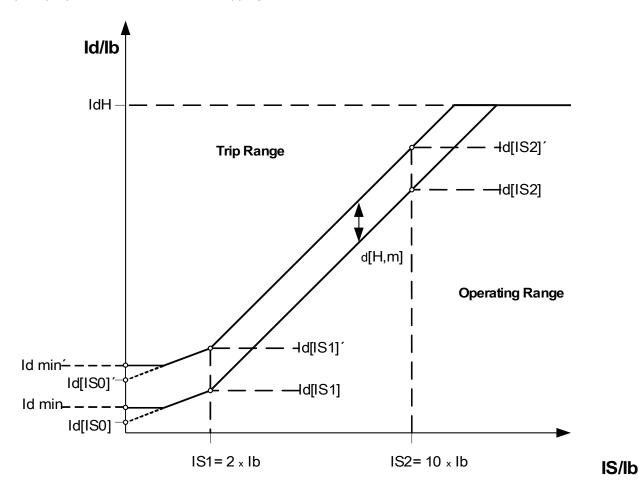

## NOTICE

The following signals cannot become true if Id<Idmin:

87. Slope Blo

87. H2, H4, H5 Blo

87. Blo H2

87. Blo H4

87. Blo H5

87. Restraining

The signal restraining will become true if "87. Slope Blo" or "87. H2,H4,H5 Blo" is true.

### **Example on Setting the Differential Function for Transformer Application**

Setting the differential module will be described here with focus on the differential functionality. The protective device asks for nearly all type-plate data of the transformer to allow for optimal adjustment of the differential function without the need of an auxiliary transformer and other tools like CT tapping (especially that known from non-digital relays in the past).

This results in the fact that the relay takes automatically these numeric values into account:

- •CT ratio and its deviation from full load amperage at each winding of the transformer;
- •Transformer ratio with respect to amplitude and transformer vector-group; and
- •Ratio change by tap changer displacement.

All this is compensated internally for by numeric means.

SN:

Nominal, rated capacity of the transformer - basis for calculating the full load amperage of the transformer.

Example	
78 MVA	

Pri V:

Rated voltage of the transformer regarding winding 1.

Example	
118 kV	

Sec V:

Rated voltage of the transformer regarding winding 2.

Example	
14.4 kV	

By means of these three settings, the following full load amperage lb is calculated, which is defined as the full load amperage for the maximum allowed apparent power of the transformer. There is one full load amperage for each winding, but differential protection results are always displayed in relation to lb of the winding 1.

Example:

$$Ib = Ib_{WI} = I_{FLA, WI} = \frac{78000000 VA}{\sqrt{3} * 118000 V} = 381 A$$

Ib = Full load current (FLA related to the transformer primary side)

## **Connection Groups**

#### W1 Connection/Grounding

This is the setting for the connection scheme of the winding W1 and its grounding condition.

Allowed Settings	Default (example)
Y, D, Z, YN, ZN	Υ

#### W2 Connection/Grounding

This is the setting for the connection scheme of the winding W2 and its grounding condition.

Allowed Settings	Default (example)
y, d, z, yn, zn	у

The combination of W1 Connection/Grounding and W2 Winding/Grounding allows for all possible physical connection schemes of stepup transformers. The N or n can be set whenever the neutral of the transformer is connected to ground and the grid on that side of the winding is grounded.

#### Phase Shift:

Phase shift in multiples of 0...11 \* (-30) degree that the secondary voltage lags the primary voltage.

Default (example)	
0 (0 degrees )	

Please refer to the Phase Compensation section for a number of typical, preferred transformer types.

For (Y, y, Z, z) connections, the neutral can be connected to ground or not connected to ground. In general, there is a distinction between odd (1, 3, 5, ..., 11) and even (0, 2, 4, ..., 10) connection numbers. Together with the connection scheme (y, d, or z) and the treatment of the neutral of the transformer, the following definitions are taken.

- The three-phase symmetrical system I1 is rotated counter-clockwise when transferring from winding 1 to winding 2 (applies for ABC phase sequence).
- The three-phase symmetrical system I2 is rotated clockwise when transferring from winding 1 to winding 2. (applies for ABC phase sequence).
- The connection of the transformer to a negative rotating system (ACB) is taken into account according to the parameter.
- The transformation of the zero sequence system I0 depends on the connection of the windings:
  - Only (Y, y, Z, z) connections provide for an external available neutral point;
  - Only when this neutral point is connected to ground (this is indicated by an appended "n" in the winding group setting (example Dyn)), and at least another ground connection is available

on the grid to which the winding is connected (a zero sequence - respectively ground current can flow); and

- Only when both windings of the transformer allow for ground current flowing, the zero sequence current can be transformed from one side of the transformer to the other without any phase shift.
- Odd connection groups are created by Dy, Yd, Yz, Zy schemes.
- Even connection groups are created by Yy, Zd, Dz, Dd.
- The primary values of winding 1 are reference values when displaying or evaluating relative values.

The transformer ratio can be modified by a tap changer.

#### Tap Changer:

The tap changer changes the transformer voltage ratio  $k_{Tap}$ .

$$k_{Tap} = \frac{V_{LL,W1}(1 + Tap Changer)}{V_{LL,W2}}$$

Principally, the following calculations need to be executed before calculating differential values and restraining values of the transformer differential protection:

- Rotating the measured values of winding 2 to the reference winding 1 count-clockwise with an angle of rotation number (0, 1, .....11) \* 30 degrees;
- Adjustment of measured values for winding 2 with respect to CT ratio mismatch;
- · Adjustment of measured values for winding 2 with respect to winding connection (y, d, z); and
- Adjustment of measured values for winding 1 and winding 2 according to neutral connection and ground treatment (zero sequence current elimination).

### Automatic Calculations: Amplitudes, Vector Groups, and Zero Sequence Removal

The calculations performed can be done by matrix calculations. Three steps have to be completed.

- 1. Adjust the amplitude according to all transformation ratios (Stepup transformer and CTs).
- 2. Adjust the vector group angle by rotating the three-phase system accordingly.
- 3. Remove the zero sequence current where necessary (this being valid for winding 1 and winding 2).
- 1. Amplitude Adjustment:

$$\overrightarrow{I_{W2}} = \overrightarrow{I_{W2}} * k_r \qquad k_r = \frac{CT_{pri,W2}}{I_{B,W2}} * \frac{I_{b,WI}}{CT_{pri,WI}} = \frac{CT_{pri,W2}}{CT_{pri,WI}} * \frac{V_{\text{LL,W2}}}{V_{\text{LL,W1}} * (1 + Tap Changer)}$$

#### 2. Vector Group Adjustment:

The vector group adjustment is calculated using the following formulas and transformation matrices:

$$\overline{I_{\mathit{W2}}} = \left[ \begin{array}{c} T_{\mathit{Phase Shift}} \end{array} \right] * \overline{I_{\mathit{W2}}} \qquad \left[ T_{\mathit{Phase Shift}} \right] \rightarrow \left[ T_{0,1,2...11} \right]$$

Even Connection Groups	Odd Connection Groups
$T_0 = \left[ \begin{array}{ccc} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{array} \right]$	$T_{1} = \frac{1}{\sqrt{3}} * \begin{bmatrix} 1 & -1 & 0 \\ 0 & 1 & -1 \\ -1 & 0 & 1 \end{bmatrix}$
$T_2 = \begin{bmatrix} 0 & -1 & 0 \\ 0 & 0 & -1 \\ -1 & 0 & 0 \end{bmatrix}$	$T_{3} = \frac{1}{\sqrt{3}} * \begin{bmatrix} 0 & -1 & 1 \\ 1 & 0 & -1 \\ -1 & 1 & 0 \end{bmatrix}$ $T_{5} = \frac{1}{\sqrt{3}} * \begin{bmatrix} -1 & 0 & 1 \\ 1 & -1 & 0 \\ 0 & 1 & -1 \end{bmatrix}$
$T_4 = \left[ \begin{array}{ccc} 0 & 0 & 1 \\ 1 & 0 & 0 \\ 0 & 1 & 0 \end{array} \right]$	$T_5 = \frac{1}{\sqrt{3}} * \begin{bmatrix} -1 & 0 & 1\\ 1 & -1 & 0\\ 0 & 1 & -1 \end{bmatrix}$
$T_6 = \begin{bmatrix} -1 & 0 & 0 \\ 0 & -1 & 0 \\ 0 & 0 & -1 \end{bmatrix}$	$T_7 = \frac{1}{\sqrt{3}} * \begin{bmatrix} -1 & 1 & 0 \\ 0 & -1 & 1 \\ 1 & 0 & -1 \end{bmatrix}$
$T_8 = \begin{bmatrix} 0 & 1 & 0 \\ 0 & 0 & 1 \\ 1 & 0 & 0 \end{bmatrix}$	$T_9 = \frac{1}{\sqrt{3}} * \begin{bmatrix} 0 & 1 & -1 \\ -1 & 0 & 1 \\ 1 & -1 & 0 \end{bmatrix}$
$T_{10} = \begin{bmatrix} 0 & 0 & -1 \\ -1 & 0 & 0 \\ 0 & -1 & 0 \end{bmatrix}$	$T_{11} = \frac{1}{\sqrt{3}} * \begin{bmatrix} 1 & 0 & -1 \\ -1 & 1 & 0 \\ 0 & -1 & 1 \end{bmatrix}$

3. Zero sequence removal (elimination of the ground current if this can only flow through one winding at the external asymmetrical faults and will not be transformed to the other winding).

Zero sequence removal will be calculated for the primary winding system, if the W1con value is set to YN or ZN.

A zero sequence current can only flow:

- 1. If the neutral is connected to ground; and
- 2. The grid on the primary side is grounded as well.

$$\overline{I_{\scriptscriptstyle WI}} = \overline{I_{\scriptscriptstyle WI}} - \overline{I_{\scriptscriptstyle 0,WI}}$$

For the secondary winding system:

Zero sequence removal will be calculated for the secondary winding system, if the W2con value is set to yn or zn.

A zero sequence current can only flow:

- 1. If the vector group is odd;
- 2. If the neutral is connected to ground; and
- 3. The grid on the secondary side is grounded as well

$$\overline{I_{w2}} = \overline{I_{w2}} - \overline{I_{0,w2}}$$

After setting the values for the percentage restrained characteristic curve, the settings for harmonic and transient restraining have to be defined. Both the harmonic and transient restraining settings depend on many parameters:

- Transformer type:
- Transformer material;
- Operational parameter of the grid; and
- •Time of energizing relative to the sinusoidal phase.

Therefor it is very difficult to give "one for all" settings in this area and to find a compromise between making a differential relay extremely fast and extremely reliable in its trip decisions.

Beginning with the static characteristic curve, typical slopes of 25% and 50% for both sections are recommended. They will be obtained by the following settings:

ld(IS0)		
Default (example)		
0.3		
14/191)		

Id(IS1)	
Default (example)	
1.0	

Id(IS2)	
Default (example)	
4.0	

#### **Protective Elements**

In case of harmonic or transient restraint, the curve will be added by a static offset d(H,m)

To be able to withstand magnetizing inrush currents of typical values, the following value of d(H,m) = 8 is recommended.

#### d(H,m)

Default (example)	
8	

In case that harmonic restraint threshold is reached, this value will be added to the characteristic curve.

It is important to estimate the necessary harmonic threshold to obtain stability against magnetizing inrush, CT saturation, and over-excitation. The harmonics seen under different operational conditions like magnetizing inrush and CT saturation depend on many different parameters.

#### Magnetizing inrush:

Basically, harmonics can be observed and monitored. Due to this fact, the 2<sup>nd</sup> and 4<sup>th</sup> harmonic are monitored. Inrush currents depend on the time of energizing, the remnant magnetizing compared to phase of sinusoidal curve, the voltage (low voltage energizing produce less harmonic), the core material and the core geometry among others. It is recommended generally to set the harmonic restraint as active.

#### Stab H2

Slau HZ
Default (example)
inactive

#### Stab H4

Default (example)	
inactive	


To operate very stably under stationary circumstances, it can be distinguished between a stationary value of harmonic thresholds and a transient harmonic threshold directly after energizing. This transient period is always started if the differential as well the restraining current is below 5% of the base current  $I_b$ . The following values are recommended for typical cases:

H2 Sta
Default (example)
30%
H2 Tra
Default (example)
15%
H4 Sta
Default (example)
30%
For CT saturation, the 5 <sup>th</sup> harmonic is one typical criteria. This feature also should be activated as long as CT saturation is expected due to CT dimensioning and operational current values under external faults. It has to be noted that CT saturation can only be monitored as long as there is a critical rest of the current transformed to the secondary side of the CT. For severe CT saturation, the CT can be nearly short circuited, as seen from the primary side, so that nearly no measurable current can be monitored or analyzed.
Stab H5
Default (example)
inactive
H5 Sta
Default (example)
30%
H5 Tra
Default (example)
15%
The so-called transient time period directly after energizing strongly depends on the above mentioned influencing parameter. Time spans from nearly zero to more than 15 seconds are known for special auto-transformer banks. A typical setting of 2s is recommended for commonly used transformers.  t-Trans
Default (example)
1 s
All harmonic-generating events can occur to a different degree in one, two, or all three phases. That is why there is a choice provided to restrain only those phases with harmonic content or restrain all three phases, which is recommended for typical application, as long as knowledge of the grid and modes of operation do not prove another choice.
Block mode
Default (example)
active

The Transient Monitor analyzes continuously the differential current signal. If it detects saturation |m| > 1, it will decide whether the saturation is caused by internal or external faults.

- •External Faults: the sign of differential current and of slope are equal (both "-" or both"+").
- •Internal Faults: the sign of differential current and slope are different (one "-" and the other "+" or the other way round).

If the saturation is caused by an internal fault, there will be no raising/stabilizing of the tripping curve. If the saturation is caused by an external fault, the tripping curve will be raised by d(H,m).

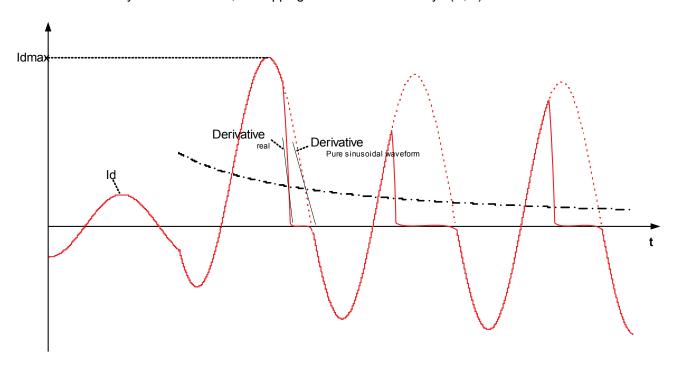

#### CT Satur Monit

Default (example)
active

The recommended value of the CT saturation monitor is 120%.

### CT Satur Sensitvn

Default (example)
100%

## **Device Planning Parameters of the Phase Current Differential Protection**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	use	[Device planning]
		use		

## **Global Protection Parameters of the Phase Current Differential Protection**

Parameter	Description	Setting range	Default	Menu path
ExBlo1		1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
	assigned signal is true.			/Tdiff-Prot
				/ld]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List	**	[Protection Para
				/Global Prot Para
				/Tdiff-Prot
				/ld]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment		[Protection Para
	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Tdiff-Prot
				/ld]

## **Setting Group Parameters of the Phase Current Differential Protection**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	active	[Protection Para
		active		/<14>
				/Tdiff-Prot
				/ld]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/ld]
	2,0,0,0,0,0,0,0			

Parameter	Description	Setting range	Default	Menu path
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Tdiff-Prot
				/ld]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ld]
Id min	Constant minimum pickup current (differential current).	0.1 - 1.0lb	0.2lb	[Protection Para
				/<14>
				/Tdiff-Prot
				/ld]
Id(IS0)	Starting point of the static tripping characteristic when Ir	0.0 - 1.0lb	0.0lb	[Protection Para
	= 0			/<14>
				/Tdiff-Prot
				/ld]
Id(IS1)	Breaking point of the static tripping characteristic when Ir = 2 x In	0.2 - 2.0lb	0.6lb	[Protection Para
				/<14>
				/Tdiff-Prot
				/ld]
Id(IS2)	Value of the static tripping characteristic when Ir = 10 x Ib	1.0 - 8.0lb	6.2lb	[Protection Para
				/<14>
				/Tdiff-Prot
•				/ld]
d(H,m)	Restraining factor for rising the static tripping	0.0 - 30.0lb	8lb	[Protection Para
	characteristic in case of stationary or transient harmonic components, which are ascertained by			/<14>
	Fourier analysis (H) or transients monitor (m).			/Tdiff-Prot
				/ld]
Stab H2	Restraining of differential protection function against	inactive,	inactive	[Protection Para
	stationary or transient components of the 2nd harmonic	active		/<14>
	at the phase current (e.g. rush-effect).			/Tdiff-Prot
				/ld]
H2 Sta	Threshold (2nd harmonic - basic wave ratio) for restraining the differential protection function against	10 - 50%	25%	[Protection Para
				/<14>
	stationary 2nd harmonic.			/Tdiff-Prot
	Only available if: Stab H2 = active			/ld]

Parameter	Description	Setting range	Default	Menu path
H2 Tra	Threshold (2nd harmonic – basic wave ratio) for temporary stabilisation of the differential protection function against transient 2nd harmonic.	10 - 25%	10%	[Protection Para /<14>
	Only available if: Stab H2 = active			/Tdiff-Prot
Stab H4	Restraining of differential protection function against	inactive,	inactive	[Protection Para
	stationary components of the 4th harmonic at the phase current.	active		/<14>
	priase current.			/Tdiff-Prot
				/ld]
H4 Sta	Threshold (4th harmonic - basic wave ratio) for	10 - 50%	20%	[Protection Para
	restraining the differential protection function against stationary 4th harmonic.			/<14>
				/Tdiff-Prot
	Only available if: Stab H4 = active			/ld]
Stab H5	Stabilisation of differential protection function against	inactive,	inactive	[Protection Para
	stationary or transient components of the 5th harmonic at the phase current (e.g. transformer overexcitation).	active		/<14>
	at the phase surroit (e.g. tarios into ever should be in			/Tdiff-Prot
				/ld]
H5 Sta	Threshold (5thd harmonic - basic wave ratio) for stabilising the differential protection function against stationary 5th harmonic.	10 - 50%	30%	[Protection Para
				/<14>
	Only available if: Stab H5 = active			/Tdiff-Prot
				/ld]
H5 Tra	Threshold (5th harmonic – basic wave ratio) for	10 - 25%	15%	[Protection Para
	temporary restraining of the differential protection function against transient 5th harmonic.			/<14>
	Only available if: Stab H5 = active			/Tdiff-Prot
				/ld]
t-Trans	Time of temporary stabilisation of the differential protection function when thresholds for "H2 Tra" and "H5 Tra" (transient harmonic) are exceeded.	0.05 - 120.00s	2s	[Protection Para
				/<14>
				/Tdiff-Prot
				/ld]
Crossbl	Active = Phase overlapping stabilisation of the	inactive,	inactive	[Protection Para
	differential protection function. Inactive = Phase selective stabilisation of the differential protection	active		/<14>
	function.			/Tdiff-Prot
				/ld]
CT Satur Monit	Current Transformer Saturation Supervision	inactive,	active	[Protection Para
		active		/<14>
$\bigcirc$				/Tdiff-Prot
				/ld]

Parameter	Description	Setting range	Default	Menu path
CT Satur Sensitvn	Sensitiveness of the Current Transformer Satusation Supervision. The higher the value, the lower the sensitiveness.	100 - 500%	100%	[Protection Para /<14>
	Only available if: VRestraint = active			/ld]

## **Phase Current Differential Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ld]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ld]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ld]

## **Phase Current Differential Protection Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm L1	Signal: Alarm System Phase L1
Alarm L2	Signal: Alarm System Phase L2
Alarm L3	Signal: Alarm System L3
Alarm	Signal: Alarm
Trip L1	Signal: Trip System Phase L1
Trip L2	Signal: Trip System Phase L2
Trip L3	Signal: Trip System Phase L3
Trip	Signal: Trip
TripCmd	Signal: Trip Command
Blo H2	Signal: Blocked by Harmonic:2
Blo H4	Signal: Blocked by Harmonic:4

Signal	Description
Blo H5	Signal: Blocked by Harmonic:5
H2,H4,H5 Blo	Signal: Blocked by Harmonics (Inhibit)
Slope Blo	Signal: Differential protection was blocked by current transformer saturation. The tripping characteristic was lifted because of current transformer saturation.
Transient	Signal: Temporary stabilization of the differential protection afterwards the transformer is being engergized.
Restraining	Signal: Restraining of the differential protection by means of rising the tripping curve.
Slope Blo: L1	Slope Blo: L1
Slope Blo: L2	Slope Blo: L2
Slope Blo: L3	Slope Blo: L3
Restraining: L1	Restraining: L1
Restraining: L2	Restraining: L2
Restraining: L3	Restraining: L3
IH2 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of second Harmonic.
IH2 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of second Harmonic.
IH2 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of second Harmonic.
IH4 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of fourth Harmonic.
IH4 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of fourth Harmonic.
IH4 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of fourth Harmonic.
IH5 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of fifth Harmonic.
IH5 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of fifth Harmonic.
IH5 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of fifth Harmonic.

## **Phase Current Differential Protection Module Values**

Value	Description	Menu path
ld L1 H2	Measured value (calculated): Differential Current Phase L1 Harmonic:2	[Operation /Measured values /Id]
ld L2 H2	Measured value (calculated): Differential Current Phase L2 Harmonic:2	[Operation /Measured values /Id]
Id L3 H2	Measured value (calculated): Differential Current Phase L3 Harmonic:2	[Operation /Measured values /Id]
ld L1 H4	Measured value (calculated): Differential Current Phase L1 Harmonic:4	[Operation /Measured values /Id]
ld L2 H4	Measured value (calculated): Differential Current Phase L2 Harmonic:4	[Operation /Measured values /Id]
Id L3 H4	Measured value (calculated): Differential Current Phase L3 Harmonic:4	[Operation /Measured values /Id]
ld L1 H5	Measured value (calculated): Differential Current Phase L1 Harmonic:5	[Operation /Measured values /Id]
Id L2 H5	Measured value (calculated): Differential Current Phase L2 Harmonic:5	[Operation /Measured values /Id]
Id L3 H5	Measured value (calculated): Differential Current Phase L3 Harmonic:5	[Operation /Measured values /Id]

## **Phase Current Differential Protection Module Statistics**


Value	Description	Menu path
ld L1H2max	Maximum Value Id L1H2	[Operation
		/Statistics
		/Max
		/ld]
Id L2H2max	Maximum Value Id L2H2	[Operation
		/Statistics
		/Max
		/ld]
Id L3H2max	Maximum Value Id L3H2	[Operation
		/Statistics
		/Max
		/ld]
ld L1H4max	Maximum Value Id L1H4	[Operation
		/Statistics
		/Max
		/ld]
ld L2H4max	Maximum Value Id L2H4	[Operation
		/Statistics
		/Max
		/ld]
Id L3H4max	Maximum Value Id L3H4	[Operation
		/Statistics
		/Max
		/ld]
ld L1H5max	Maximum Value Id L1H5	[Operation
		/Statistics
		/Max
		/ld]
Id L2H5max	Maximum Value Id L2H5	[Operation
		/Statistics
		/Max
		/ld]
ld L3H5max	Maximum Value Id L3H5	[Operation
		/Statistics
		/Max
		/ld]

### **Unrestrained High-set Differential Current Protection IdH**

Elements: IdH

Irrespective of the set static tripping characteristic and restraining factors d[H,m], a pickup value for a max. differential current IdH can be adjusted and results in undelayed tripping when exceeded. This protection step is referred to as high-set differential step IdH and only trips on faults within the protection zone.

Unrestrained High-set Differential Protection Step IdH

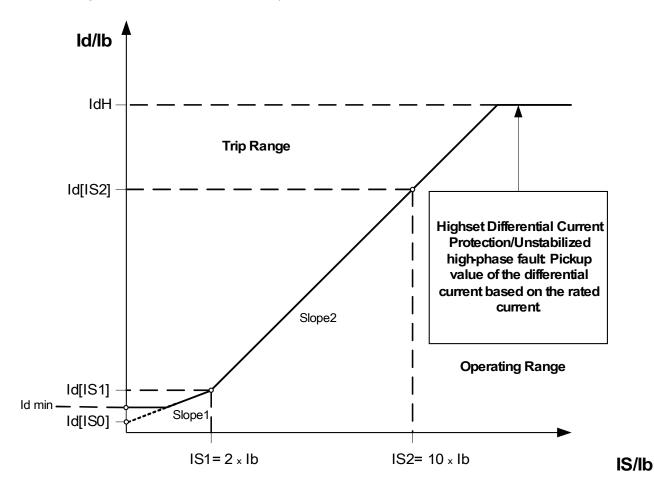

## Device Planning Parameters of the Unrestrained High-set Differential Current Protection Module

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	use	[Device planning]
		use		

## Global Protection Parameters of the Unrestrained High-set Differential Current Protection Module

Parameter	Description	Setting range	Default	Menu path
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Tdiff-Prot
				/ldH]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Tdiff-Prot
				/ldH]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List	7.7	[Protection Para
				/Global Prot Para
				/Tdiff-Prot
				/ldH]

# Setting Group Parameters of the Unrestrained High-set Differential Current Protection Module

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	active	[Protection Para
		active		/<14>
				/Tdiff-Prot
				/ldH]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/ldH]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Tdiff-Prot
				/ldH]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ldH]
	Explo Tripolliu i c-active .			
ld>>	Highset Differential Current Protection/Unstabilized	2.0 - 30.0lb	10.0lb	[Protection Para
	high-phase fault: Pickup value of the differential current			/<14>
	based on the rated current.			/Tdiff-Prot
				/ldH]

## **Unrestrained High-set Differential Current Protection Module Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldH]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldH]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldH]

## Signals of the Unrestrained High-set Differential Current Protection Signals (Output States)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm L1	Signal: Alarm System Phase L1
Alarm L2	Signal: Alarm System Phase L2
Alarm L3	Signal: Alarm System L3
Alarm	Signal: Alarm
Trip L1	Signal: Trip System Phase L1
Trip L2	Signal: Trip System Phase L2
Trip L3	Signal: Trip System Phase L3
Trip	Signal: Trip
TripCmd	Signal: Trip Command

### IdG - Ground Current Differential Protection [87TN, 64REF]

Available elements: <a href="IdG[1]">IdG[1]</a>, <a href="IdG[4]">IdG[2]</a>

The ground differential protective element can be used to provide:

- Sensitive detection of internal ground faults on the wye-side windings of transformers.
- Sensitive ground fault detection for solidly or low -impedance grounded generators.


#### Description

This protection principle is based on a restricted ground fault scheme that only can be used in systems with an earthed neutral. The ground differential current is the vector sum of the measured earth current and the calculated zero sequence current from three measured phase currents. Similarly to the phase restrained differential protection, the ground restraining current is the vector difference of the measured earth current and the calculated zero sequence current from three measured phase currents. The trip characteristic is very much similar to the phase restrained differential protection and it does not have the temporary restraining.

## NOTICE

The accuracy of the zero current lo determination depends significantly on the tolerances of the phase current CT. This correspondingly applies to the Holmgreen Connection for measuring the earth current IG (instead by using the Toroidal-type CT), but because of its higher accuracy the Toroidal CT is to be preferred to the use of the Holmgreen Connection.

Protection Principle of Ground Current Differential Protection connected on wye-side winding of a transformer

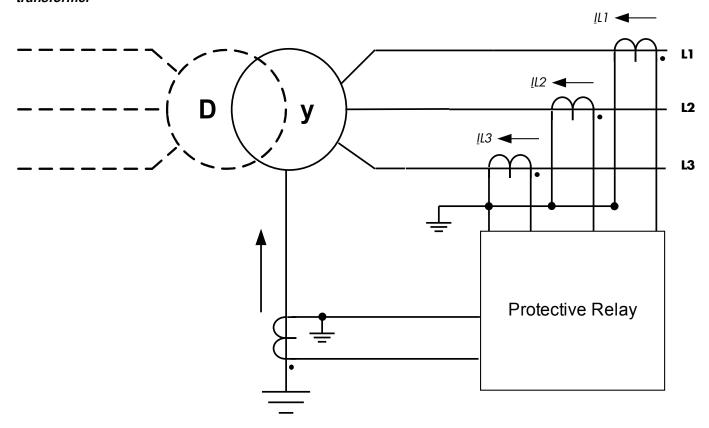




The trip commands generated by the protective function restricted ground fault IdG have to be assigned within the Breaker Manager.



Please be aware that the protective function Restricted Ground Fault IdG solely can be applied to the winding end which builds the earthed neutral point.

## Application Example (D-y-Transformer) ANSI 87TN

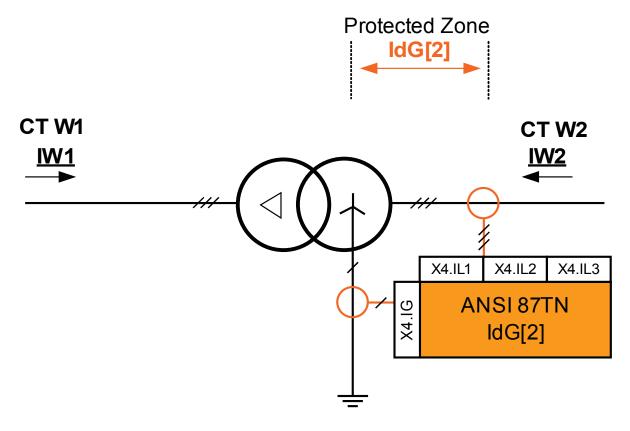

#### Proper Use

To be used if the start-point side of a transformer schould be protected against ground differential faults within the transformer.

Required type of current transformers and current transformer locations

- Phase current transformers at the mains site of the transformer.
- Ground current transformer at the neutral site of the transformer.

Name of the Element that is to be used IdG[2]

Wiring of the current transformers

- Phase current transformers to be connected to X4.IL1, X4.IL2, X4.IL3
- Ring core or ground current transformer to be connected to X4.IG

Calulated Reference Current

$$I_b = I_{b, W2} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W2}}} = \frac{Rated\ Power_{Transformer}}{\sqrt{3} * Rated\ Voltage_{Transformer}(Ph - Ph)}$$

Requrired Settings

Activate the Protective Element within the Device Planning.

Where? Within [Device Planning]

Set "IdG[2].Mode=use"


Set the Field Parameters of the Transformer.

Where? Within [Field Para\Transformer]

Set the Differential Protection Parameters.

Where? Within [Protection Para\Set [x]\Diff-Prot]

## Application Example (Y-y-Transformer) ANSI 87TN

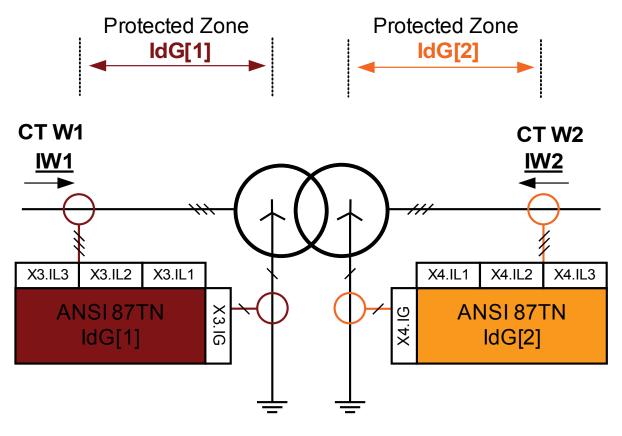

#### Proper Use

To be used if the start-point sides of a Y-y-transformer schould be protected against ground differential faults within the transformer on both winding sides.

Required type of current transformers on both sides and current transformer locations

- Phase current transformers at the mains site of the transformer.
- Ground current transformer at the neutral site of the transformer.

Name of the Element that is to be used

- IdG[1] on winding side 1
- IdG[2] on winding side 2

Wiring of the current transformers

- Phase current transformers on winding side 1 are to be connected to X3.IL1, X3.IL2, X3.IL3
- Phase current transformers on winding side 2 are to be connected to X4.IL1, X4.IL2, X4.IL3
- Ring core or ground current transformer on winding side 1 are to be connected to X3.IG
- Ring core or ground current transformer on winding side 2 are to be connected to X4.IG

Calulated Reference Current Winding Side W1

$$I_b = I_{b, WI} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W1}}} = \frac{Rated \ Power_{\textit{Transformer}}}{\sqrt{3} * Rated \ Voltage_{\textit{Transformer}}(Ph - Ph)}$$

Calulated Reference Current Winding Side W2

$$I_b = I_{b, W2} = \frac{S_N}{\sqrt{3} * V_{\text{LL,W2}}} = \frac{Rated \ Power_{Transformer}}{\sqrt{3} * Rated \ Voltage_{Transformer}(Ph - Ph)}$$

Requrired Settings

Activate the Protective Element within the Device Planning.

Where? Within [Device Planning] Set "IdG[1].Mode=use" Set "IdG[2].Mode=use"

Set the Field Parameters of the Transformer.

Where? Within [Field Para\Transformer]

Set the Differential Protection Parameters.

Where? Within [Protection Para\Set [x]\Diff-Prot]

## **Device Planning Parameters of the Restricted Ground Fault Protection**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameters of the Restricted Ground Fault Protection**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	IdG[1]: W1	[Protection Para
		W2	IdG[2]: W2	/Global Prot Para
				/Tdiff-Prot
				/ldG[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
	assigned signal to true.			/Tdiff-Prot
				/ldG[1]]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Tdiff-Prot
				/ldG[1]]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment		[Protection Para
$\bigcirc$	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Tdiff-Prot
				/ldG[1]]

## **Setting Group Parameters of the Restricted Ground Fault Protection**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Tdiff-Prot
				/ldG[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".	inactive,	inactive	[Protection Para
		active		/<14>
				/Tdiff-Prot
				/ldG[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Tdiff-Prot
				/ldG[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
$\bigcirc$	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ldG[1]]
Idg min	Constant minimum pickup current (differential current).	0.05 - 1.00lb	0.05lb	[Protection Para
				/<14>
				/Tdiff-Prot
•				/ldG[1]]
ldg(ls0)	Starting point of the static tripping characteristic when	0.00 - 1.00lb	0.1lb	[Protection Para
	Is = 0			/<14>
				/Tdiff-Prot
				/ldG[1]]
ldg(ls1)	Breaking point of the static tripping characteristic when	0.2 - 2.0lb	0.2lb	[Protection Para
	ls = 2 x ln			/<14>
				/Tdiff-Prot
				/ldG[1]]
ldg(ls2)	Value of the static tripping characteristic when Is = 10 x	1.0 - 8.0lb	2.0lb	[Protection Para
	lb			/<14>
				/Tdiff-Prot
				/ldG[1]]

## **Restricted Ground Fault Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldG[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldG[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldG[1]]


## **Restricted Ground Fault Protection Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

## **IdGh - High Set Restricted Ground Fault Protection IdGH**

## Elements IdGH[1],IdGH[2]

Similar to the unrestrained phase differential protection, unrestrained ground differential protection functions are provided for a high ground differential current.

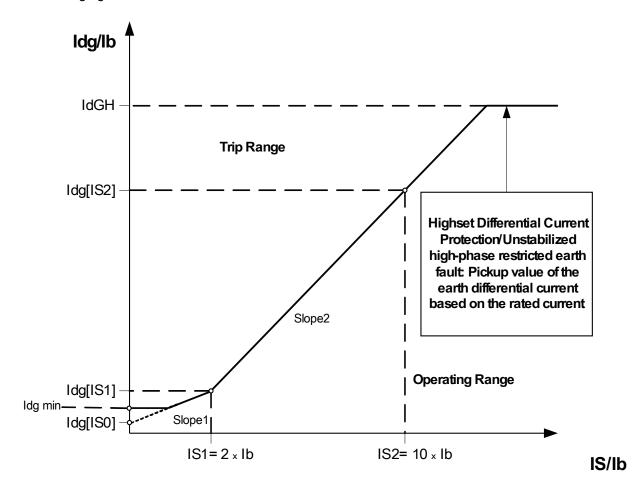

Unstabilized High Set Differential Protection Element IdGH

# Device Planning Parameters of the High Set Restricted Ground Fault Protection Module

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

# Global Protection Parameters of the High Set Restricted Ground Fault Protection Module

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	IdGH[1]: W1	[Protection Para
		W2	IdGH[2]: W2	/Global Prot Para
				/Tdiff-Prot
				/ldGH[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
	accigned organic acci			/Tdiff-Prot
				/ldGH[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
	accigned digital to due.			/Tdiff-Prot
				/ldGH[1]]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment		[Protection Para
	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Tdiff-Prot
				/ldGH[1]]

# Setting Group Parameters of the High Set Restricted Ground Fault Protection Module

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Tdiff-Prot
				/ldGH[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/ldGH[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Tdiff-Prot
				/ldGH[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Tdiff-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ldGH[1]]
		0.00.00.00	0.000	ID ( "
ldg>>	Highset Differential Current Protection/Unstabilized high-phase restricted earth fault: Pickup value of the	2.00 - 20.00lb	2.00lb	[Protection Para
	earth differential current based on the rated current.			/<14>
$\bigotimes$				/Tdiff-Prot
				/ldGH[1]]

# **High Set Restricted Ground Fault Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldGH[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldGH[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Tdiff-Prot
		/ldGH[1]]

# **High Set Restricted Ground Fault Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

# I - Overcurrent Protection [50, 51,51Q, 51V\*]

Available stages: I[1], I[2], I[3], I[4]



If you are using inrush blockings the tripping delay of the current protection functions must be at least 30ms or more in order to prevent faulty trippings.



All overcurrent protective elements are identically structured.



This module offers Adaptive Parameter Sets.

Parameters can be modified within parameter sets dynamically by means of Adaptive Parameter Sets.

Please refer to chapter Parameter / Adaptive Parameter Sets.

The following table shows the application options of the Overcurrent Protection element

Applications of the I-Protection Module	Setting in	Option
ANSI 50 – Overcurrent protection, non-directional	Device Planning menu	Measuring Mode: Fundamental/TrueRMS/negative phase sequence current (I2)
ANSI 51 – Short circuit protection, non-directional	Device Planning menu	Measuring Mode: Fundamental/TrueRMS/negative phase sequence current (I2)
ANSI 51V – Voltage restraint overcurrent protection	Parameter Set: VRestraint = active	Measuring Mode: Fundamental/TrueRMS/negative phase sequence current (I2) Measuring Channel: Phase to Phase/Phase to Neutral
ANSI 51Q Negative Phase Sequence Overcurrent Protection	Parameter Set: Measuring Method =I2 (Negative Sequence Current)	
51R Voltage controlled overcurrent protection	Adaptive Parameters	Measuring Mode: Fundamental/TrueRMS/negative phase sequence current (I2)
(Please refer to the chapter Parameter/Adaptive Parameter)		Measuring Channel: (in voltage protection module) Phase to Phase/Phase to Neutral

<sup>\*=</sup>available only for devices that offer voltage measurement.

#### Measuring Mode

For all protection elements it can be determined, whether the measurement is done on basis of the » *Fundamental«* or if » *TrueRMS«* measurement is used.

Alternatively the »Measuring Mode« can be set to »I2«. In this case the negative phase sequence current will be measured. This is to detect unbalanced faults.

#### Voltage restraint overcurrent protection 51V\*

When the Parameter » *VRestraint«* is set to active the overcurrent protection element works voltage restraint. That means, the overcurrent pickup threshold will be lowered during voltage drops. This results in a more sensitive overcurrent protection. For the voltage threshold » *VRestraint max«* additionally the » *Measuring Channel«* can be determined.

#### Measuring Channel

With the parameter *»Measuring Channel«* it can be determined, whether the *»Phase to Phase«* voltage or the *»Phase to Neutral«* voltage is measured.

For each element the following characteristics are available:

- DEFT (UMZ)
- NINV (IEC/AMZ)
- VINV (IEC/AMZ)
- LINV (IEC/AMZ)
- EINV (IEC/AMZ)
- MINV (ANSI/AMZ)
- VINV (ANSI/AMZ)
- EINV (ANSI/AMZ)
- Thermal Flat
- IT
- I2T
- I4T

#### Explanation:


t = Tripping delay

t-char = Time multiplier/tripping characteristic factor. The setting range depends on the selected tripping curve. I = Fault current

I> = If the pickup value is exceeded, the module/element starts to time out to trip.

<sup>\*=</sup>available only for devices that offer voltage measurement.

# DEFT

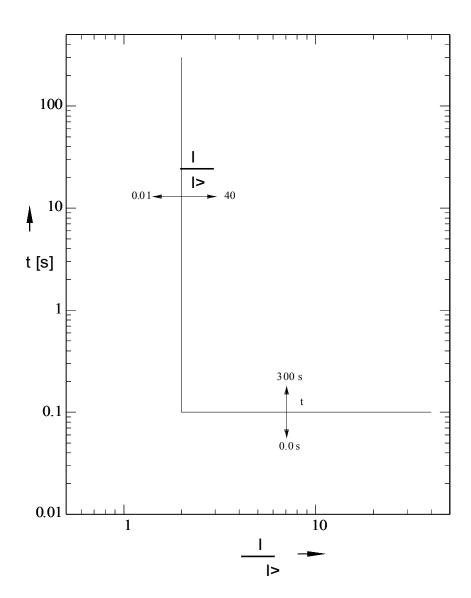

# **IEC NINV**



### Notice!


Various reset modes are available. Resetting via characteristic, delayed and instantaneous.

Reset

# **Trip**

$$t = \left| \frac{0.14}{\left(\frac{1}{|s|}\right)^2 - 1} \right| * t-char [s]$$
 
$$t = \frac{0.14}{\left(\frac{1}{|s|}\right)^{0.02} - 1} * t-char [s]$$

$$t = \frac{0.14}{\left(\frac{1}{1>}\right)^{0.02}} *t-char[s]$$

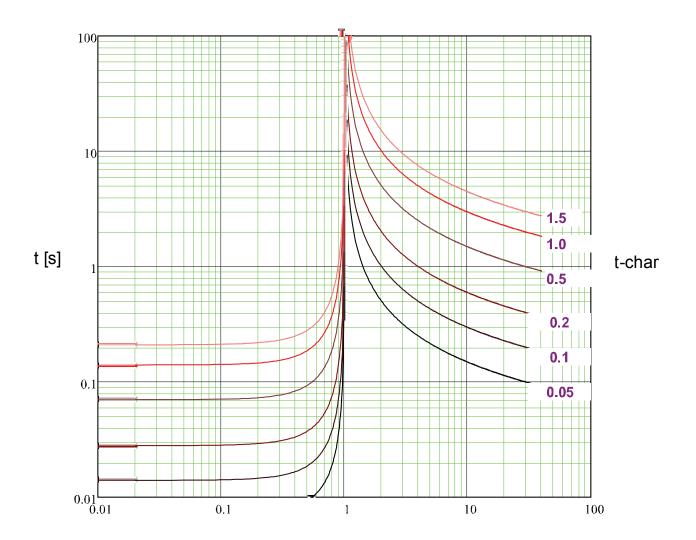

x \* I> (multiples of pickup)

### **IEC VINV**



Various reset modes are available. Resetting via characteristic, delayed and instantaneous.


Reset

Trip

$$t = \left| \frac{13.5}{\left(\frac{l}{l>}\right)^2 - 1} \right| * t-char [s]$$

$$t = \frac{13.5}{\left(\frac{l}{l>}\right) - 1} * t-char [s]$$

$$t = \frac{13.5}{\left(\frac{I}{I}\right)-1} *t-char [s]$$

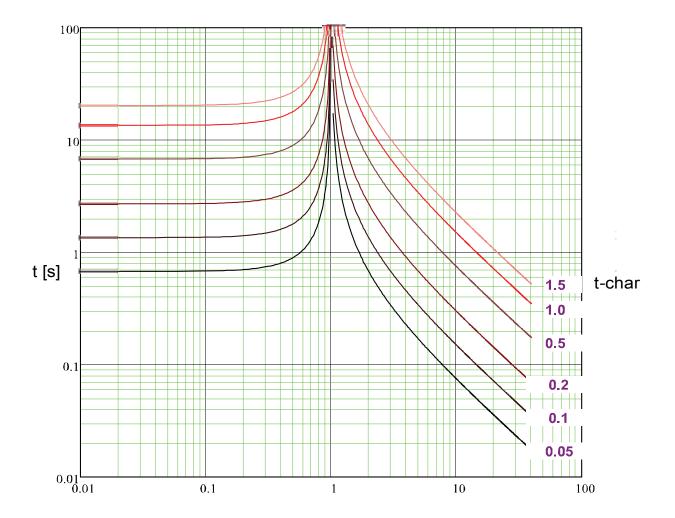

x \* I> (multiples of pickup)

# **IEC LINV**




Various reset modes are available . Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{120}{\left(\frac{l}{l}\right)^2 - 1} \right| * t-char [s]$$

$$t = \frac{120}{\left(\frac{l}{l}\right) - 1} * t-char [s]$$

$$t = \frac{120}{\left(\frac{|}{|}>\right)-1} *t-char [s]$$

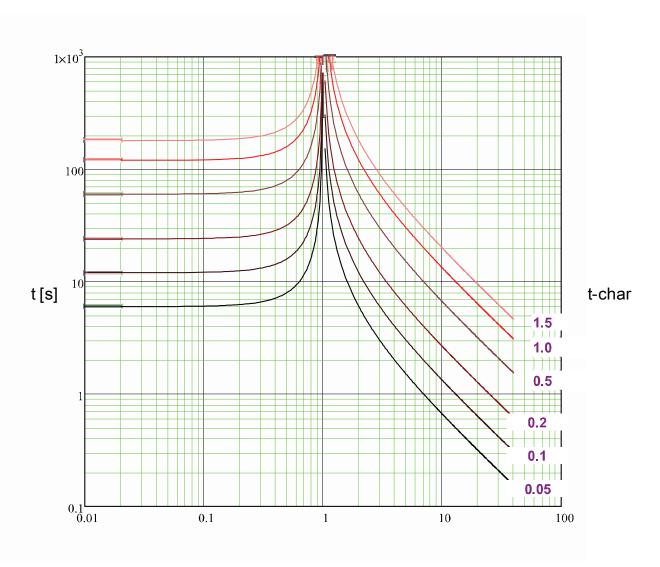

x \* I> (multiples of pickup)

# **IEC EINV**




Various reset modes are available . Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{80}{\left(\frac{l}{l>}\right)^2 - 1} \right| \text{*t-char [s]} \qquad \qquad t = \frac{80}{\left(\frac{l}{l>}\right)^2 - 1} \text{*t-char [s]}$$

$$t = \frac{80}{\left(\frac{1}{1>}\right)^2 - 1} *t-char [s$$

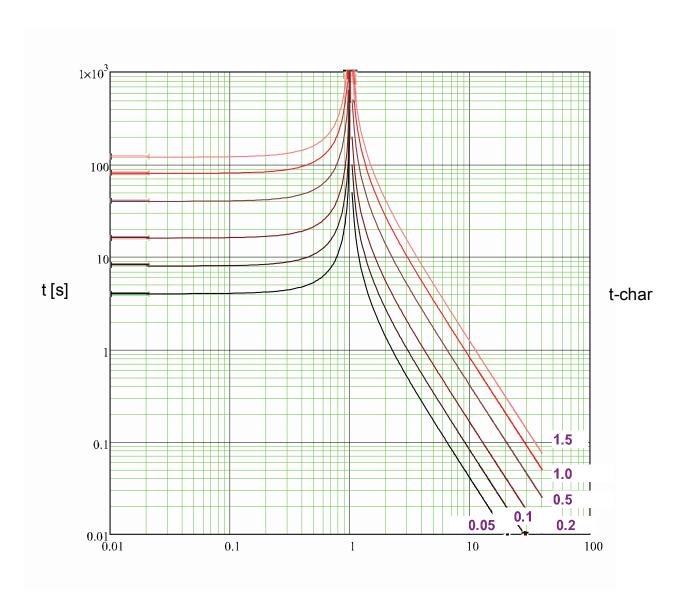

x \* I> (multiples of pickup)


### **ANSI MINV**



#### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{4.85}{\left(\frac{1}{||s|}\right)^2 - 1} \right| * t-char [s] \qquad t = \left( \frac{0.0515}{\left(\frac{1}{||s|}\right)^{0.02} + 0.1140} \right) * t-char [s]$$

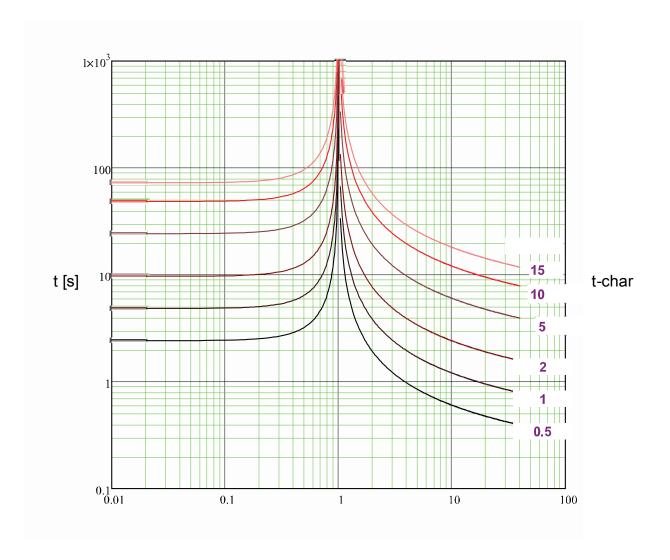

x \* I> (multiples of pickup)


### **ANSI VINV**



#### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip  $t = \left| \frac{21.6}{\left( \frac{1}{|I|} \right)^2 \cdot 1} \right| *t-char[s] \qquad t = \left( \frac{19.61}{\left( \frac{1}{|I|} \right)^2 \cdot 1} + 0.491 \right) *t-char[s]$ 

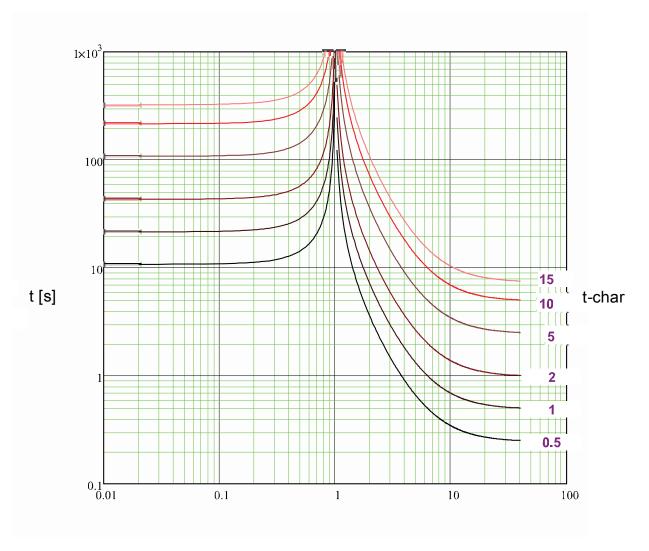

x \* I> (multiples of pickup)

### **ANSI EINV**




#### Notice!

Various reset modes are available. Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{29.1}{\left(\frac{1}{1>}\right)^2 1} \right|^* \text{t-char [s]}$$

$$t = \left| \frac{29.1}{\left(\frac{1}{1>}\right)^2 1} \right|^* t\text{-char [s]} \qquad t = \left( \frac{28.2}{\left(\frac{1}{1>}\right)^2 - 1} + 0.1217 \right)^* t\text{-char [s]}$$

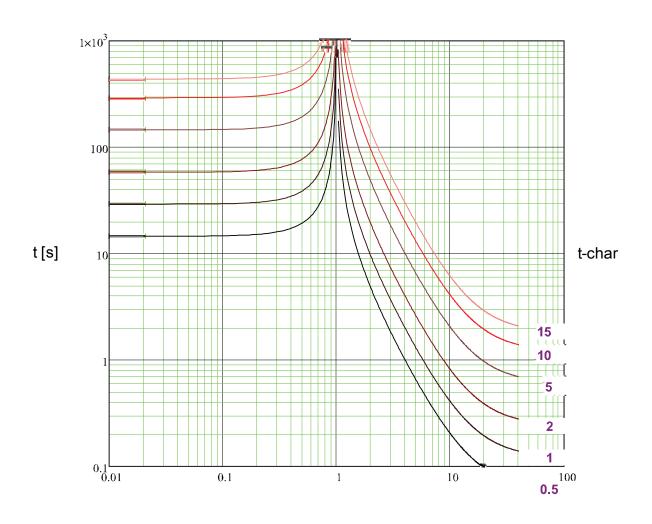

x \* I> (multiples of pickup)


### **Therm Flat**



### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{5*3^2}{\left(\frac{l}{\ln}\right)^0} \right| \text{*t-char}[s] \qquad t = \frac{5*1^2}{\left(\frac{l}{\ln}\right)^0} \text{*t-char}[s]$$

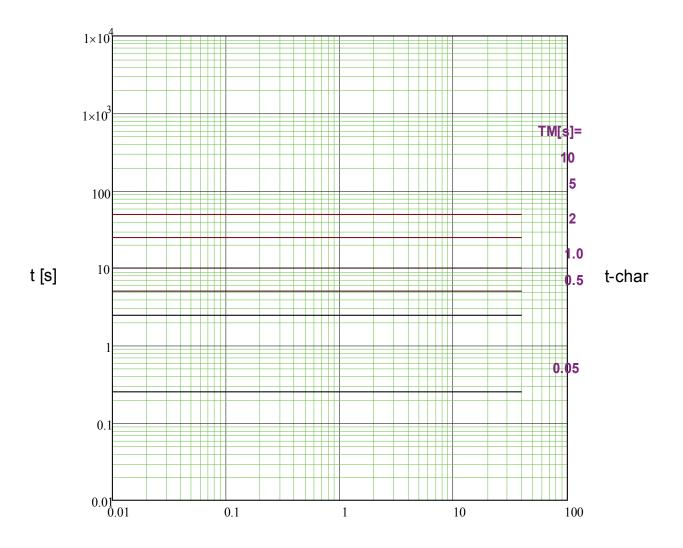

x \* In (multiples of the nominal current)

IT




### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{5*3^2}{\left(\frac{l}{\ln}\right)^0} \right| \text{*t-char}[s] \qquad t = \frac{5*3^1}{\left(\frac{l}{\ln}\right)^1} \text{*t-char}[s]$$

$$t = \frac{5*3^1}{\left(\frac{l}{\ln l}\right)}$$
 \*t-char[s]

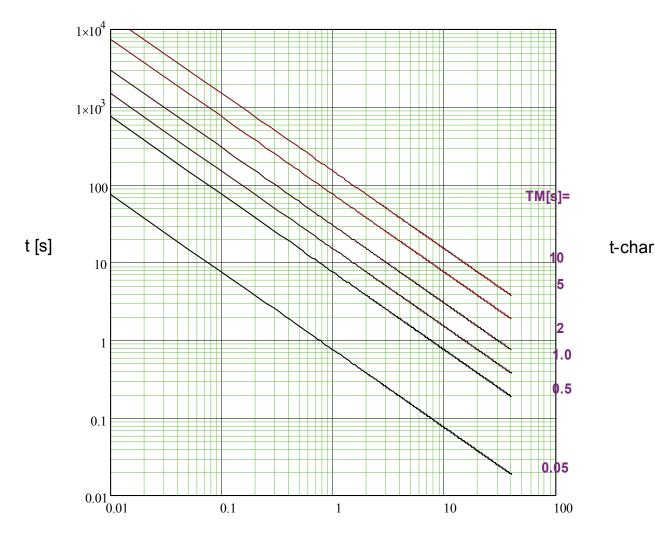

x \* In (multiples of the nominal current)

# **I2T**




Various reset modes are available. Resetting via characteristic, delayed and instantaneous.

Reset

**Trip** 

$$t = \left| \frac{5*3^2}{\left(\frac{l}{\ln 0}\right)^0} \right| *t-char[s] \qquad t = \frac{5*3^2}{\left(\frac{l}{\ln 0}\right)^2} *t-char[s]$$

$$t = \frac{5*3^2}{\left(\frac{l}{\ln l}\right)^2} *t-char [s$$

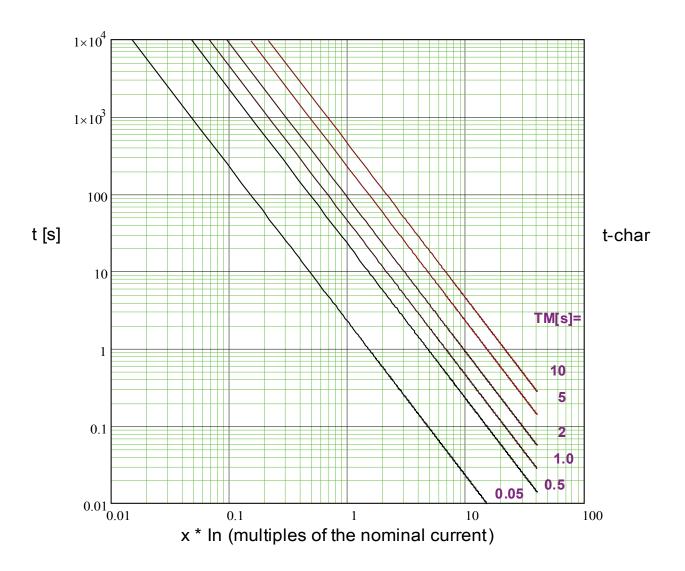

# **I4T**



#### Notice!


Various reset modes are available. Resetting via characteristic, delayed and instantaneous.

Reset

**Trip** 


$$t = \left| \frac{5*3^2}{\left(\frac{l}{\ln 0}\right)^0} \right| *t-char[s] \qquad t = \frac{5*3^4}{\left(\frac{l}{\ln 0}\right)^4} *t-char[s]$$

$$t = \frac{5*3^4}{\left(\frac{l}{\ln a}\right)}$$
 \*t-char [s]

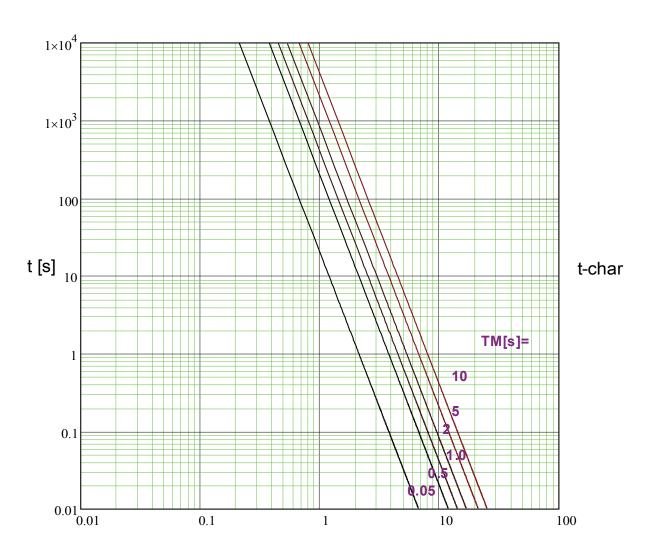


x \* In (multiples of the nominal current)

The following block diagram applies to devices without voltage measurement (without 51V)

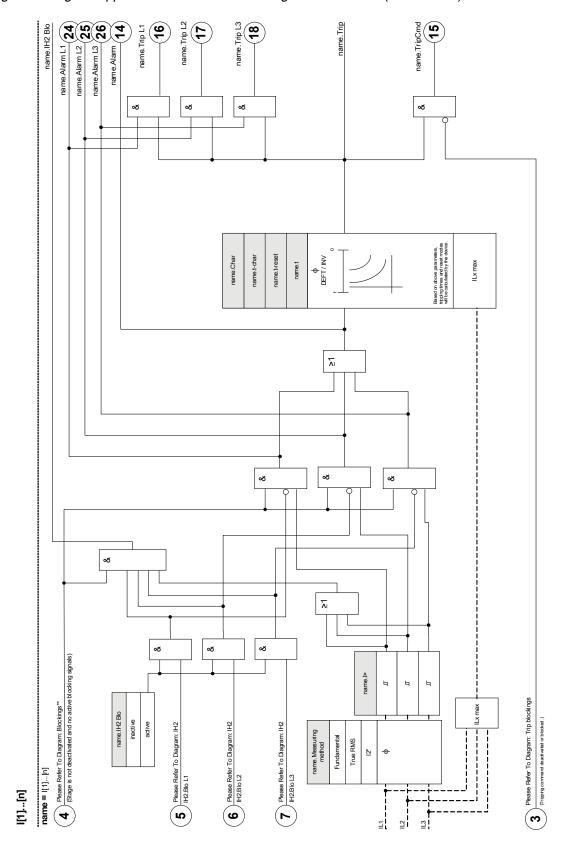

The following block diagram applies to devices that offer a voltage measurement card (with 51V)

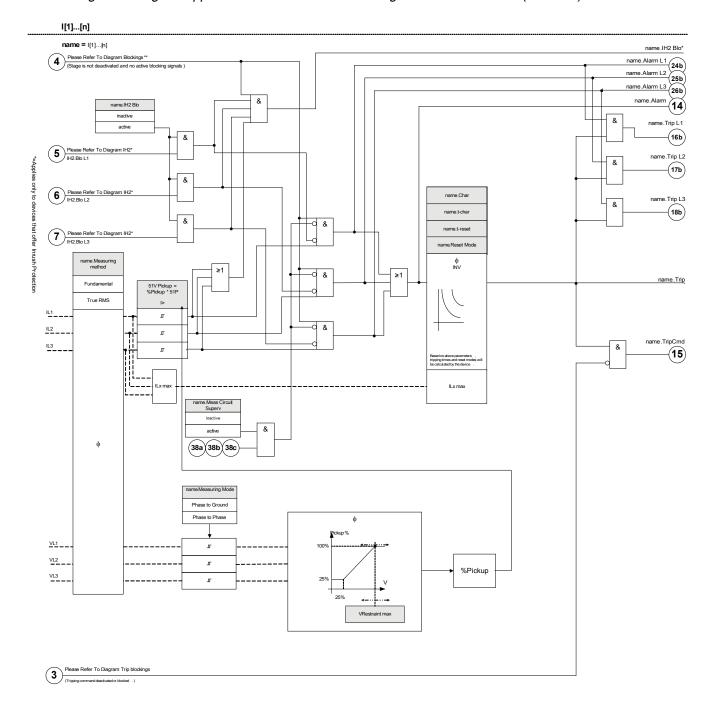

# **Device Planning Parameters of the I Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	I[1]: non	[Device planning]
		non directional	directional	
			I[2]: do not use	
			I[3]: do not use	
			I[4]: do not use	

# **Global Protection Parameters of the I Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Protection Para
		W2		/Global Prot Para
				/I-Prot
				/I[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
	assigned signal to true.			/I-Prot
				/I[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/I-Prot
				/I[1]]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment List	7-7	[Protection Para
	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned			/Global Prot Para
	signal is true.			/I-Prot
				/I[1]]
Ex rev Interl	External blocking of the module by external reverse	1n, Assignment	-,-	[Protection Para
	interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is	List		/Global Prot Para
	true.			/I-Prot
				/I[1]]
AdaptSet 1	Assignment Adaptive Parameter 1	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/[[1]]

Parameter	Description	Setting range	Default	Menu path
AdaptSet 2	Assignment Adaptive Parameter 2	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/I[1]]
AdaptSet 3	Assignment Adaptive Parameter 3	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/I[1]]
AdaptSet 4	Assignment Adaptive Parameter 4	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/I[1]]

# **Setting Group Parameters of the I Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	I[1]: active	[Protection Para
		active	I[2]: inactive	/<14>
			I[3]: inactive	/I-Prot
			I[4]: inactive	/I[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/1[1]]
Ex rev Interl Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".			/I[1]]
	rev interire - active .			
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/I-Prot
)				/I[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/I[1]]
Measuring method	Measuring method: fundamental or rms	Fundamental,	Fundamental	[Protection Para
-		True RMS,		/<14>
		12		/I-Prot
				/I[1]]
>	If the pickup value is exceeded, the module/element	0.02 - 40.00ln	1.00ln	[Protection Para
	starts to time out to trip.			/<14>
/	Only available if: Characteristic = DEFT Or			/I-Prot
	Characteristic = INV Minimum of the setting range If: VRestraint = active Minimum of the setting range If: VRestraint = inactive			/[[1]]

Parameter	Description	Setting range	Default	Menu path
Char	Characteristic	DEFT,	DEFT	[Protection Para
		IEC NINV,		/<14>
/		IEC VINV,		/I-Prot
		IEC EINV,		/I[1]]
<b>*</b>		IEC LINV,		
		ANSI MINV,		
		ANSI VINV,		
		ANSI EINV,		
		Therm Flat,		
		IT,		
		I2T,		
		I4T		
t	Tripping delay	0.00 - 300.00s	1.00s	[Protection Para
	Only available if: Characteristic = DEFT			/<14>
_	Only available ii. Characteristic – DEF1			/I-Prot
				/[[1]]
<b> </b>				
t-char	Time multiplier/tripping characteristic factor. The setting	0.02 - 20.00	1	[Protection Para
	range depends on the selected tripping curve.			/<14>
<i>y</i>	Only available if: Characteristic = INV Or Characteristic			/I-Prot
$\leftarrow$	= Therm Flat Or Characteristic = IT Or Characteristic =			/[[1]]
l	I2T Or Characteristic = I4T			7-1-11
Reset Mode	Reset Mode	instantaneous,	instantaneous	[Protection Para
Neset Mode			instantaneous	/<14>
	Only available if: Characteristic = INV Or Characteristic = Therm Flat Or Characteristic = IT Or Characteristic =	calculated		/I-Prot
$\leftarrow$	I2T Or Characteristic = I4T	Calculated		
<b>↓</b>				/I[1]]
t rooot	Donat time for intermittent shape fellows (IND)	0.00 60.00-	00	[Drotostion Dave
t-reset	Reset time for intermittent phase failures (INV characteristics only)	0.00 - 60.00s	0s	[Protection Para
_	2,			/<14>
$\leftarrow$	Available if:Reset Mode = t-delay			/I-Prot
				/I[1]]
IH2 Blo	Blocking the trip command, if an inrush is detected.	inactive,	inactive	[Protection Para
		active		/<14>
<u>_</u>				/I-Prot
				/I[1]]
<b>"</b>				

# I Module Input States

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/I-Prot
		/[[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]
Ex rev Interl-I	Module input state: External reverse interlocking	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]
AdaptSet1-I	Module input state: Adaptive Parameter1	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]
AdaptSet2-I	Module input state: Adaptive Parameter2	[Protection Para
		/Global Prot Para
		/I-Prot
		/I[1]]
AdaptSet3-I	Module input state: Adaptive Parameter3	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]
AdaptSet4-I	Module input state: Adaptive Parameter4	[Protection Para
		/Global Prot Para
		/I-Prot
		/[1]]

# I Module Signals (Output States)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Ex rev Interl	Signal: External reverse Interlocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
IH2 Blo	Signal: Blocking the trip command by an inrush
Alarm L1	Signal: Alarm L1
Alarm L2	Signal: Alarm L2
Alarm L3	Signal: Alarm L3
Alarm	Signal: Alarm
Trip L1	Signal: General Trip Phase L1
Trip L2	Signal: General Trip Phase L2
Trip L3	Signal: General Trip Phase L3
Trip	Signal: Trip
TripCmd	Signal: Trip Command
Active AdaptSet	Active Adaptive Parameter
DefaultSet	Signal: Default Parameter Set
AdaptSet 1	Signal: Adaptive Parameter 1
AdaptSet 2	Signal: Adaptive Parameter 2
AdaptSet 3	Signal: Adaptive Parameter 3
AdaptSet 4	Signal: Adaptive Parameter 4

### Commissioning: Overcurrent Protection, non-directional [50, 51]

#### Object to be tested

■ Signals to be measured for each current protection element, the threshold values, total tripping time (recommended), or alternatively tripping delays and the fallback ratios; each time 3 x single-phase and 1 x three-phase.

# NOTICE

Especially in Holmgreen connections, wiring errors can easily happen, and these are then detected safely. Measuring the total tripping time can ensure that the secondary wiring is o.k. (from the terminal on, up to the trip coil of the CB).

# NOTICE

It is recommended to measure the total tripping time instead of the tripping delay. The tripping delay should be specified by the customer. The total tripping time is measured at the position signalling contact of the CB (not at the relay output!).

Total tripping time = tripping delay (please refer to the tolerances of the protection stages) + CB operating time (about 50 ms)

Please take the CB operating times from the technical data specified in the relevant documentation provided by the CB manufacturer.

#### Necessary means

- Current source
- May be: ampere meters
- Timer

#### Procedure

Testing the threshold values (3 x single-phase and 1 x three-phase)

Each time feed a current which is about 3-5% above the threshold value for activation/tripping. Then check the threshold values.

Testing the total tripping delay (recommendation)

Measure the total tripping times at the auxiliary contacts of the CB (CB tripping).

Testing the tripping delay (measuring at the relay output)

Measure the tripping times at the relay output.

#### Testing the fallback ratio

Reduce the current to 97% below the trip value and check the fallback ratio.


#### Successful test result

The measured total tripping delays or individual tripping delays, threshold values and fallback ratios correspond with those values, specified in the adjustment list. Permissible deviations/tolerances can be found under Technical Data.

### 51V - Voltage Restraint Overcurrent\*

For activating this function, the parameter » *VRestraint«* has to be set to *active* in the parameter set of the corresponding overcurrent element I[x]. The <u>51V</u> protection function restrains operation which reduces pickup levels. This allows the User to lower the pickup value of the <u>51V</u> protection function with the corresponding phase input voltage (phase-to-phase or phase-to-ground, depending on the setting of » *Measuring Channel«* within the current protection module). When the minimum fault phase current is close to the load current, it may make the phase time overcurrent protection coordination difficult. In this case, an undervoltage function may be used to alleviate this situation. When the voltage is low, the phase time overcurrent pickup threshold may be set low accordingly, so that the phase time overcurrent protection may achieve adequate sensitivity and better coordination. The device uses a simple linear model to determine the effective pickup by characterizing the relationship between the voltage and the phase time overcurrent pickup threshold.

Once the voltage restraint protection function is activated, the effective phase time overcurrent pickup threshold will be the calculated Pickup% times the phase time overcurrent pickup setting. The effective pickup threshold must be within the setting range allowed and, if it is less, the minimum pickup value will be used.

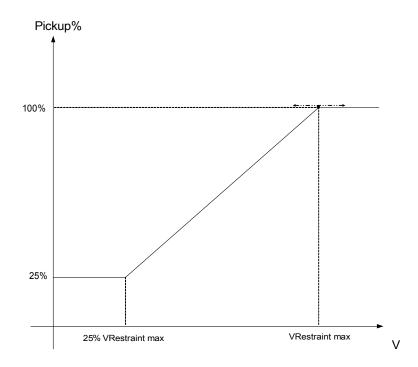

#### That means:

Vmin = 0.25\*Vmax;

- •Pickup%min = 25%;
- •Pickup% = 25%, if V <= Vmin;
- •Pickup% = 1/Vmax\*(V Vmin) + 25%, if Vmin < V < Vmax;
- •Pickup% = 100%, if V >= Vmax;

The tripping curves (characteristic) will not be influenced by the voltage restraint function.

If the voltage transformer supervision is activated, the voltage restraint overcurrent protection element is blocked in case of m.c.b. trip to avoid false trippings.

<sup>\*=</sup>available only for devices that offer voltage measurement.

# NOTICE

**Definition of Vn:** 

Vn is dependent on the *»Measuring Channel«* setting in the current protection modules.

In case that this parameter is set to "Phase to Phase":

$$Vn = Main\ VT\ sec$$

In case that this parameter is set to "Phase to Neutral":

$$Vn = \frac{Main \, VT \, sec}{\sqrt{3}}$$

If the parameter »VT con« within the field parameters is set to »Phase to Phase« the setting »Phase to Neutral« in the current modules is effectless.

### Commissioning: Overcurrent Protection, Non-directional [ANSI 51V]\*

\*=available only for devices that offer voltage measurement.

#### Object to be tested:

Signals to be measured for Voltage Restraint protection function: the threshold values, total tripping time (recommended), or alternatively tripping delays and the dropout ratios; each time 3 x single-phase and 1 x three-phase.

# NOTICE

It is recommended to measure the total tripping time instead of the tripping time. The tripping delay should be specified by the customer. The total tripping time is measured at the position signaling contacts of the CBs (not at the relay output!).

Total tripping time: = tripping delay (please refer to the tolerances of the protection stages) + CB operating time (about 50 ms)

Please take the CB switching times from the technical data, specified in the relevant documentation, provided by the CB manufacturer.

#### Necessary means:

- Current source:
- Voltage Source;
- Current and Voltage meters; and
- Timer.

#### Procedure:

Testing the threshold values (3 x single-phase and 1 x three-phase)

Feed %Pickup voltage. For each test performed, feed a current that is about 3-5% above the threshold value for activation/tripping. Then check if the pickup values are %Pickup of the value according to the standard overcurrent protection.

Testing the total tripping delay (recommendation)

Measure the total tripping times at the auxiliary contacts of the breakers (breaker tripping).

Testing the tripping delay (measuring at the relay output contact)

Measure the tripping times at the relay output contact.

#### Testing the dropout ratio

Reduce the current to 97% below the trip value and check the dropout ratio.

#### Successful test result

The measured total tripping delays or individual tripping delays, threshold values, and dropout ratios correspond with those values specified in the adjustment list. Permissible deviations/tolerances can be found under Technical Data.

### 12> - Negative-Sequence Overcurrent [51Q]

For activating this function, the parameter "Measuring Mode" has to be set to "N2" in the parameter set of the corresponding overcurrent element I[x].

The negative-sequence overcurrent protection function (<u>I2></u>) is to be seen as an equivalent to the phase overcurrent protection with the exception that it uses negative-sequence current (I2>) as measured quantities instead of the three phase currents used by phase overcurrent protection function. The negative-sequence current used by <u>I2></u> is derived from the following well-known symmetrical component transformation:

$$I_2 = \frac{1}{3} (I_{LI} + a^2 I_{L2} + a I_{L3})$$

The pickup set value of a <u>12></u> protection function should be set in accordance of the negative-sequence current occurrence in the protected object.

Besides that, the negative-sequence overcurrent protection function (<u>1/2></u>) uses the same setting parameters as the phase overcurrent protection function, like trip and reset characteristics from both IEC/ANSI standards, time multiplier, etc.


The negative-sequence overcurrent protection function (*I2>*) can be used for line, generator, transformer and motor protection to protect the system from unbalanced faults. Because the *I2>* protection function operates on the negative-sequence current component which is normally absent during load conditions, the *I2>* can, therefore, be set more sensitive than the phase overcurrent protection functions. On the other hand, coordination of negative-sequence overcurrent protection function in a radial system does not mean automatically very long fault clearing time for the furthest upstream protection devices, because the tripping time of concerned negative-sequence overcurrent protection function needs only be coordinate with the next downstream device with the negative-sequence overcurrent protection function. This makes the *I2>* in many cases as an advantageous protection concept in addition to the phase overcurrent protection function.



If you are using inrush blockings, the tripping delay of the current protection functions must be at least 30 ms or more in order to prevent faulty trippings.



At the moment of breaker closure, negative-sequence current might be the result of transients.

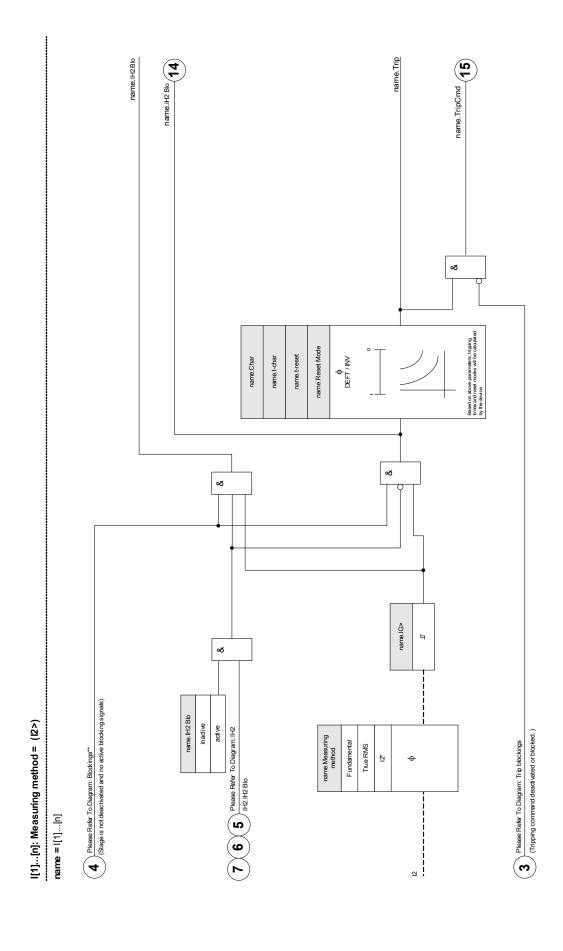

### **Commissioning: Negative Sequence Overcurrent**

Object to be tested

Signals to be measured for each current protection function: the threshold values, total tripping time (recommended), or alternatively tripping delays and the dropout ratios.

# NOTICE

It is recommended to measure the total tripping time instead of the tripping time. The tripping delay should be specified by the customer. The total tripping time is measured at the position signalling contacts of the CBs (not at the relay output!).

Total tripping time: = tripping delay (please refer to the tolerances of the protection stages) + CB operating time (about 50 ms)

Please take the CB switching times from the technical data, specified in the relevant documentation, provided by the CB manufacturer.

#### Necessary means:

- Current source
- Current meters
- Timer

### Procedure:

Testing the threshold values

In order to get a negative-sequence current, please change the phase sequence at the terminals of the current source (in case of ABC sequence to ACB – in case of a ACB sequence to ABC).

For each test performed, feed a current that is about 3-5% above the threshold value for activation/tripping. Then check the threshold values.

Testing the total tripping delay (recommendation)

Measure the total tripping times at the auxiliary contacts of the breakers (breaker tripping).

Testing the tripping delay (measuring at the relay output contact) Measure the tripping times at the relay output contact.

### Testing the dropout ratio

Reduce the current to 97% below the trip value and check the dropout ratio.


#### Successful test result

The measured total tripping delays or individual tripping delays, threshold values, and dropout ratios correspond with those values specified in the adjustment list. Permissible deviations/tolerances can be found under Technical Data.

# IH2 - Inrush

Available elements: IH2[1],IH2[2]

The inrush module can prevent false trips caused by switching actions of saturated inductive loads. The ratio of the  $2^{nd}$  harmonic to the  $1^{st}$  harmonic is taken into account.

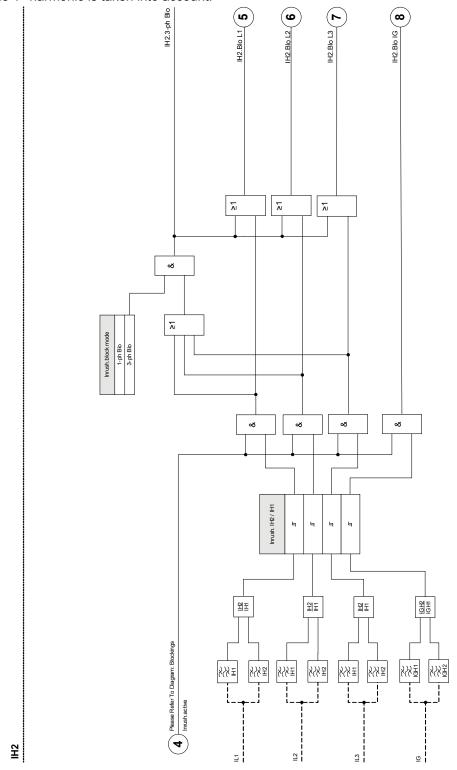

# **Device Planning Parameters of the Inrush Module**

Parameter	Description	Options	Default	Menu path	
Mode	Mode	do not use,	IH2[1]: use	[Device planning]	
		use	IH2[2]: do not use		

# **Global Protection Parameters of the Inrush module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	IH2[1]: W1	IH2[1]: W1	[Protection Para
		IH2[2]: W2	IH2[2]: W2	/Global Prot Para
				/I-Prot
				/IH2[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment List		[Protection Para
(allowed) within a parameter set and if the state of t	(allowed) within a parameter set and if the state of the assigned signal is true.			/Global Prot Para
	accigned signal to dac.			/I-Prot
				/IH2[1]]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/I-Prot
				/IH2[1]]

# **Setting Group Parameters of the Inrush Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/I-Prot
				/IH2[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".			/I-Prot
				/IH2[1]]
IH2 / IH1	Maximum permissible percentage of the 2nd harmonic of the 1st harmonic.	10 - 40%	15%	[Protection Para
				/I-Prot
block mode	1-ph Blo: If an inrush is detected in one phase, the	1-ph Blo,	1-ph Blo	/IH2[1]] [Protection Para
	corresponding phase of those modules will be blocked,	3-ph Blo		/<14>
	where inrush blocking is set to active./3-ph Blo: If an inrush is detected in at least one phase, all three			/I-Prot
	phases of those modules where inrush blocking is set to active will be blocked (cross blocking).			/IH2[1]]

# **Inrush Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/I-Prot
		/IH2[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/I-Prot
		/IH2[1]]

### **Inrush Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo L1	Signal: Blocked L1
Blo L2	Signal: Blocked L2
Blo L3	Signal: Blocked L3
Blo IG meas	Signal: Blocking of the ground (earth) protection module (measured ground current)
Blo IG calc	Signal: Blocking of the ground (earth) protection module (calculated ground current)
3-ph Blo	Signal: Inrush was detected in at least one phase - trip command blocked.

### **Commissioning: Inrush**



Dependent on the parameterized inrush-blocking-mode (»1-ph Blo or 3-ph Blo«), the test procedure is different.

For mode »1-ph-Blo« the test has to be carried out first for each individual phase and then for all three phases together.

For mode »3-ph-Blo« the test is a three-phase one.

Object to be tested Test of inrush blocking.

#### Necessary means

- three-phase current source with adjustable frequency
- three-phase current source (for the first harmonic)

Procedure (dependent on the parameterized blocking mode)

- Feed the current to the secondary side with nominal frequency.
- Feed abruptly current to the secondary side with double nominal frequency. The amplitude must exceed the preset ratio/threshold » IH2/IN«.
- Ascertain that the signal »INRUSH ALARM« is generated now.

#### Successful test results

The signal »Inrush Alarm« is generated and the event recorder indicates the blocking of the current protection stage.

### IG> - Earth Fault [50N/G, 51N/G]

Available elements: IG[1],IG[2],IG[3],IG[4]



If you are using inrush blockings the tripping delay of the earth current protection functions must be at least 30 ms or more in order to prevent faulty trippings.

# NOTICE

All earth current elements are identically structured.

## NOTICE

This module offers Adaptive Parameter Sets.

Parameters can be modified within parameter sets dynamically by means of Adaptive Parameter Sets.

Please refer to chapter Parameter / Adaptive Parameter Sets.

The following table shows the application options of the earth overcurrent protection element

Applications of the IE-Protection Module	Setting in	Option
ANSI 50N/G – Earth overcurrent protection, non directional	Device Planning menu Setting: non directional	Measuring Mode: Fundamental/TrueRMS
ANSI 51N/G – Earth short circuit protection, non directional	Device Planning menu Setting: non directional	Measuring Mode: Fundamental/TrueRMS

#### Measuring Mode

For all protection elements it can be determined, whether the measurement is done on basis of the » *Fundamental«* or if » *TrueRMS«* measurement is used.

For each element the following characteristics are available:

- DEFT
- NINV (IEC)
- VINV (IEC)
- LINV (IEC)
- EINV (IEC)
- MINV (ANSI)
- VINV (ANSI)
- EINV (ANSI)
- RXIDG
- Thermal Flat
- IT
- I2T
- I4T

### Explanation:

t = Tripping delay

t-char = Time multiplier/tripping characteristic factor. The setting range depends on the selected tripping curve. IG = Fault current


IG> = If the pickup value is exceeded, the module/element starts to time out to trip .

The directional decision depends on the layout of the mains star-point or the angle between residual voltage and ground current. The residual voltage can be measured via suitable transformers (da-dn winding – formerly: e-n) or can be calculated, provided the VTs are in star-connection.

The earth current can be measured either directly via a cable-type transformer or detected by a Holmgreen connection. The earth current can alternatively be calculated from the phase currents; but this is only possible if the phase currents are not ascertained by a V-connection.

The device can optionally be procured with a sensitive earth current measuring input (in preparation).



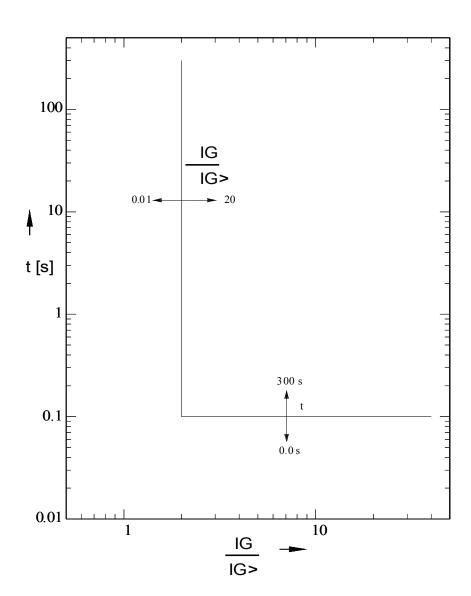

### **IEC NINV**



### Notice!


Various reset modes are available. Resetting via characteristic, delayed and

Reset

Trip

$$t = \left| \frac{0.14}{\left(\frac{|G|}{|G|}\right)^2 - 1} \right| * t-char [s]$$
 
$$t = \frac{0.14}{\left(\frac{|G|}{|G|}\right)^{0.02} - 1} * t-char [s]$$

$$t = \frac{0.14}{\left(\frac{IG}{IG}\right)^{0.02}} *t-char[s]$$

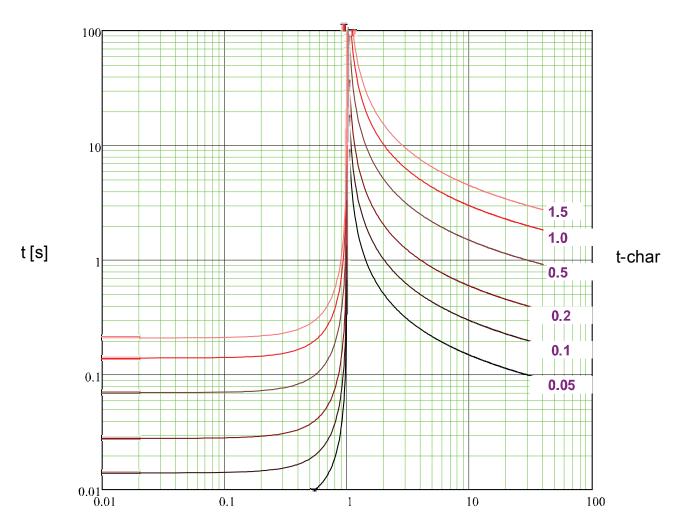

x \* IG> (multiples of pickup)

### **IEC VINV**




Various reset modes are available . Resetting via characteristic, delayed and

Reset

$$t = \left| \frac{13.5}{\left(\frac{|G|}{|G|}\right)^2 1} \right| * t-char [s]$$

$$t = \frac{13.5}{\left(\frac{|G|}{|G|}\right)^2 1} * t-char [s]$$

$$t = \frac{13.5}{\left(\frac{IG}{IG}\right)-1} *t-char [s]$$

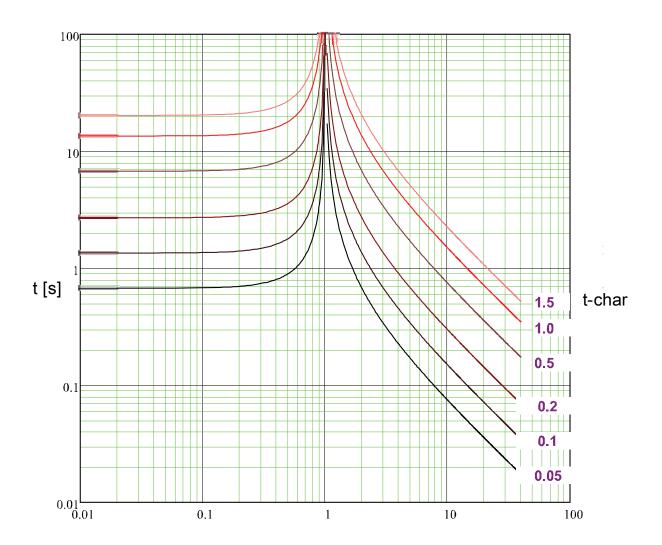

x \* IG> (multiples of pickup)

### **IEC LINV**




### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{120}{\left(\frac{|G|}{|G|}\right)^2 1} \right| * t-char [s]$$

$$t = \frac{120}{\left(\frac{|G|}{|G|}\right)^2 1} * t-char [s]$$

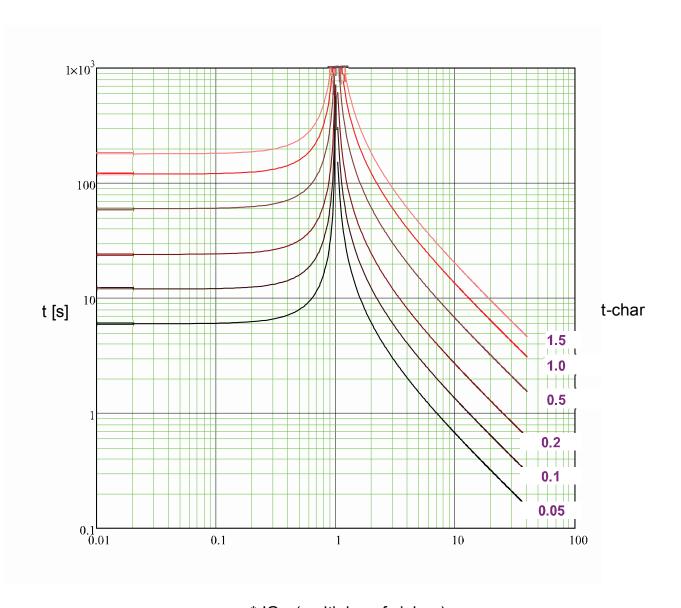

x \* IG> (multiples of pickup)

### **IEC EINV**



### Notice!


Various reset modes are available . Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{80}{\left(\frac{|G|}{|G|}\right)^2 - 1} \right| * t-char [s]$$

$$t = \frac{80}{\left(\frac{|G|}{|G|}\right)^2 - 1} * t-char [s]$$

$$t = \frac{80}{\left(\frac{IG}{IG}\right)^2 - 1}$$
 \*t-char [s]

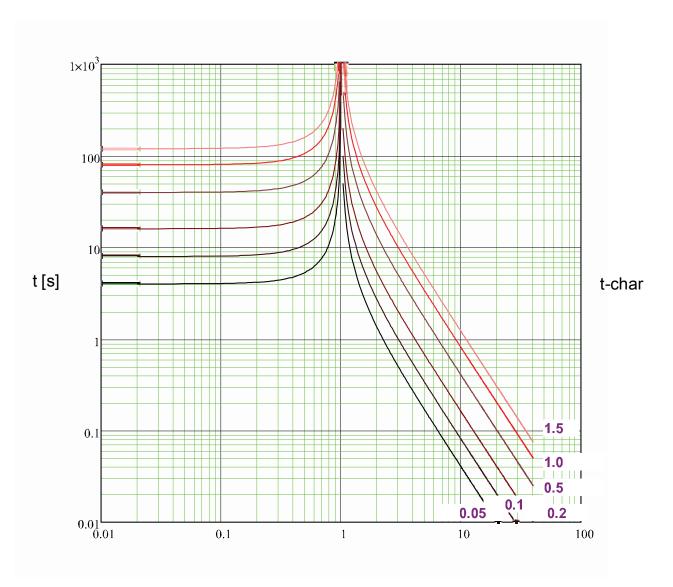

x \* IG> (multiples of pickup)

### **ANSI MINV**




### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset

$$t = \left| \frac{4.85}{\left(\frac{|G|}{|F|}\right)^2 - 1} \right| * t-char [s]$$

$$t = \left(\frac{0.0515}{\left(\frac{|G|}{|G|}\right)^{0.02} + 0.1140}\right) *t-char [s]$$

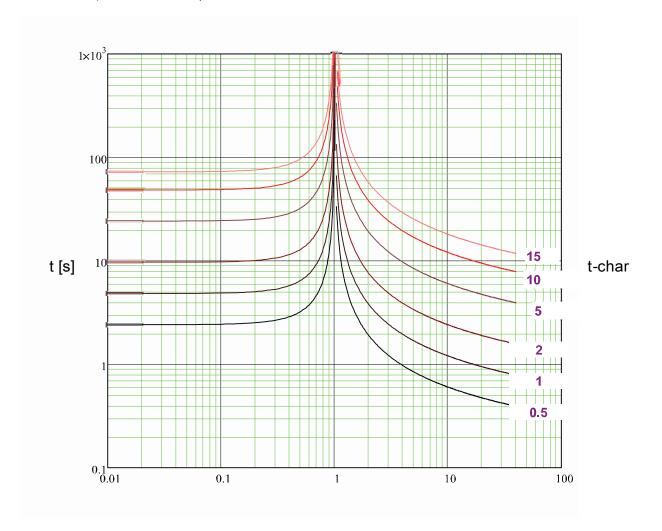

x \* IG> (multiples of pickup)


### **ANSI VINV**



### Notice!

Various reset modes are available. Resetting via characteristic, delayed and instantaneous.

Reset Trip
$$t = \left| \frac{21.6}{\left(\frac{IG}{IG}\right)^2 - 1} \right| * t\text{-char [s]} \qquad t = \left(\frac{19.61}{\left(\frac{IG}{IG}\right)^2 - 1} + 0.491\right) * t\text{-char [s]}$$

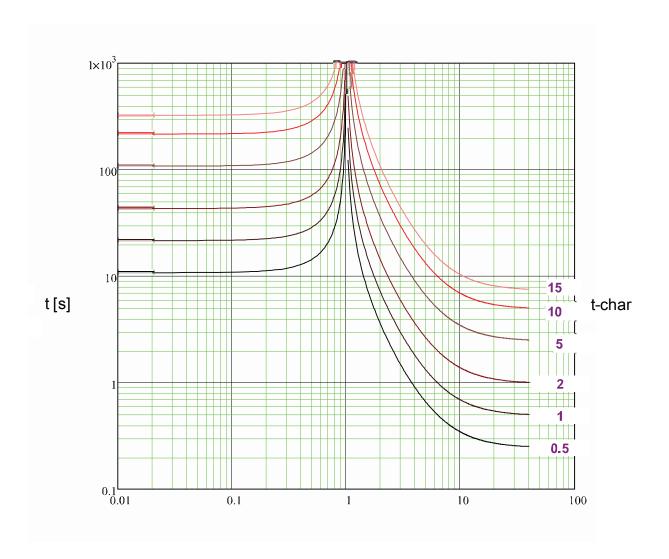

x \* IG> (multiples of pickup)

### **ANSI EINV**




### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous.

Reset

$$t = \left| \frac{29.1}{\left(\frac{|G|}{|G|}\right)^2 1} \right|^* t\text{-char [s]}$$


$$t = \left| \frac{29.1}{\left(\frac{|G|}{|G|}\right)^2 - 1} \right| * t-char [s]$$
 
$$t = \left( \frac{28.2}{\left(\frac{|G|}{|G|}\right)^2 - 1} + 0.1217 \right) * t-char [s]$$

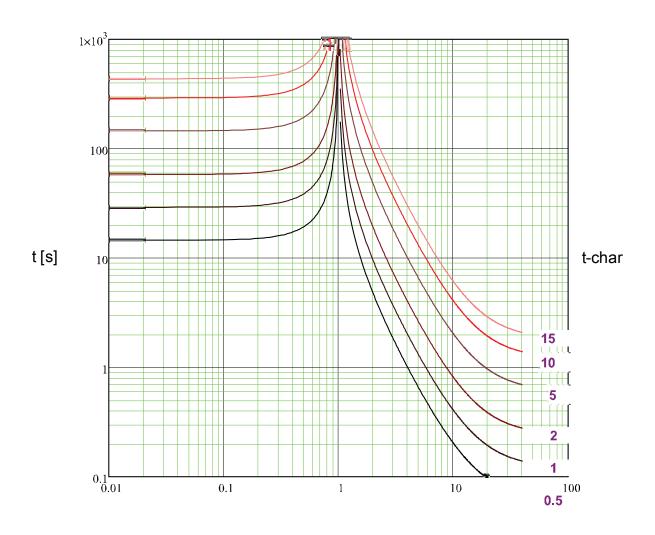

x \* IG> (multiples of pickup)

### **RXIDG**



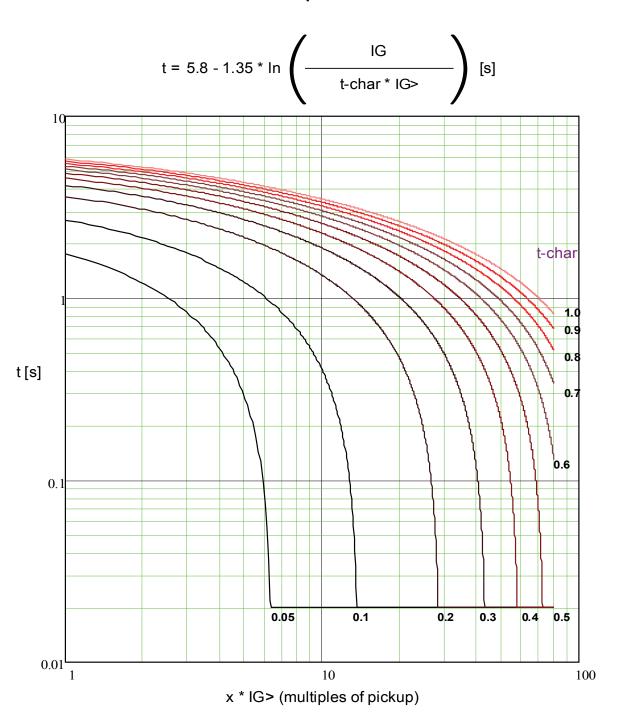


### **Therm Flat**



#### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{5^*1^2}{\left(\frac{IG}{IGnom}\right)^0} \right| *t-char[s] \qquad t = \frac{5}{\left(\frac{IG}{IGnom}\right)^0} *t-char[s]$$

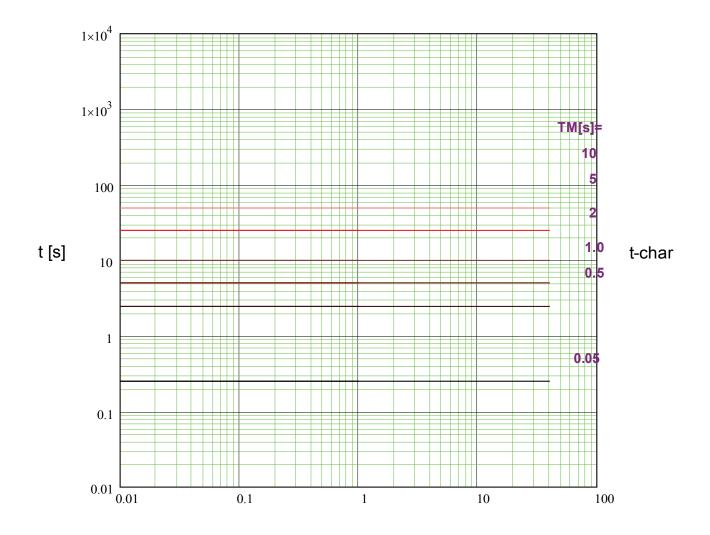

x \* In (multiples of the nominal current)

IT



### Notice!

Various reset modes are available. Resetting via characteristic, delayed and instantaneous.


Reset

Trip

$$t = \left| \frac{5^*1^2}{\left(\frac{IG}{IGnom}\right)^0} \right| * t-char[s]$$
 
$$t = \frac{5^*1^1}{\left(\frac{IG}{IGnom}\right)^1} * t-char[s]$$

$$t = \frac{5^*1^1}{\left(\frac{IG}{IGnom}\right)^1} *t-char[s]$$

DOK-HB-MRDT4E

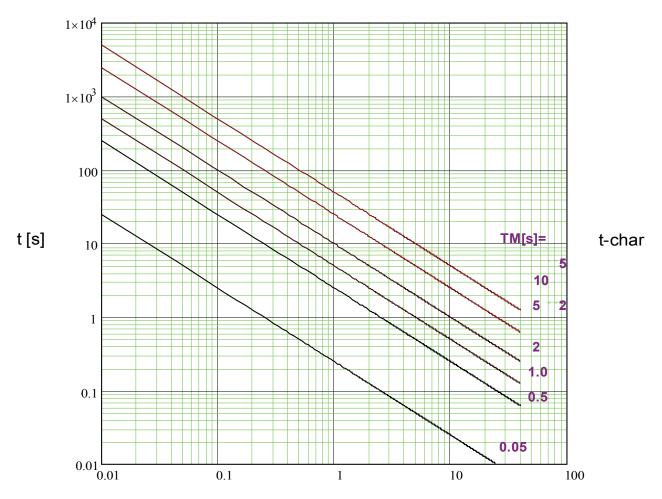

x \* In (multiples of the nominal current)


### **12T**



### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{5*1^2}{\left(\frac{IG}{IGnom}\right)^0} \right| *t-char[s] \qquad t = \frac{5*1^2}{\left(\frac{IG}{IGnom}\right)^2} *t-char[s]$$

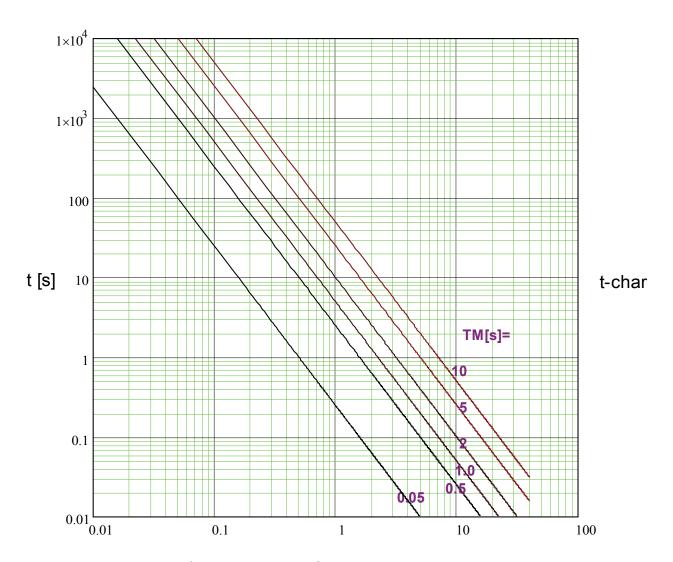

x \* In (multiples of the nominal current)


### **I4T**




### Notice!

Various reset modes are available . Resetting via characteristic, delayed and instantaneous .

Reset Trip
$$t = \left| \frac{5^*1^2}{\left(\frac{IG}{IGnom}\right)^0} \right| *t-char[s] \qquad t = \frac{5^*1^4}{\left(\frac{IG}{IGnom}\right)^4} *t-char[s]$$

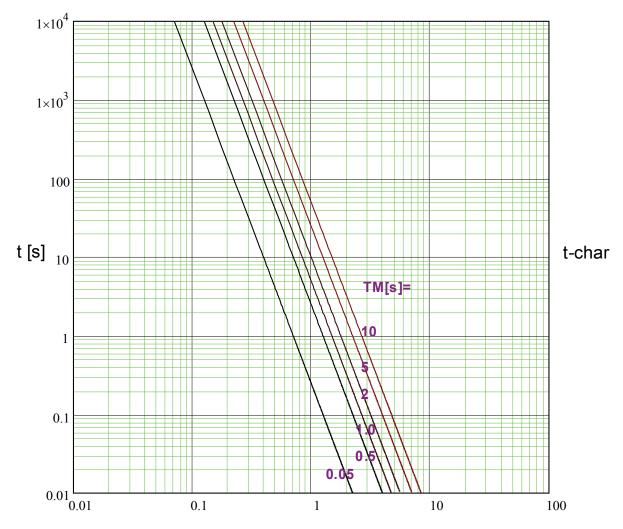

x \* In (multiples of the nominal current)

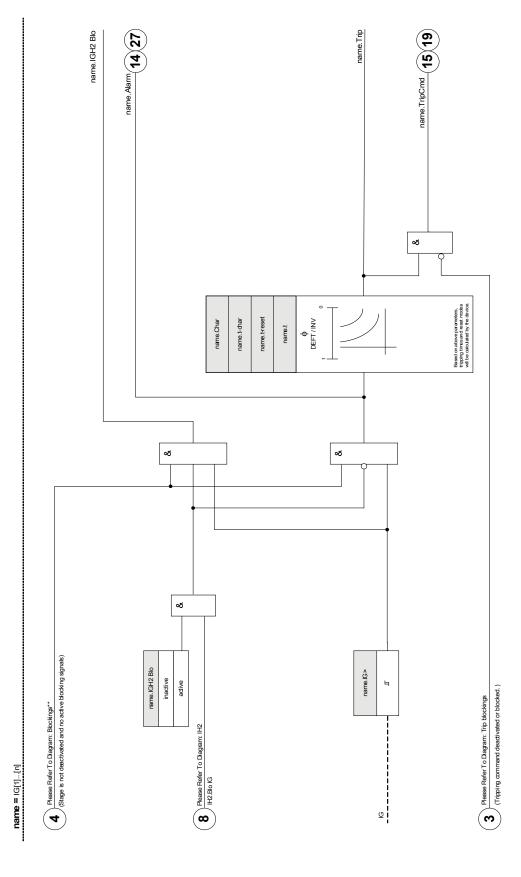

IG[1]...[n]

## **Device Planning Parameters of the Ground Fault Protection**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		non directional		

### **Global Protection Parameters of the Ground Fault Protection**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Protection Para
		W2		/Global Prot Para
				/I-Prot
				/IG[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/I-Prot
)				/IG[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/I-Prot
				/IG[1]]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment		[Protection Para
	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned	List		/Global Prot Para
	signal is true.			/I-Prot
				/IG[1]]
Ex rev Interl	External blocking of the module by external reverse	1n, Assignment		[Protection Para
	interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is	List		/Global Prot Para
	true.			/I-Prot
				/IG[1]]
AdaptSet 1	Assignment Adaptive Parameter 1	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/IG[1]]
AdaptSet 2	Assignment Adaptive Parameter 2	AdaptSet	-,-	[Protection Para
				/Global Prot Para
				/I-Prot
				/IG[1]]

Parameter	Description	Setting range	Default	Menu path
AdaptSet 3	Assignment Adaptive Parameter 3	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/IG[1]]
AdaptSet 4	Assignment Adaptive Parameter 4	AdaptSet		[Protection Para
				/Global Prot Para
				/I-Prot
				/IG[1]]

## **Setting Group Parameters of the Ground Fault Protection**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/I-Prot
				/IG[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/IG[1]]
Ex rev Interl Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
•	modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".			/IG[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
$\bigcirc$				/I-Prot
				/IG[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/IG[1]]
IG Source	Selection if measured or calculated ground current should be used.	sensitive measure-	calculated	[Protection Para
	Should be used.	ment, measured,		/<14>
$\bigotimes$		calculated,		/I-Prot
		measured (W2),		/IG[1]]
		sensitive measure-		
Magazzine wasthand	Magazzina mothodi fundom satel sa ares	ment (W2)	Fundamental	[Drotostics Desc
Measuring method	Measuring method: fundamental or rms	Fundamental,	Fundamental	[Protection Para
		True RMS		/<14>
$\bigotimes$				/I-Prot
				/IG[1]]

Parameter	Description	Setting range	Default	Menu path
Meas Circuit Superv	Activates the use of the measuring circuit supervision. In this case the module will be blocked if a measuring circuit supervision module (e.g. LOP, VTS) signals a disturbed measuring circuit (e.g. caused by a fuse failure).  Only available if "VX Source" ist set to "calculated".	inactive	inactive	[Protection Para /<14> /I-Prot /IG[1]]
IG>	If the pickup value is exceeded, the module/stage will be started.	0.02 - 20.00ln	0.02ln	[Protection Para /<14> /I-Prot /IG[1]]
IGs>	If the pickup value is exceeded, the module/stage will be started.	0.002 - 2.000ln	0.02ln	[Protection Para /<14> /I-Prot /IG[1]]
Char	Characteristic	DEFT, IEC NINV, IEC VINV, IEC EINV, IEC LINV, ANSI MINV, ANSI VINV, ANSI EINV, Therm Flat, IT, I2T, I4T, RXIDG	DEFT	[Protection Para /<14> /I-Prot /IG[1]]
t	Tripping delay  Only available if: Characteristic = DEFT	0.00 - 300.00s	0.00s	[Protection Para /<14> /I-Prot /IG[1]]
t-char	Time multiplier/tripping characteristic factor. The setting range depends on the selected tripping curve.  Only available if: Characteristic = INV Or Characteristic = Therm Flat Or Characteristic = IT Or Characteristic = I2T Or Characteristic = RXIDG	0.02 - 20.00	1	[Protection Para /<14> /I-Prot /IG[1]]

Parameter	Description	Setting range	Default	Menu path
Reset Mode	Reset Mode  Only available if: Characteristic = INV Or Characteristic = Therm Flat Or Characteristic = IT Or Characteristic = I2T Or Characteristic = RXIDG	instantaneous, t-delay, calculated	instantaneous	[Protection Para /<14> /I-Prot /IG[1]]
t-reset	Reset time for intermittent phase failures (INV characteristics only)  Only available if: Characteristic = INV Or Characteristic = Therm Flat Or Characteristic = IT Or Characteristic = I2T Or Characteristic = I4TOr Characteristic = RXIDG Only available if:Reset Mode = t-delay	0.00 - 60.00s	0.00s	[Protection Para /<14> /I-Prot /IG[1]]
IH2 Blo	Blocking the trip command, if an inrush is detected.	inactive, active	inactive	[Protection Para /<14> /I-Prot /IG[1]]

## **Ground Fault Protection Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
Ex rev Interl-I	Module input state: External reverse interlocking	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
AdaptSet1-I	Module input state: Adaptive Parameter1	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
AdaptSet2-I	Module input state: Adaptive Parameter2	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
AdaptSet3-I	Module input state: Adaptive Parameter3	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]
AdaptSet4-I	Module input state: Adaptive Parameter4	[Protection Para
		/Global Prot Para
		/I-Prot
		/IG[1]]

### **Ground Fault Protection Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Ex rev Interl	Signal: External reverse Interlocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm IG
Trip	Signal: Trip
TripCmd	Signal: Trip Command
IGH2 Blo	Signal: blocked by an inrush
Active AdaptSet	Active Adaptive Parameter
DefaultSet	Signal: Default Parameter Set
AdaptSet 1	Signal: Adaptive Parameter 1
AdaptSet 2	Signal: Adaptive Parameter 2
AdaptSet 3	Signal: Adaptive Parameter 3
AdaptSet 4	Signal: Adaptive Parameter 4

## Commissioning: Ground Fault Protection – non-directional [50N/G, 51N/G]

Please test the non-directional earth overcurrent analog to the nondirectional phase overcurrent protection.

### I2> and %I2/I1> - Unbalanced Load [46]

Elements: |12>[1],|2>[2]

The  $\underline{I2}$  Current Unbalance element works similar to the  $\underline{V}$  O12 Voltage Unbalance element. The positive and negative sequence currents are calculated from the 3-phase currents. The Threshold setting defines a minimum operating current magnitude of I2 for the 46 function to operate, which insures that the relay has a solid basis for initiating a current unbalance trip. The  $\frac{(I2/I1)}{(I2/I1)}$  (option) setting is the unbalance trip pickup setting. It is defined by the ratio of negative sequence current to positive sequence current  $\frac{(I2/I1)}{(I2/I1)}$ 

This function requires negative sequence current magnitude above the threshold setting and the percentage current unbalance above the » %(I2/I1)« setting before allowing a current unbalance trip. Therefore, both the threshold and percent settings must be met for the specified Delay time setting before the relay initiates a trip for current unbalance.

## NOTICE

All elements are identically structured.

Rating value I2> is the permitted continuous unbalanced load current. For both steps trip characteristics are provided, namely a definite time characteristic (DEFT) and an inverse characteristic (INV).

The characteristic of the inverse curve is as follows:

$$t[s] \le \frac{K * ln^2}{l2^2 - l2 > 2}$$

Legend:

In [A] = Nominal current

t [s] = Tripping delay

K [s] = Indicates the thermal load capability of the engine while running with 100% unbalanced load current.

I2> [A] = The Threshold setting defines a minimum operating current magnitude of I2 for the 46 function to operate, which ensures that the relay has a solid basis for initiating a current unbalance trip. This is a supervisory function and not a trip level.

I2 [A] = Measured value (calculated): Unbalanced load current

In the equation shown above the heating-up process is assumed by integration of the counter system current I2. When I2> is undershoot, the built-up heat amount will be reduced in line with the adjusted cooling-down constant "tau-cool".

Theta(t) = Theta<sub>0</sub> \* 
$$e^{-\frac{t}{\tau-\infty 0}}$$

### Legend:


t = Tripping delay

т-cool = Cooling time constant

Theta(t) = Momentary heat (thermal) energy

Theta  $_0$  = Heat (thermal) energy before the cooling down has started

If the heat amount is not reduced when the permitted unbalanced load current is overshoot again, the remaining heat amount will cause an earlier tripping.

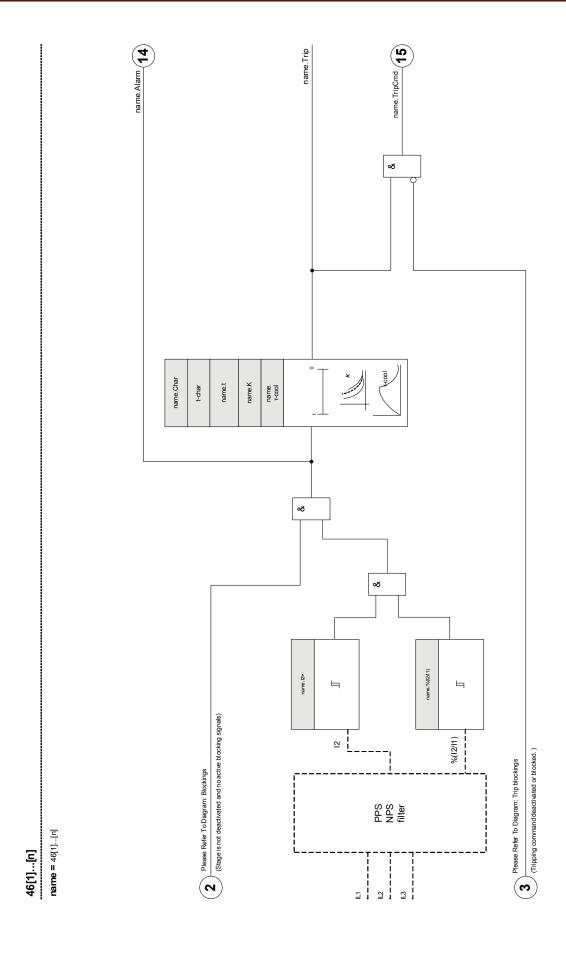

### **Device Planning Parameters of the Current Unbalance Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

### **Global Protection Parameters of the Current Unbalance Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Protection Para
		W2		/Global Prot Para
				/I-Prot
				/I2>[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/I-Prot
				/I2>[1]]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment	-,-	[Protection Para
		List		/Global Prot Para
				/I-Prot
				/I2>[1]]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/I-Prot
				/12>[1]]
CurrentBase	Base Current Selection (based on Device Rating	Device Rating,	Device Rating	[Protection Para
$\bigcirc$	(1A/5A)/Protected Object Rating).	Protected Object		/Global Prot Para
		Rating		/I-Prot
				/12>[1]]

## **Setting Group Parameters of the Current Unbalance Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
$\bigcirc$				/I-Prot
				/I2>[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
$\bigcirc$	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/I2>[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/I-Prot
				/12>[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a	active		/<14>
$\bigcirc$	signal is assigned to the corresponding global protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized			/12>[1]]
	"ExBlo TripCmd Fc=active".			7.2 [1]
12>	The Threshold setting defines a minimum operating	0.01 - 4.00ln	0.01ln	[Protection Para
	current magnitude of I2 for the 46 function to operate, which ensures that the relay has a solid basis for			/<14>
$\bigcirc$	initiating a current unbalance trip. This is a supervisory			/I-Prot
	function and not a trip level.			/I2>[1]]
	Only available if: Device planning: I2>.Mode = 46			
I2/FLA	Generator/motor unbalance current pickup value based	0.000 - 1.000lb	0.08lb	[Protection Para
	on the full load current(FLA) (Setting from Continuous Unbalance Current Capability)			/<14>
$\bigcirc$				/I-Prot
	Only available if: Device planning: I2>.Mode = 46G			/I2>[1]]
%(I2/I1)	The %(I2/I1) setting is the unbalance trip pickup setting.	inactive,	inactive	[Protection Para
	It is defined by the ratio of negative sequence current to positive sequence current (% Unbalance=I2/I1). Phase	active		/<14>
	sequence will be taken into account automatically.			/I-Prot
				/12>[1]]
%(I2/I1)	The %(I2/I1) setting is the unbalance trip pickup setting.	2 - 40%	20%	[Protection Para
	It is defined by the ratio of negative sequence current to positive sequence current (% Unbalance=I2/I1). Phase			/<14>
	sequence will be taken into account automatically.			/I-Prot
	Only available if: %(I2/I1) = use			/12>[1]]

Parameter	Description	Setting range	Default	Menu path
Char	Characteristic	DEFT,	DEFT	[Protection Para
		INV		/<14>
				/I-Prot
				/12>[1]]
t	Tripping delay	0.00 - 300.00s	0.00s	[Protection Para
	Only available if: Characteristic = DEFT			/<14>
	Only available ii. Onaracteristic - DEFT			/I-Prot
				/12>[1]]
К	This setting is the negative sequence capability constant. This value is normally provided by the generator manufacturer.	1.00 - 200.00s	10.0s	[Protection Para
				/<14>
	Only available if: Characteristic = INV			/I-Prot
				/12>[1]]
T-cool	If the unbalanced load current falls below the pickup value, the cooling-off time is taken into account. If the unbalanced load exceeds the pickup value again, than the saved heat within the electrical equipment will lead to an accelerated trip.	0.0 - 60000.0s	0.0s	[Protection Para
				/<14>
				/I-Prot
				/12>[1]]
	Only available if: Characteristic = INV			

DOK-HB-MRDT4E

## **Current Unbalance Module Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/I-Prot
		/l2>[1]]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/I-Prot
		/l2>[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/I-Prot
		/12>[1]]

## **Current Unbalance Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm Negative Sequence
Trip	Signal: Trip
TripCmd	Signal: Trip Command

### **Commissioning: Current Unbalance Module**

#### Object to be tested:

Test of the unbalanced load protection function.

#### Necessary means:

- Three-phase current source with adjustable current unbalance; and
- Timer.

#### Procedure:

#### Check the phase sequence:

- Ensure that the phase sequence is the same as that set in the field parameters.
- Feed-in a three-phase nominal current.
- Change to the »Measuring Values« menu.
- Check the measuring value for the unbalanced current *»I2«*. The measuring value displayed for *»I2«* should be zero (within the physical measuring accuracy).



If the displayed magnitude for I2 is the same as that for the symmetrical nominal currents fed to the relay, it implies that the phase sequence of the currents seen by the relay is reversed.

- Now turn-off phase L1.
- Again check the measuring value of the unbalanced current »*I2«* in the »Measuring Values« menu. The measuring value of the asymmetrical current »*I2«* should now be 33%.
- Turn-on phase L1, but turn-off phase L2.
- Once again check the measuring value of the asymmetrical current I2 in the »Measuring Values« menu. The measuring value of the asymmetrical current »I2« should be again 33%.
- Turn-on phase L2, but turn-off phase L3.
- Again check the measuring value of asymmetrical current »*I2«* in the »Measuring Values« menu. The measuring value of the asymmetrical current »*I2«* should still be 33%.

#### Testing the trip delay:

- Apply a symmetrical three-phase current system (nominal currents).
- Switch off IL1 (the threshold value » Threshold« for »12« must be below 33%).
- Measure the tripping time.

The present current unbalance »12« corresponds with 1/3 of the existing phase current displayed.

#### Testing the threshold values

- Configure minimum » %12/11« setting (2%) and an arbitrary threshold value » Threshold« (I2).
- For testing the threshold value, a current has to be fed to phase A which is lower than three times the adjusted threshold value » *Threshold* « (I2).
- Feeding only phase A results in » %/2//1 = 100%«, so the first condition » %/2//1 >= 2%« is always fulfilled.
- Now increase the phase L1 current until the relay is activated.

### Testing the dropout ratio of the threshold values

Having tripped the relay in the previous test, now decrease the phase A current. The dropout ratio must not be higher than 0.97 times the threshold value.

#### Testing %I2/I1

- Configure minimum threshold value » *Threshold* « (I2) (0.01 x In) and set » % *I2/I1* « greater or equal to 10%.
- Apply a symmetrical three-phase current system (nominal currents). The measuring value of » %12/11« should be 0%.
- Now increase the phase L1 current. With this configuration, the threshold value » *Threshold«* (I2) should be reached before the value » %I2/I1« reaches the set » %I2/I1« ratio threshold.
- Continue increasing the phase 1 current until the relay is activated.

### Testing the dropout ratio of %I2/I1

Having tripped the relay in the previous test, now decrease the phase L1 current. The dropout of » %I2/I1« has to be 1% below the » %I2/I1«setting.

#### Successful test result:

The measured trip delays, threshold values, and dropout ratios are within the permitted deviations/tolerances, specified under Technical Data.

### **ThR-Protection Module: Thermal Replica [49]**

#### ThR

The maximal permissible thermal loading capacity, and consequently the tripping delay of a component, depends on the amount of the flowing current at a specific time, the »previously existing load (current)« as well as on a constant specified by the component.

The thermal overload protection is in compliance with IEC255-8 (VDE 435 T301). A complete thermal replica function is implemented in the device as Homogeneous-Body Replica of the equipment to be protected and by taking the previously existing load into account. The protection function is of one step design, provided with a warning limit.

For this the device calculates the thermal load of the equipment by using the existing measured values and the parameter settings. When knowing the thermal constants, the temperature of the equipment can be established (simulated).

The general tripping times of the overload protection can be gathered from the following equation according to IEC 255-8:

$$t = \tau$$
-warm  $ln(\frac{l^2 - lp^2}{l^2 - (K^*lb)^2})$ 

#### Legend:

t = Tripping delay

т-warm = Warming-up time constant


T-cool = Cooling time constant

lb = Base current: Maximum permissible thermal continuous current.

K = Overload Factor: The maximum thermal limit is defined as k\*IB, the product of the overload factor and the base current.

I = measured current (x ln)

Ip = Preload Current

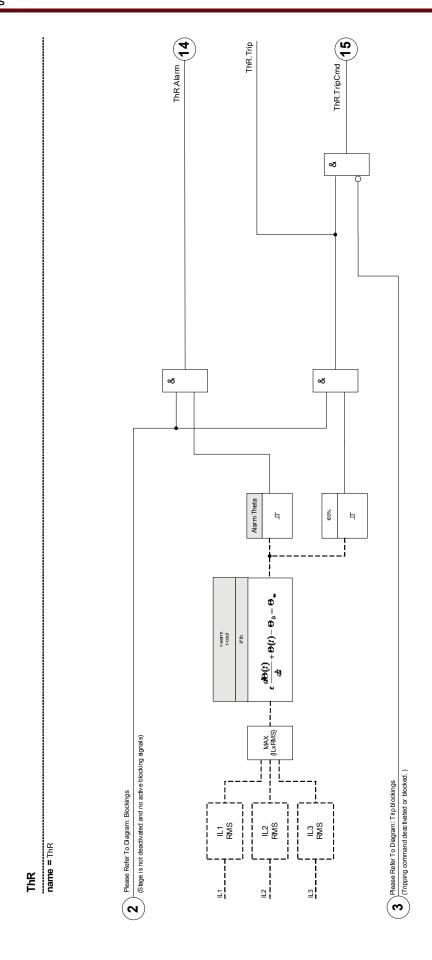

### **Direct Commands of the Thermal Overload Module**

Parameter	Description	Setting range	Default	Menu path
Reset	Reset the Thermal Replica	inactive,	inactive	[Operation
		active		/Reset]

## **Device Planning Parameters of the Thermal Overload Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

### **Global Protection Parameters of the Thermal Overload Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Protection Para
		W2		/Global Prot Para
				/I-Prot
				/ThR]
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/I-Prot
				/ThR]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/I-Prot
				/ThR]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/I-Prot
				/ThR]

# **Setting Group Parameters of the Thermal Overload Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/I-Prot
				/ThR]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/ThR]
	EABIOT O GOUVE .			
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/I-Prot
				/ThR]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/I-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ThR]
	Explo Tripomo i c-active .			
lb	Base current: Maximum permissible thermal continuous	0.01 - 4.00ln	1.00ln	[Protection Para
	current.			/<14>
				/I-Prot
				/ThR]
К	Overload Factor: The maximum thermal limit is defined	0.80 - 1.20	1.00	[Protection Para
	as k*IB, the product of the overload factor and the base current.			/<14>
	our one.			/I-Prot
				/ThR]
Alarm Theta	Pickup value	50 - 100%	80%	[Protection Para
				/<14>
				/I-Prot
				/ThR]
т-warm	Warming-up time constant	1 - 60000s	10s	[Protection Para
				/<14>
				/I-Prot
				/ThR]

### Protective Elements

Parameter	Description	Setting range	Default	Menu path
т-сооІ	Cooling time constant	1 - 60000s	10s	[Protection Para
				/<14>
				/I-Prot
				/ThR]

# **Thermal Overload Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/I-Prot
		/ThR]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/I-Prot
		/ThR]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/I-Prot
		/ThR]

## Signals of the Thermal Overload Signals (Output States)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm Thermal Overload
Trip	Signal: Trip
TripCmd	Signal: Trip Command
Res Thermal Cap	Signal: Resetting Thermal Replica

## **Thermal Overload Module Values**

Value	Description	Menu path
Thermal Cap Used	Measured value: Thermal Capacity Used	[Operation
		/Measured values
		/ThR]
Time To Trip	Measured value (calculated/measured): Remaining time until the	[Operation /Measured values
	thermal overload module will trip	
		/ThR]

### **Thermal Overload Module Statistics**

Value	Description	Menu path
Thermal Cap max	Thermal Capacity maximum value	[Operation
		/Statistics
		/Max
		/ThR]
Thermal Cap min	Thermal Capacity minimum value	[Operation
		/Statistics
		/Min
		/ThR]

### **Commissioning: Thermal Replica**

Object to be tested Protective function <u>ThR</u>

#### Necessary means

- Three-phase current source
- Timer

#### Procedure

Calculate the tripping time for the current to be constantly impressed by using the formula for the thermal image.

# NOTICE

The parameter of the temperature rise of the component  $v_w$  has to be known to guarantee an optimal protection.

$$t = \tau$$
-warm  $ln(\frac{l^2 - lp^2}{l^2 - (K^*lb)^2})$ 

#### Legend:

t = Tripping delay

т-warm = Warming-up time constant

τ-cool = Cooling time constant

lb = Base current: Maximum permissible thermal continuous current.

K = Overload Factor: The maximum thermal limit is defined as k\*IB, the product of the overload factor and the base current.

I = measured current (x In)

lp = Preload Current

#### Testing the threshold values

Apply the current you have based your mathematical calculation on.

Testing the trip delay



The thermal capacity should be zero before the test is started. See »Measuring Values«.

For testing the trip delay, a timer is to be connected to the contact of the associated trip relay.

Apply the current you have based your mathematical calculation on. The timer is started as soon as the current is applied and it is stopped when the relay trips.

#### Successful test result

The calculated tripping time and the fallback ratio comply with the measured values. For permissible deviations/tolerances, please see Technical Data.

#### **SOTF - Switch Onto Fault**

#### SOTF

In case a faulty line is energized (e.g.: when an earthing switch is in the ON-Position), an instantaneous trip is required. The <u>SOTF</u> module is provided to generate a permissive signal for other protection functions such as overcurrents to accelerate their trips (via adaptive parameters). The <u>SOTF</u> condition is recognized according to the User's operation mode that can be based on:

- The breaker state (CB Pos);
- No current flowing (I<);</p>
- Breaker state and no current flowing( CB Pos and I<);</p>
- Breaker switched on manually (CB manually On); and/or
- An external trigger (Ex SOTF).

This protection module can initiate a high speed trip of the overcurrent protection modules.




This module issues a signal only (the module is not armed and does not issue a trip command).

In order to influence the trip settings of the overcurrent protection in case of switching onto a fault, the User has to assign the signal "SOTF.ENABLED" onto an Adaptive Parameter Set. Please refer to Parameter / Adaptive Parameter Sets sections. Within the Adaptive Parameter Set, the User has to modify the trip characteristic of the overcurrent protection according to the User's needs.

## NOTICE

This Notice applies to protective devices that offer control functionality only! This protective element requires, that a switchgear (circuit breaker is assigned to it. It is allowed only to assign switchgears (circuit breaker) to this protective element, whose measuring transformers provide measuring data to the protective device.

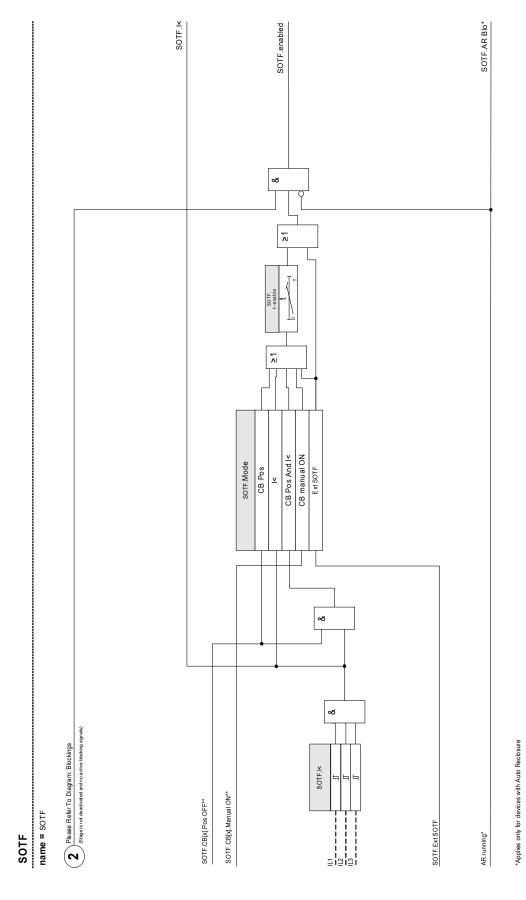

\*\*This signal is the output of the switchgear that is assigned to this protective element. This applies to protective devices that offer control functionality.

## **Device Planning Parameters of the Switch Onto Fault Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameters of the Switch Onto Fault Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1,	W1	[Protection Para
		W2		/Global Prot Para
				/SOTF]
Mode	Mode	CB Pos,	CB Pos	[Protection Para
		I<,		/Global Prot Para
		CB Pos And I<,		/SOTF]
		CB manual ON,		
		Ext SOTF		
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/SOTF]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List	/Global Prot Para	
				/SOTF]
Ex rev Interl	External blocking of the module by external reverse	1n, Assignment		[Protection Para
	interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is	List		/Global Prot Para
	true.			/SOTF]
Assigned SG	Assigned Switchgear	-,	SG[1]	[Protection Para
	Only available if: Mode = CB Pos Or CB Pos And I<	SG[1],		/Global Prot Para
	Only available in wood Ob 1 00 01 00 7110 1	SG[2]		/SOTF]
Ext SOTF	External Switch Onto Fault	1n, DI-LogicList		[Protection Para
	Only available if: Mode = Ext SOTF			/Global Prot Para
				/SOTF]

# **Setting Group Parameters of the Switch Onto Fault Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive, active	inactive	[Protection Para /<14> /SOTF]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".	inactive, active	inactive	[Protection Para /<14> /SOTF]
Ex rev Interl Fc	Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".	inactive, active	inactive	[Protection Para /<14> /SOTF]
I<	The CB is in the OFF Position, if the measured current is less than this parameter.	0.01 - 1.00ln	0.01ln	[Protection Para /<14> /SOTF]
t-enable	While this timer is running, and while the module is not blocked, the Switch Onto Fault Module is effective (SOTF is armed).	0.10 - 10.00s	2s	[Protection Para /<14> /SOTF]

## **Switch Onto Fault Module Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking	[Protection Para
		/Global Prot Para
		/SOTF]
ExBlo2-l	Module input state: External blocking	[Protection Para
		/Global Prot Para
		/SOTF]
Ex rev Interl-I	Module input state: External reverse interlocking	[Protection Para
		/Global Prot Para
		/SOTF]
Ext SOTF-I	Module input state: External Switch Onto Fault Alarm	[Protection Para
		/Global Prot Para
		/SOTF]

## Signals of the Switch Onto Fault Module (Output States)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Ex rev Interl	Signal: External reverse Interlocking
enabled	Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.
l<	Signal: No Load Current.

#### **Commissioning: Switch Onto Fault**

#### Object to be tested

Testing the module <u>Switch Onto Fault</u> according to the parameterized operating mode:

- The breaker state (CB Pos);
- No current flowing (I<);</p>
- Breaker state and no current flowing( CB Pos and I<);</p>
- Breaker switched on manually (CB manually On); and/or
- An external trigger (Ex SOTF).

#### Necessary means:

- Three-phase current source (If the Enable-Mode depends on current);
- Ampere meters (May be needed if the Enable-Mode depends on current); and
- Timer.

#### Test Example for Mode CB manual ON

### NOTICE

Mode I<: In order to test the effectiveness: Initially do not feed any current. Start the timer and feed with an abrupt change current that is distinctly greater than the I<-threshold to the measuring inputs of the relay.

Mode I< and Bkr state: Simultaneous switch on the breaker manually and feed with an abrupt change current that is distinctly greater than the I<-threshold.

Mode Bkr state: The breaker has to be in the OFF Position. The signal "SOTF.ENABLED"=0 is untrue. If the breaker is switched on, the signal "SOTF.ENABLED"=1 becomes true as long as the timer t-enabled is running.

- The Circuit Breaker has to be in the OFF Position. There must be no load current.
- The Status Display of the device shows the signal "SOTF. ENABLED"=1.

#### Testing

- Switch the Circuit Breaker manually ON and start the timer at the same time.
- After the hold time t-enable is expired the state of the signal has to change to "SOTF.ENABLED"=0.
- Write down the measured time.

#### Successful test result

The measured total tripping delays or individual tripping delays, threshold values and fallback ratios correspond with those values, specified in the adjustment list. Permissible deviations/tolerances can be found under Technical Data.

#### **CLPU - Cold Load Pickup**

Available Elements: CLPU

When the electric load is freshly started or restarted after a prolonged outage, the load current tends to have a temporary surge that could be several times the normal load current in magnitude due to motor starting. This phenomena is called cold load inrush. If the overcurrent pickup threshold is set according to the maximum possible load inrush, the overcurrent protection may be insensitive to some faults, thus making whole protection systems coordination difficult or even impossible. On the other hand, the overcurrent protection could trip on load inrush if it is set based on the fault current studies. The <u>CLPU</u> module is provided to generate a temporary blocking/desensitizing signal to prevent overcurrent protections from unwanted tripping. The cold load pickup function detects a warm-to-cold load transition according to the four selectable cold load detection modes:

- CB POS (Breaker state);
- I< (Undercurrent);</li>
- CB POS AND I< (Breaker state and undercurrent); and
- CB POS OR I< (Breaker state OR undercurrent).

After a warm-to-cold load transition has been detected, a specified load-off timer will be started. This User-settable load-off timer is used in some cases to make sure that the load is really "cold" enough. After the load-off timer times out, the CLPU function issues an "enable" signal »CLPU.ENABLED« that can be used to block some sensitive protection elements like instantaneous overcurrent elements, current unbalance, or power protection elements at User's choice. Using this enable signal, some time inverse overcurrent elements may also be desensitized at the User's choice by means of activating adaptive settings of the corresponding overcurrent elements.

When a cold load condition is finished (a cold-to-warm load condition is detected) due to, for example, breaker closing or load current injection, a load inrush detector will be initiated that supervises the coming and going of the load inrush current process. A load inrush is detected if the coming load current exceeds a User-specified inrush current threshold. This load inrush is considered as finished if the load current is decreased to 90% of the inrush current threshold. After the inrush current is diminished, a settle timer starts. The cold load pickup enable signal can only be reset after the settle timer times out. Another max-Block timer, which is started parallel with the load inrush detector after a cold load condition is finished, may also terminate the CLPU enable signal if a load inrush condition is prolonged abnormally.

The cold load pickup function can be blocked manually by external or internal signal at the User's choice. For the devices with Auto-Reclosing function, the <u>CLPU</u> function will be blocked automatically if auto-reclosure is initiated (AR is running).



This module issues a signal only (it is not armed).

In order to influence the tripping settings of the overcurrent protection, the User has to assign the signal "CLPU.ENABLED" to an adaptive parameter set. Please refer to the Parameter / Adaptive Parameter Sets section. Within the adaptive parameter set, the User has to modify the tripping characteristic of the overcurrent protection according to the needs.

# NOTICE


Please be aware of the meaning of the two delay timers.

t load Off (Pickup Delay): After this time expires, the load is no longer diversified.

t Max Block (Release Delay): After the starting condition is fulfilled (e.g.: breaker switched on manually), the "CLPU.enabled" signal will be issued for this time. That means for the duration of this time, the tripping thresholds of the overcurrent protection can be desensitized by means of adaptive parameters (please refer to the Parameters section). This timer will be stopped if the current falls below 0.9 times of the threshold of the load inrush detector and remains below 0.9 times of the threshold for the duration of the settle time.


### NOTICE

This Notice applies to protective devices that offer control functionality only! This protective element requires, that a switchgear (circuit breaker is assigned to it. It is allowed only to assign switchgears (circuit breaker) to this protective element, whose measuring transformers provide measuring data to the protective device.

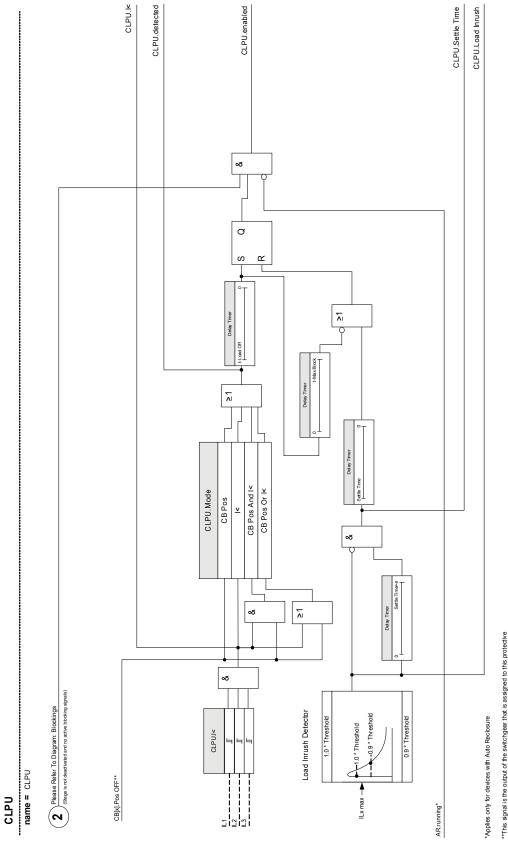

\*\*This signal is the output of the switchgear that is assigned to this protective element. This applies to protective devices that offer control functionality.

Example Mode: Breaker Position

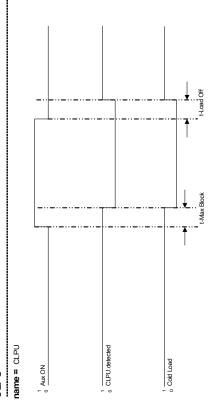

## **Device Planning Parameters of the Cold Load Pickup Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameter of the Cold Load Pickup Module**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	W1, W2	W1	[Protection Para /Global Prot Para /CLPU]
Mode	Mode	CB Pos, I<, CB Pos Or I<, CB Pos And I<	CB Pos	[Protection Para /Global Prot Para /CLPU]
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para /Global Prot Para /CLPU]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para /Global Prot Para /CLPU]
Ex rev Interl	External blocking of the module by external reverse interlocking, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para /Global Prot Para /CLPU]
CB Pos Detect	Criterion by which the Circuit Breaker Switch Position is to be detected.  Only available if: CLPU.Mode = I<	, SG[1].Pos, SG[2].Pos	-,-	[Protection Para /Global Prot Para /CLPU]

# **Set Parameters of the Cold Load Pickup Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/CLPU]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".			/CLPU]
Ex rev Interl Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "Ex rev Interl Fc = active".			/CLPU]
t-Load Off	Select the outage time required for a load to be	0.00 - 7200.00s	1.00s	[Protection Para
	considered cold. If the Pickup Timer (Delay) has run out, a Cold Load Signal will be issued.			/<14>
	0.00, 0.000 2000 0.g 1 20 1.00000.			/CLPU]
t-Max Block	Select the amount of time for the cold load inrush. If the	0.00 - 300.00s	1.00s	[Protection Para
	Release Time (Delay) has run out, a Warm Load Signal will be issued.			/<14>
				/CLPU]
<	The CB is in the OFF Position, if the measured current	0.01 - 1.00ln	0.01In	[Protection Para
	is less than this parameter.			/<14>
				/CLPU]
Threshold	Set the load current inrush threshold.	0.10 - 4.00ln	1.2ln	[Protection Para
				/<14>
				/CLPU]
Settle Time	Select the time for the cold load inrush	0.00 - 300.00s	1.00s	[Protection Para
				/<14>
				/CLPU]

## States of the Inputs of the Cold Load Pickup Module

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking	[Protection Para
		/Global Prot Para
		/CLPU]
ExBlo2-l	Module input state: External blocking	[Protection Para
		/Global Prot Para
		/CLPU]
Ex rev Interl-I	Module input state: External reverse interlocking	[Protection Para
		/Global Prot Para
		/CLPU]
CB Pos-I	Module input state: Circuit Breaker Position by now (switching	[Protection Para
	position).	/Global Prot Para
		/CLPU]

## Signals of the Cold Load Pickup Module (States of the Outputs)

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Ex rev Interl	Signal: External reverse Interlocking
enabled	Signal: Cold Load enabled
detected	Signal: Cold Load detected
I<	Signal: No Load Current.
Load Inrush	Signal: Load Inrush
Settle Time	Signal: Settle Time

#### **Commissioning of the Cold Load Pickup Module**

#### Object to be tested:

Testing the <u>Cold Load Pickup</u> module according to the configured operating mode:

- •I< (No current);</pre>
- •Bkr state (Breaker position);
- •I< (No Current) and Bkr state (Breaker position); and
- •I< (No Current) or Bkr state (Breaker position).

#### Necessary means:

- Three-phase current source (if the Enable Mode depends on current);
- •Ampere meters (may be needed if the Enable Mode depends on current); and
- •Timer.

Test Example for Mode Bkr State (Breaker Position)

## NOTICE

Mode I<: In order to test the tripping delay, start the timer and feed with an abrupt change current that is distinctly less than the I<-threshold. Measure the tripping delay. In order to measure the drop-out ratio, feed a current with an abrupt change that is distinctly above the I<-threshold.

Mode I< and Bkr state: Combine the abrupt change (switching the current ON and OFF) with the manual switching ON and OFF of the breaker.

Mode I< or Bkr state: Initially carry out the test with an abrupt changing current that is switched ON and OFF (above and below the I<-threshold). Measure the tripping times. Finally, carry out the test by manually switching the breaker ON and OFF.

- •The breaker has to be in the OFF position. There must not be any load current.
- •The Status Display of the device shows the signal "CLPU.ENABLED"=1.
- •The Status Display of the device shows the signal "CLPU.I<"=1.
- •Testing the tripping delay and the resetting ratio:
- •Switch the breaker manually ON and simultaneously start the timer.
- •After the the » t Max Block (Release Delay) « timer has expired, the signal "CPLU.Enabled "=0 has to become untrue.
- •Write down the measured time.
- •Manually switch the breaker OFF and simultaneously start the timer.
- •After the »t load Off« timer has expired, the signal "CPLU.ENABLED"=1 has to become true.
- •Write down the measured time.

#### Successful test result:

The measured total tripping delays or individual tripping delays, threshold values, and drop-out ratios correspond with those values specified in the adjustment list. Permissible deviations/tolerances can be found in the Technical Data section.

### **ExP - External Protection**

Available stages: ExP[1] ,ExP[2] ,ExP[3] ,ExP[4]



All 4 stages of the external protection *ExP[1]...[4]* are identically structured.

By using the module <u>External Protection</u> the following can be incorporated into the device function: trip commands, alarms and blockades of external protection facilities. Devices which are not provided with a communication interface can be connected to the control system as well.

name. Alam-I ∞ಶ ∞ ∞ Please Refer To Diagram: Trip blockings (Tripping command deactivated or blocked.) Please Refer To Diagram: Blockings
(Stage is not deactivated and no active blocking signals) 1..n, Assignment List 1..n, Assignment List name.Alarm name.Trip

name.Trip-I

**ExP[1]...[n]**name = ExP[1]...[n]

## **Device Planning Parameters of the Module External Protection**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

### **Global Protection Parameters of the Module External Protection**

Parameter	Description	Setting range	Default	Menu path
ExBlo1		1n, Assignment		[Protection Para
		List		/Global Prot Para
				/ExP
				/ExP[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/ExP
				/ExP[1]]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment		[Protection Para
		List		/Global Prot Para
				/ExP
				/ExP[1]]
Alarm	Assignment for External Alarm	1n, Assignment		[Protection Para
		List		/Global Prot Para
				/ExP
				/ExP[1]]
Trip	External trip of the CB if the state of the assigned signal	1n, Assignment List		[Protection Para
	is true.			/Global Prot Para
				/ExP
				/ExP[1]]

# **Setting Group Parameters of the Module External Protection**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
$\bigcirc$				/ExP
				/ExP[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
$\bigcirc$	protection parameter. If the signal becomes true, those			/ExP
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/ExP[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/ExP
				/ExP[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/ExP
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/ExP[1]]

## **Module External Protection Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/ExP
		/ExP[1]]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/ExP
		/ExP[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/ExP
		/ExP[1]]
Alarm-I	Module input state: Alarm	[Protection Para
		/Global Prot Para
		/ExP
		/ExP[1]]
Trip-I	Module input state: Trip	[Protection Para
		/Global Prot Para
		/ExP
		/ExP[1]]

# **Module External Protection Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

### **Commissioning: External Protection**

#### Object to be tested

Test of the module External Protection

#### Necessary means

Depending on the application

#### Procedure

Simulate the functionality of the External Protection (Alarm, Trip, Blockings...) by (de-)energizing of the digital inputs.

#### Successful test result

All external alarms, external trips and external blockings are correctly recognized and processed by the device.

## **Ext Temp Superv Protection Module – External Temperature Supervision**

Elements:

Ext Temp Superv[1] ,Ext Temp Superv[2] ,Ext Temp Superv[3]



All elements of the external protection <u>Ext Temp Superv</u> are identically structured.

By using the <u>Ext Temp Superv</u> module, the following can be incorporated into the device function: trip commands, alarms (pickups), and blockages of digital external temperature protection.

Since the <u>Ext Temp Superv</u> module is functionally identical to the <u>Ext. Protection</u> module, it is the User's responsibility to select the proper assignments for the settings Alarm (Pickup) and Trip for reflecting the purpose of this module.

Ext Temp Superv. Trip-l Ext Temp Superv.Alarm-l Ext Temp Superv.Trip Ext Temp Superv.TripCmd 15 Ext Temp Superv Alarm (14) ∞ Bease Refer To Dagram: Trip blockings (Tripping command deactivated or blocked.) Please Refer To Diagram: Blockings (Stage is not deactivated and no adrive blocking signals) 1..n, Assignment List 1..n, Assignment List name. Alarm name.Trip

Ext Temp Superv[[1]...[n]

name = Ext Temp Superv[1]...[n]

## **Device Planning Parameters of the External Temperature Supervision Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## Global Protection Parameters of the External Temperature Supervision Module

Parameter	Description	Setting range	Default	Menu path
ExBlo1		1n, Assignment		[Protection Para
		List		/Global Prot Para
				/Temp-Prot
				/Ext Temp Superv[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Temp-Prot
				/Ext Temp Superv[1]]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ext Temp Superv[1]]
Alarm	Assignment for External Alarm	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ext Temp Superv[1]]
Trip	External trip of the CB if the state of the assigned signal	1n, Assignment List		[Protection Para
	is true.			/Global Prot Para
				/Temp-Prot
				/Ext Temp Superv[1]]

# **Setting Group Parameters of the External Temperature Supervision Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
$\bigcirc$				/Temp-Prot
				/Ext Temp Superv[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
$\bigcirc$	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/Ext Temp Superv[1]]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
$\bigcirc$				/Temp-Prot
				/Ext Temp Superv[1]]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/Ext Temp Superv[1]]

## **External Temperature Supervision Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ext Temp Superv[1]]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ext Temp Superv[1]]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ext Temp Superv[1]]
Alarm-I	Module input state: Alarm	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ext Temp Superv[1]]
Trip-I	Module input state: Trip	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ext Temp Superv[1]]

## **External Temperature Supervision Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

### **Commissioning: External Temperature Supervision**

Object to be tested:

Test of the External Temperature Supervision module.

Necessary means:

Dependent on the application.

Procedure:

Simulate the functionality of the External Temperature Supervision (pickup, trip, blockings) by (de-)energizing of the digital inputs.

Successful test result:

All external pickups, external trips, and external blockings are correctly recognized and processed by the device.

### **Ext Oil Temp Protection Module – External Oil Temperature Protection**

Available elements:

Ex Oil Temp

By using the <u>Ext Oil Temp</u> module, the following can be incorporated into the device function: trip commands, alarms (pickups), and blockages of digital external temperature facilities.

Since the *Ext Oil Temp* module is functionally identical to the *Ext. Protection* module, it is the User's responsibility to select the proper assignments for the settings Alarm (Pickup) and Trip for reflecting the purpose of this module.

Ex Oil Temp. Trip-I Ex Oil Temp. Alarm-l Ex Oil Temp.Trip Ex Oil Temp.TripCmd 15 Ex Oil Temp. Alarm (14) ∞ Please Refer To Diagram: Trip blockings (Tripping command deactivated or blocked.) Please Refer To Diagram: Blockings (Stage is not deactivated and no active blocking signals) 1..n, Assignment List 1..n, Assignment List name.Alarm name.Trip

Ex Oil Temp[1]...[n]

name = Ex Oil Temp[1]..[n]

## **Device Planning Parameters of the External Oil Temperature Protection Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## Global Protection Parameters of the External Oil Temperature Protection Module

Parameter	Description	Setting range	Default	Menu path
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ex Oil Temp]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment List		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.			/Global Prot Para
	assigned signal is true.			/Temp-Prot
				/Ex Oil Temp]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List	-,-	[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ex Oil Temp]
Alarm	Assignment for External Alarm	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ex Oil Temp]
Trip	External trip of the CB if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/Ex Oil Temp]

# Setting Group Parameters of the External Oil Temperature Protection Module

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
$\bigcirc$				/Temp-Prot
				/Ex Oil Temp]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
$\bigcirc$	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/Ex Oil Temp]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Temp-Prot
				/Ex Oil Temp]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/Ex Oil Temp]
	Exercise imperior of dollars.			

## **External Oil Temperature Protection Module Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ex Oil Temp]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ex Oil Temp]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ex Oil Temp]
Alarm-I	Module input state: Alarm	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ex Oil Temp]
Trip-I	Module input state: Trip	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/Ex Oil Temp]

## **External Oil Temperature Protection Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

### **Commissioning: External Protection**

#### Object to be tested:

Test of the External Oil Temperature Protection module.

#### Necessary means:

Dependent on the application.

#### Procedure:

Simulate the functionality of the External Oil Temperature Protection (pickup, trip, blockings) by (de-)energizing of the digital inputs.

#### Successful test result:

All external pickups, external trips, and external blockings are correctly recognized and processed by the device.

### Sudden Pressure Protection Module – Sudden Pressure Protection

Available elements: Ext Sudd Press

### **Principle – General Use**

Most large size transformers (5000 KVA or above) are recommended to be equipped with a sudden pressure relay (Buchholz) that detects rapid change in oil or gas pressure within the tank as result of internal arcing. The sudden pressure relay can detect internal faults such as turn to turn faults that other protection functions such as differential and overcurrents may not be sensitive enough to sense. The sudden pressure relay is usually equipped with output contacts that can be directly used for tripping and alarming, but it does not have recording and communication capabilities built in.

A sudden pressure protection module is provided in the protective device to take the output signals from the conventional sudden pressure relay and to form more secure and intelligent transformer protections. Through this module, the events of sudden pressure relay operations can be recorded and communicated to the control center (SCADA).

Ext Sudd Press. Trip-l Ext Sudd Press.Alarm-l Ext Sudd Press.Trip Ext Sudd Press. TripCmd (15) ∞ Bease Refer To Dagram Trip blockings
(Tripping command deactivated or blocked.) Please Refer To Diagram: Blockings (Stage is not deactivated and no adrive blocking signals) 1..n, Assignment List 1..n, Assignment List name. Alarm name.Trip

Ext Sudd Press
name = Ext Sudd Press

## **Device Planning Parameters of the Sudden Pressure Protection Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameters of the Sudden Pressure Protection Module**

Parameter	Description	Setting range	Default	Menu path
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para /Global Prot Para /Ext Sudd Press]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List	**	[Protection Para /Global Prot Para /Ext Sudd Press]
ExBlo TripCmd	External blocking of the Trip Command of the module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List	**	[Protection Para /Global Prot Para /Ext Sudd Press]
Alarm	Assignment for External Alarm	1n, Assignment List	**	[Protection Para /Global Prot Para /Ext Sudd Press]
Trip	External trip of the CB if the state of the assigned signal is true.	1n, Assignment List		[Protection Para /Global Prot Para /Ext Sudd Press]

# **Setting Group Parameters of the Sudden Pressure Protection Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Ext Sudd Press]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".			/Ext Sudd Press]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Ext Sudd Press]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/Ext Sudd Press]

# **Sudden Pressure Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Ext Sudd Press]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Ext Sudd Press]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Ext Sudd Press]
Alarm-I	Module input state: Alarm	[Protection Para
		/Global Prot Para
		/Ext Sudd Press]
Trip-I	Module input state: Trip	[Protection Para
		/Global Prot Para
		/Ext Sudd Press]

# **Sudden Pressure Protection Module Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Blo TripCmd	Signal: Trip Command blocked
ExBlo TripCmd	Signal: External Blocking of the Trip Command
Alarm	Signal: Alarm
Trip	Signal: Trip
TripCmd	Signal: Trip Command

# **Commissioning: Sudden Pressure Protection**

Object to be tested:

Test of the Sudden Pressure Protection module.

Necessary means:

Dependent on the application.

Procedure:

Simulate the functionality of the Sudden Protection Relay.

Successful test result:

All external pickups, external trips, and external blockings are correctly recognized and processed by the device.

# **Supervision**

### CBF- Circuit Breaker Failure [50BF\*/62BF]

\*=only available in protective relays that offer current measurement.

Available elements: CBF[1], CBF[2]

### Principle – General Use

The breaker failure (BF) protection is used to provide backup protection in the event that a breaker fails to operate properly during fault clearing. This signal is to be used to trip the upstream breaker (e.g. infeed of a busbar) either via an output relay or via Communication (SCADA). Depending on the ordered device and type there are different/multiple schemes available to detect a breaker failure.

### Start/Trigger of the CBF Timer

A supervision timer »*t-CBF«* will be started, once the <u>CBF</u> module is triggered. Even if the Trigger signal drops again, this timer will continue to run. If the timer runs down/elapses (is not stopped), the module will issue a trip afterwards. This trip signal is to be used to trip the upstream breaker (backup).

### Stopping the CBF

The timer will be stopped if the opening of the breaker is detected. Depending on the supervision scheme the timer will be stopped if the current falls below the current threshold or if the position signals indicate the open position of the breaker or a combination of both. The <u>CBF</u> module will remain within the state rejected until the trigger signal drops (falls back).

#### Detecting a Breaker Failure

Depending on the supervision scheme, the Circuit Breaker Failure signal (Trip) will be set if either:

- the current doesn't fall below the threshold or
- the position signals indicate that the breaker is in the closed position or
- both.

### Reject state of the CBF module

The <u>CBF</u> module will switch into the rejected state if the circuit breaker failure triggers are still active while the open position of the breaker has been detected successfully.

### Readiness for Operation

The <u>CBF</u> module will switch back into the Stand-by if the trigger signals drop (fall back).

#### Locking

A locking signal will be issued simultaneously with the <u>CBF</u>-Signal (Trip). The locking signal is permanent. This signal has to be acknowledged at the HMI.

# NOTICE

Note on devices that offer Wide Frequency Range measurement:

The supervision scheme 50BF will be blocked as soon as the frequency differs more than 5% from the nominal frequency. As long as the frequency differs more than 5% from the nominal frequency the supervision scheme "50BF and CB Pos" will work according to the "CB Pos" scheme.

## **Supervision Schemes**

Up to three supvervision schemes are available depending on the ordered device type and variant in order to detect a circuit breaker failure.

#### 50BF\*

A supervision timer will be started as soon as the <u>CBF</u>module is triggered by a trip signal. A breaker failure will be detected and a signal will be issued if the measured current does not fall below a set threshold while this timer runs down.

This supervision scheme is available within protective relays that offer current measurement.

#### CB Pos

A supervision timer will be started as soon as the <u>CBF</u> module is triggered by a trip signal. A breaker failure will be detected and a signal will be issued if the evaluation of the position indicators of the circuit breaker does not indicate that the breaker has been switched off sucessfully while this timer runs down.

This supervision scheme is available within all protective relays. This scheme is recommended if breaker failures have to be detected while there is no or not much load flow (small currents). This might e.g. be the case if overvoltage or overfrequency is supervisioned for a Gen-Set that is running in Stand-by.

#### 50 BF and CB Pos\*

A supervision timer will be started as soon as the <u>CBF</u> module is triggered by a trip signal. A breaker failure will be detected and a signal will be issued if the measured current does not fall below a set threshold and if simultaneously the evaluation of the position indicators of the circuit breaker does not indicate that the breaker has been switched off sucessfully while this timer runs down.

This scheme is recommended if breaker failures have to be double checked. This scheme will issue a trip command to the upstream breaker even if position indicators indicate misleadingly (faulty) that the breaker has been opened or if the current measurement indicates misleadingly (faulty) that the breaker is now in the open position.

\*=only available in protective relays that offer current measurement.

### **Trigger Modes**

There are three trigger modes for the <u>CBF</u> module available. In addition to that, there are three assignable trigger inputs available that might trigger the <u>CBF</u> module even if they are not assigned within the breaker manager onto the breaker that is to be monitored.

- All Trips: All trip signals that are assigned to this breaker (within the trip manager) will start the <u>CBF</u> module (please refer also to section "Trigger signals of the Circuit Breaker Failure").
- Current Trips: All current trips that are assigned to this breaker (within the trip manager) will start the <u>CBF</u> module (please refer also to section "Trigger signals of the Circuit Breaker Failure").
- External Trips: All external trips that are assigned to this breaker (within the trip manager) will start the <u>CBF</u> module (please refer also to section "Trigger signals of the Circuit Breaker Failure").
- •In addition, the User can also select *none* (e.g.: if the User intends to use one of the three additional assignable trigger inputs).

## NOTICE

Those trips can exclusively start the breaker failures that are assigned within the trip manager to the breaker that is to be supervised. In contrast to that the additional three triggers 1-3 will trigger the <u>CBF</u>module even if they are not assigned onto the breaker within the corresponding breaker manager.

# NOTICE

Select the winding side (Breaker, Winding) from which the measured currents should be taken in case this protective device provides more than one current measurement card.

# NOTICE

This Notice applies to protective devices that offer control functionality only! This protective element requires, that a switchgear (circuit breaker is assigned to it. It is allowed only to assign switchgears (circuit breaker) to this protective element, whose measuring transformers provide measuring data to the protective device.

### **Breaker Failure Lockout**

The signal of the Circuit Breaker Failure is latched. This signal can be used to block the breaker against a switching on attempt.

## **Tabular Summary**

		Supervision Schemes	
	Where? Within [	Protection Para\Global Prot Para\S	Supervision\CBF]
	CB Pos <sup>2)</sup>	50BF <sup>3)</sup>	CBPos und 50BF <sup>4)</sup>
Which breaker is to be monitored?	Selection ot the breaker that is to be monitored.	Selection ot the breaker that is to be monitored.	Selection ot the breaker that is to be monitored.
Where to select? Within [Protection Para\Global Prot Para\Supervision\CBF]	(In case that more than one breaker is available)	(In case that more than one breaker is available)	(In case that more than one breaker is available)
Trigger Modi	All Trips⁵)	All Trips⁵)	All Trips⁵)
(Who starts the CBF-timer?)	or	or	or
	All Current Trips⁵)	All Current Trips <sup>5)</sup>	All Current Trips⁵)
Where to set? Within [Protection Para\Global Prot	or	or	or
Para\Supervision\CBF]	External Trips⁵)	External Trips⁵)	External Trips <sup>5)</sup>
	and the breaker is in the closed position and the CBF module is within the stand-by state.	and the CBF module is within the stand-by state.	and the breaker is in the closed position and the CBF module is within the stand-by state.
Who stopps the CBF-Timer?  Once the timer has been stopped the CBF module will switch into the state "Rejected". The module will switch back into the state "Stand-by" if the trigger signals are dropped.	Position indicators indicate that the swichtgear (breaker) is in the open position.	Current is fallen below the I<-threshold <sup>1)</sup> .	Position indicators indicate that the swichtgear (breaker) is in the open position <b>and</b> current is fallen below the I<-threshold <sup>1)</sup> .
A Breaker Failure will be detectedand a trip signal to the upstream breaker will be issued?	When the CBF-Timer has run down (elapsed).	When the CBF-Timer has run down (elapsed).	When the CBF-Timer has run down (elapsed).
When does the trip signal to the upstream breaker drops (falls back)?	If the position indicators indicate that the swichtgear (breaker) is in the open position <b>and</b> if the trigger signals are dropped (fallen back)	If the current is fallen below the I< and if the trigger signals are dropped (fallen back)	If the position indicators indicate that the swichtgear (breaker) is in the open position and if the current is fallen below the I< and if the trigger signals are dropped (fallen back)

<sup>&</sup>lt;sup>1)</sup> It is recommended to set the I< threshold to a value that is sligthly below the fault current that is expectable. By means of that it is possible to shorten the CBF supervision timer and hence reduce thermal and mechanical damage of the electrical equipment in case of a breaker failure. The lower the threshold, the longer the time that is needed to detect, that the breaker is in the open position, especially if there are transients/harmonics.

Note: Tripping delay of the <u>CBF</u> module = Minimum delay time (tripping time) of the backup protection!

2), 3), 4)

Available in all devices with the corresponding software


Available in all devices that offer current measurement

Available in all devices that offer current measurement

5)


Only if the signals are assigned onto the breaker within the breaker manager.

### Circuit Breaker Failure Protection for devices that offer current measurement

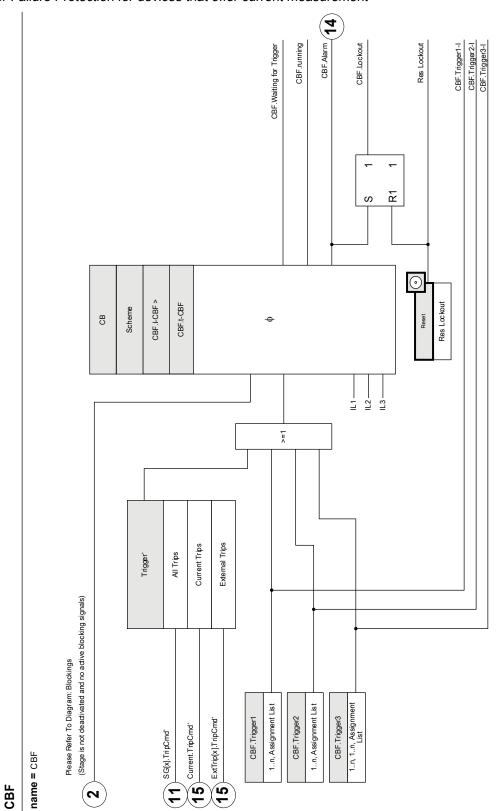

The Breaker Failure will be triggered only by those trip signals that are assigned onto the the breaker within the Trip Manager.

Circuit Breaker Failure Protection for devices that offer voltage measurement only

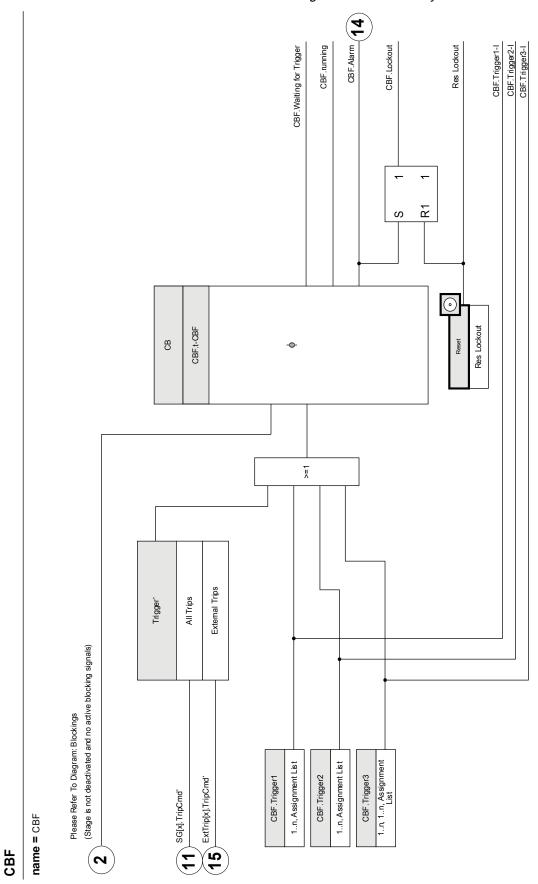

The Breaker Failure will be triggered only by those trip signals that are assigned onto the the breaker within the Trip Manager.

# **Device Planning Parameters of the CBF**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

# **Global Protection Parameters of the CBF**

Parameter	Description	Setting range	Default	Menu path
Scheme	Scheme	50BF,	50BF	[Protection Para
		CB Pos,		/Global Prot Para
		50BF and CB Pos		/Supervision
				/CBF[1]]
CT Winding Side	Measuring values will be used from this winding side	W1,	CBF[1]: W1	[Protection Para
	Only available if: Scheme50BF = Or Scheme = 50BF	W2	CBF[2]: W2	/Global Prot Para
	and CB Pos			/Supervision
				/CBF[1]]
СВ	Selection of the Circuit Breaker to be monitored.	,	CBF[1]: SG[1].	[Protection Para
		SG[1].,	CBF[2]: SG[2].	/Global Prot Para
		SG[2].		/Supervision
•				/CBF[1]]
ExBlo1	External blocking of the module, if blocking is activated	1n, Assignment		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Supervision
				/CBF[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment	-,-	[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Supervision
				/CBF[1]]
Trigger	Determining the trigger mode for the Breaker Failure.	,		[Protection Para
		All Trips,		/Global Prot Para
		External Trips,		/Supervision
•		Current Trips		/CBF[1]]
Trigger1	Trigger that will start the CBF	Trigger		[Protection Para
				/Global Prot Para
				/Supervision
+				/CBF[1]]

## Supervision

Parameter	Description	Setting range	Default	Menu path
Trigger2	Trigger that will start the CBF	Trigger		[Protection Para
				/Global Prot Para
				/Supervision
				/CBF[1]]
Trigger3	Trigger that will start the CBF	Trigger		[Protection Para
				/Global Prot Para
				/Supervision
				/CBF[1]]

## **Direct Commands of the CBF**

Parameter	Description	Setting range	Default	Menu path
Res Lockout	Reset Lockout	inactive,	inactive	[Operation
		active		/Reset]

## **Setting Group Parameters of the CBF**

# NOTICE

In order to prevent a faulty activation of the BF Module, the pickup (alarm) time must be greater than the sum of:

- Operating time of the protective relay
- +The close-open time of the breaker (please refer to the technical data of the manufacturer of the breaker);
- +Drop off time (current- or position indicators)
- +Security margin.

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Supervision
				/CBF[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Supervision
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/CBF[1]]
	LADIO I G-GGUVG .			
Measuring method	Measuring method	Fundamental,	Fundamental	[Protection Para
		True RMS		/<14>
				/Supervision
				/CBF[1]]
I-CBF >	Current level that needs to exist after Trip Command	0.02 - 4.00ln	0.02ln	[Protection Para
	has been given.			/<14>
	Only available if: Scheme50BF = Or Scheme = 50BF			/Supervision
	and CB Pos			/CBF[1]]
t-CBF	If the delay time is expired, an CBF alarm is given out.	0.00 - 10.00s	0.20s	[Protection Para
				/<14>
				/Supervision
				/CBF[1]]

# **CBF Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Supervision
		/CBF[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Supervision
		/CBF[1]]
Trigger1-I	Module Input: Trigger that will start the CBF	[Protection Para
		/Global Prot Para
		/Supervision
		/CBF[1]]
Trigger2-I	Module Input: Trigger that will start the CBF	[Protection Para
		/Global Prot Para
		/Supervision
		/CBF[1]]
Trigger3-I	Module Input: Trigger that will start the CBF	[Protection Para
		/Global Prot Para
		/Supervision
		/CBF[1]]

# **CBF Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Waiting for Trigger	Waiting for Trigger
running	Signal: CBF-Module started
Alarm	Signal: Circuit Breaker Failure
Lockout	Signal: Lockout
Res Lockout	Signal: Reset Lockout

# Trigger signals of the Circuit Breaker Failure

These trips will start the <u>CBF</u>module if »All trips« have been selected as the trigger event.

Name	Description
	No assignment
Id.TripCmd	Signal: Trip Command
IdH.TripCmd	Signal: Trip Command
IdG[1].TripCmd	Signal: Trip Command
IdGH[1].TripCmd	Signal: Trip Command
IdG[2].TripCmd	Signal: Trip Command
IdGH[2].TripCmd	Signal: Trip Command
I[1].TripCmd	Signal: Trip Command
I[2].TripCmd	Signal: Trip Command
I[3].TripCmd	Signal: Trip Command
I[4].TripCmd	Signal: Trip Command
IG[1].TripCmd	Signal: Trip Command
IG[2].TripCmd	Signal: Trip Command
IG[3].TripCmd	Signal: Trip Command
IG[4].TripCmd	Signal: Trip Command
ThR.TripCmd	Signal: Trip Command
I2>[1].TripCmd	Signal: Trip Command
I2>[2].TripCmd	Signal: Trip Command
ExP[1].TripCmd	Signal: Trip Command
ExP[2].TripCmd	Signal: Trip Command
ExP[3].TripCmd	Signal: Trip Command
ExP[4].TripCmd	Signal: Trip Command
Ext Sudd Press.TripCmd	Signal: Trip Command
Ex Oil Temp.TripCmd	Signal: Trip Command
Ext Temp Superv[1].TripCmd	Signal: Trip Command
Ext Temp Superv[2].TripCmd	Signal: Trip Command
Ext Temp Superv[3].TripCmd	Signal: Trip Command
RTD.TripCmd	Signal: Trip Command
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input

Name	Description
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate Out	Signal: Output of the logic gate
Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output
Logics.LE8.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate Out	Signal: Output of the logic gate
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output
Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate Out	Signal: Output of the logic gate
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate Out	Signal: Output of the logic gate
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)
Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE30.Gate Out	Signal: Output of the logic gate
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate Out	Signal: Output of the logic gate
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate Out	Signal: Output of the logic gate
Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output
Logics.LE48.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate Out	Signal: Output of the logic gate
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate Out	Signal: Output of the logic gate
Logics.LE54.Timer Out	Signal: Timer Output
Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate Out	Signal: Output of the logic gate
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate Out	Signal: Output of the logic gate
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)
Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)

	Signal: Negated Latched Output (Q NOT)
ogics.LE69.Gate Out S	Signal: Output of the logic gate
ogics.LE69.Timer Out S	Signal: Timer Output
ogics.LE69.Out S	Signal: Latched Output (Q)
ogics.LE69.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE70.Gate Out S	Signal: Output of the logic gate
ogics.LE70.Timer Out S	Signal: Timer Output
ogics.LE70.Out S	Signal: Latched Output (Q)
ogics.LE70.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE71.Gate Out S	Signal: Output of the logic gate
ogics.LE71.Timer Out S	Signal: Timer Output
ogics.LE71.Out S	Signal: Latched Output (Q)
ogics.LE71.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE72.Gate Out S	Signal: Output of the logic gate
ogics.LE72.Timer Out S	Signal: Timer Output
ogics.LE72.Out S	Signal: Latched Output (Q)
ogics.LE72.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE73.Gate Out S	Signal: Output of the logic gate
ogics.LE73.Timer Out S	Signal: Timer Output
ogics.LE73.Out S	Signal: Latched Output (Q)
ogics.LE73.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE74.Gate Out S	Signal: Output of the logic gate
ogics.LE74.Timer Out S	Signal: Timer Output
ogics.LE74.Out S	Signal: Latched Output (Q)
ogics.LE74.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE75.Gate Out S	Signal: Output of the logic gate
ogics.LE75.Timer Out S	Signal: Timer Output
ogics.LE75.Out S	Signal: Latched Output (Q)
ogics.LE75.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE76.Gate Out S	Signal: Output of the logic gate
ogics.LE76.Timer Out S	Signal: Timer Output
ogics.LE76.Out S	Signal: Latched Output (Q)
ogics.LE76.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE77.Gate Out S	Signal: Output of the logic gate
ogics.LE77.Timer Out S	Signal: Timer Output
ogics.LE77.Out S	Signal: Latched Output (Q)
ogics.LE77.Out inverted S	Signal: Negated Latched Output (Q NOT)
ogics.LE78.Gate Out S	Signal: Output of the logic gate
ogics.LE78.Timer Out S	Signal: Timer Output
ogics.LE78.Out S	Signal: Latched Output (Q)

Name	Description
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate Out	Signal: Output of the logic gate
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)

# These trips will start the BF module if »All current« functions have been selected as the trigger event.

Name	Description
	No assignment
Id.TripCmd	Signal: Trip Command
IdH.TripCmd	Signal: Trip Command
IdG[1].TripCmd	Signal: Trip Command
IdGH[1].TripCmd	Signal: Trip Command
IdG[2].TripCmd	Signal: Trip Command
IdGH[2].TripCmd	Signal: Trip Command
I[1].TripCmd	Signal: Trip Command
I[2].TripCmd	Signal: Trip Command
I[3].TripCmd	Signal: Trip Command
I[4].TripCmd	Signal: Trip Command
IG[1].TripCmd	Signal: Trip Command
IG[2].TripCmd	Signal: Trip Command
IG[3].TripCmd	Signal: Trip Command
IG[4].TripCmd	Signal: Trip Command
ThR.TripCmd	Signal: Trip Command
I2>[1].TripCmd	Signal: Trip Command
I2>[2].TripCmd	Signal: Trip Command

These trips will start the BF module if »External trips« have been selected as the trigger event.

Name	Description
-,-	No assignment
ExP[1].TripCmd	Signal: Trip Command
ExP[2].TripCmd	Signal: Trip Command
ExP[3].TripCmd	Signal: Trip Command
ExP[4].TripCmd	Signal: Trip Command
Ext Sudd Press.TripCmd	Signal: Trip Command
Ex Oil Temp.TripCmd	Signal: Trip Command
Ext Temp Superv[1].TripCmd	Signal: Trip Command
Ext Temp Superv[2].TripCmd	Signal: Trip Command
Ext Temp Superv[3].TripCmd	Signal: Trip Command

### Commissioning Example: Supervision Scheme 50BF

Object to Be Tested:

Test of the breaker failure protection (Supervision Scheme 50BF).

#### Necessary Means:

- Current source;
- Ammeter; and
- Timer.



When testing, the applied test current must always be higher than the tripping threshold *»I-CBF«.* If the test current falls below the threshold while the breaker is in the "Off" position, no pickup will be generated.

#### Procedure (Single-Phase):

For testing the tripping time of the CBF protection, a test current has to be higher than the threshold value of one of the current protection modules that are assigned to trigger the CBF protection. The CBF trip delay can be measured from the time when one of the triggering inputs becomes active to the time when the CBF protection trip is asserted.

To avoid wiring errors, checked to make sure the breaker in the upstream system switches off.

The time, measured by the timer, should be in line with the specified tolerances.

#### Successful Test Result:

The actual times measured comply with the setpoint times. The breaker in the higher-level section switches off.



Re-connect the control cable to the breaker!

### TCS - Trip Circuit Supervision [74TC]

### Available elements:

TCS[1], TCS[2]

The trip circuit monitoring is used for monitoring if the trip circuit is ready for operations. The monitoring can be fulfilled in two ways. The first assumes only Aux On (52a) is used in the trip circuit. The second assumes that, in addition to Aux On (52a), Aux Off (52b) is also used for the circuit monitoring.

With »Aux On (52a), only in the trip circuit, the monitoring is only effective when the breaker is closed while if both »Aux On (52a), and »Aux Off(52b)« are used, the trip circuit will be monitored all time as long as the control power is on.

Note that the digital inputs used for this purpose must be configured properly based on the trip circuit control voltage. If the trip circuit is detected broken, an alarm will be issued with a specified delay, which must be longer than the time when a trip contact is closed to the time when the breaker status is clearly recognized by the relay.



In Slot 1 has 2 digital inputs, each of which has a separate root (contact separation) for the trip circuit supervision.




This Notice applies to protective devices that offer control functionality only! This protective element requires, that a switchgear (circuit breaker is assigned to it.

In this case, the trip circuit supply voltage serves also as supply voltage for the digital inputs and so the supply voltage failure of a trip circuit can be detected directly.

In order to identify a conductor failure in the trip circuit on the supply line or in the trip coil, the off-coil has to be looped-in to the supervision circuit.

The time delay is to be set in a way that switching actions cannot cause false trips in this module.


Connection example: Trip circuit supervision with two CB auxiliary contacts.

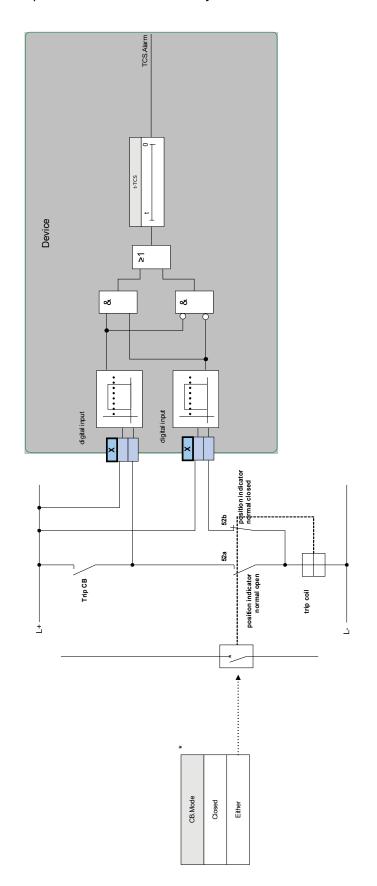

"This signal is the output of the switchgear that is assigned to this protective element. This applies to protective devices that offer control functionality.

CS

Connection example: Trip circuit supervision with one CB auxiliary contact (Aux On (52a)) only.

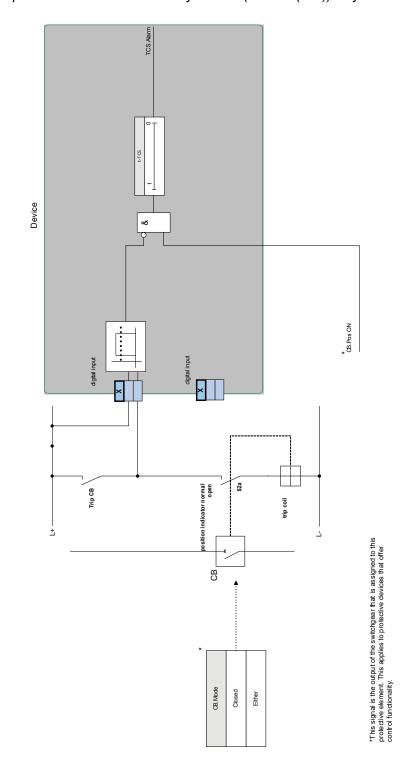

TCS

# **Device Planning Parameters of the Trip Circuit Supervision**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

# **Global Protection Parameters of the Trip Circuit Supervision**

Parameter	Description	Setting range	Default	Menu path
	Criterion by which the Circuit Breaker Switch Position is	,		[Protection Para
	to be detected.	SG[1].Pos,		/Global Prot Para
		SG[2].Pos		/Supervision
				/TCS[1]]
Mode	Select if trip circuit is going to be monitored when the	Closed,	Closed	[Protection Para
	breaker is closed or when the breaker is either open or close.	Either		/Global Prot Para
				/Supervision
)				/TCS[1]]
Input 1	Select the input configured to monitor the trip coil when	1n, Dig Inputs		[Protection Para
	the breaker is closed.			/Global Prot Para
				/Supervision
				/TCS[1]]
Input 2	Select the input configured to monitor the trip coil when the breaker is open. Only available if Mode set to "Either".	1n, Dig Inputs	-,-	[Protection Para
				/Global Prot Para
	Only available if Made = Fither			/Supervision
	Only available if: Mode = Either			/TCS[1]]
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment		[Protection Para
		List		/Global Prot Para
				/Supervision
)				/TCS[1]]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment		[Protection Para
		List		/Global Prot Para
	3 3			/Supervision
				/TCS[1]]

# **List of Digital Inputs**

Name	Description
-,-	No assignment
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input

# **Setting Group Parameters of the Trip Circuit Supervision**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Supervision
				/TCS[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Supervision
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/TCS[1]]
t-TCS	Tripping delay time of the Trip Circuit Supervision	0.10 - 10.00s	0.2s	[Protection Para
				/<14>
				/Supervision
				/TCS[1]]

# **Trip Circuit Supervision Input States**

Name	Description	Assignment via
Aux ON-I	Module Input State: Position indicator/check-back signal of the	[Protection Para
	CB (52a)	/Global Prot Para
		/Supervision
		/TCS[1]]
Aux OFF-I	Module input state: Position indicator/check-back signal of the	[Protection Para
	CB (52b)	/Global Prot Para
		/Supervision
		/TCS[1]]
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Supervision
		/TCS[1]]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Supervision
		/TCS[1]]
CB Pos Detect-I	Module input state: Criterion by which the Circuit Breaker Switch Position is to be detected.	[Protection Para
		/Global Prot Para
		/Supervision
		/TCS[1]]

# **Trip Circuit Supervision Signals (Output States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Alarm	Signal: Alarm Trip Circuit Supervision
Not Possible	Not possible because no state indicator assigned to the breaker.

## **Commissioning: Trip Circuit Supervision [74TC]**



For CBs that trip by means of little energy (e.g. via an optocoupler), it has to be ensured that the current applied by the digital inputs will not cause false tripping of the CB.

### Object to be tested

Test of the trip circuit supervision.

### Procedure, part 1

Simulate failure of the control voltage in the power circuits.

### Successful test result, part 1

After expiry of *»t-TCS«* the trip circuit supervision *TCS* of the device should signal an alarm.

### Procedure, part 2

Simulate a broken cable in the CB control circuit.

#### Successful test result, part 2

After expiry of *»t-TCS«* the trip circuit supervision *TCS* of the device should signal an alarm.

## **CTS - Current Transformer Supervision [60L]**

Available elements:

CTS[1], CTS[2]

Wire breaks and failures within measuring circuits cause current transformer failures.

The module <u>»CTS«</u> can detect a failure of the CT if the calculated earth current does not match the measured one. If an adjustable threshold value (Difference of measured and calculated earth current) is exceeded, a CT failure can be assumed. This is signaled through a message/alarm.

The precondition is that the conductor currents are measured by the device and the earth current, for instance, by a ring core type current transformer.

The measuring principles of the circuit supervision are based on comparing the measured and the calculated residual currents:

In an ideal case these are:

$$(I\vec{L}I + I\vec{L}2 + I\vec{L}3) + KI * I\vec{G} = 3 * I_0 + KI * I\vec{G} = 0$$

KI represents a correction factor which takes the different transformation ratio of the phase- and earth current transformers into account. The device automatically calculates this factor from the rated field parameters, i.e. the relation between the rated primary and secondary current values of the phase- and earth current transformers.


For compensating the current proportional ratio error of the measuring circuits, the dynamic correction factor Kd can be used. As a function of the measured max. current this factor is considering the linear rising measuring error. The limiting value of the CT supervision is calculated as follows:

 $\Delta I$  = deviation I (rated value) Kd = correction factor Imax = current maximum Limiting value =  $\Delta I$  + Kd x Imax

Precondition for identifying an error


$$3*\vec{I_0} + KI*\vec{IG} \ge Delta\ I + Kd*Imax$$

The evaluation method of the circuit supervision by using factor Kd can be graphically represented as follows:

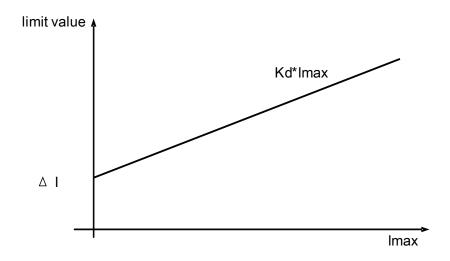

# CAUTION

If the current is measured in two phases only (for instant only IL1/IL3) or if there is no separate earth current measuring (e.g. normally via a cable-type CT), the supervision function should be deactivated.

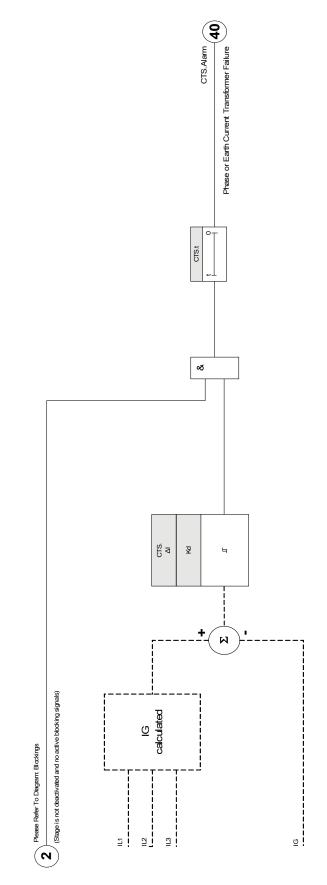

CTS

## **Device Planning Parameters of the Current Transformer Supervision**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameter of the Current Transformer Supervision**

Parameter	Description	Setting range	Default	Menu path
CT Winding Side	Measuring values will be used from this winding side	CTS[1]: W1	CTS[1]: W1	[Protection Para
		CTS[2]: W2	CTS[2]: W2	/Global Prot Para
				/Supervision
				/CTS[1]]
ExBlo1	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment	-,-	[Protection Para
		List		/Global Prot Para
				/Supervision
				/CTS[1]]
ExBlo2	External blocking of the module, if blocking is activated	1n, Assignment	-,-	[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Supervision
				/CTS[1]]

# **Setting Group Parameters of the Current Transformer Supervision**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive, active	inactive	[Protection Para /<14> /Supervision /CTS[1]]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the module/stage. This parameter is only effective if a signal is assigned to the corresponding global protection parameter. If the signal becomes true, those modules/stages are blocked that are parameterized "ExBlo Fc=active".	inactive, active	inactive	[Protection Para /<14> /Supervision /CTS[1]]
ΔΙ	In order to prevent faulty tripping of phase selective protection functions that use the current as tripping criterion. If the difference of the measured earth current and the calculated value I0 is higher than the pick up value $\Delta I$ , an alarm event is generated after expiring of the excitation time. In such a case, a fuse failure, a broken wire or a faulty measuring circuit can be assumed.	0.10 - 1.00ln	0.50In	[Protection Para /<14> /Supervision /CTS[1]]
Alarm delay	Alarm delay	0.1 - 9999.0s	1.0s	[Protection Para /<14> /Supervision /CTS[1]]
Kd	Dynamic correction factor for the evaluation of the difference between calculated and measured earth current. This correction factor allows transformer faults, caused by higher currents, to be compensated.	0.00 - 0.99	0.00	[Protection Para /<14> /Supervision /CTS[1]]

# **Current Transformer Supervision Input States**

Name	Description	Assignment via
ExBlo1-l	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Supervision
		/CTS[1]]
ExBlo2-l	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Supervision
		/CTS[1]]

## **Current Transformer Supervision Signals (Outputs States)**

Signal	Description
active	Signal: active
ExBlo	Signal: External Blocking
Alarm	Signal: Alarm Current Transformer Measuring Circuit Supervision

### **Commissioning: Current Transformer Failure Supervision**



#### **Precondition:**

- 1. Measurement of all three phase currents (are applied to the measuring inputs of the device).
- 2. The earth current is detected via a cable-type transformer (not in Holmgreen connection).

#### Object to be tested

Check of the CT supervision (by comparing the calculated with the measured earth current).

#### Necessary means

■ Three-phase current source

#### Procedure, part 1

- Set the limiting value of the CTS to *»delta I=0.1\*In«*.
- Feed a three-phase, symmetrical current system (approx. nominal current) to the secondary side.
- Disconnect the current of one phase from one of the measuring inputs (the symmetrical feeding at secondary side has to be maintained).
- Make sure that the signal »CTS.ALARM« is generated now.

#### Successful test result, part 1

■ The signal »CTS.ALARM« is generated.

### Procedure, part 2

- Feed a three-phase, symmetrical current system (approx. nominal current) to the secondary side.
- Feed a current that is higher than the threshold value for the measuring circuit supervision to the earth current measuring input.
- Ascertain that the signal »CTS.ALARM« is generated now.

#### Successful test result, part 2

The signal »CTS.ALARM« is generated.

### **Self Supervision**

HighPROTEC devices are continuously monitored and supervised through different methods during normal operation as well as during start-up phase.

Results of this supervision may be:

- messages appearing within event-recorder (from release 1.2 or later),
- indications within the display or Smart view,
- corrective measures,
- disabling of protection functions,
- restart of the device

or any combination out of these.

In case of failures that cannot be corrected immediately three restarts within 20 minutes are accepted before the device will be deactivated. The device should be removed in for service in such case. Contact data and address can be found at the end of this manual.

In case of any failures the recorders of the device should be left untouched to ensure an easy diagnosis and proper repair at the factory. Besides the records and visible indications to the customer there exists internal information about failures. These allow service personnel to make a detailed analysis of files with failure reports, at least at factory site.

Self supervision is applied by different functions at different cyclic or noncyclic timings to the following parts and functions of the device:

- faultless cyclic execution of software,
- functional capability of memory boards,
- consistency of data,
- functional capability of hardware sub-assemblies and
- faultless operation of the measuring unit.

Faultless cyclic operation of software is supervised by timing analysis and checking results of different functions. Errors of the software function (watchdog function) lead to restarting the device and switching off the self-supervision relay (life-contact). Also the System-OK LED will blink red, after three unsuccessful attempts to restart the device within a time-period of 20 minutes.

The main processor cyclically monitors the operation of the signal processor and initiates corrective actions or restart of the device in case of faulty operation.

Data and files are generally secured against unintended overwriting or faulty changes by checksums.

The measuring unit continuously checks the measured data by comparing received data with data from a second channel sampled in parallel.

The auxiliary voltage is monitored continuously. If the voltage of one of the different supply circuits falls below a certain threshold, a restart of the device is initiated. If the voltage staggers around the threshold, the device also starts again after several seconds. Additionally the level of all internal supply voltage groups are continuously monitored.

Independent of these separate monitoring functions, the intermediate voltage circuit is buffered until all important and relevant operational and fault-data have been saved and the device initiates a restart.

## Error messages / -codes

After a reboot of the device the reason for rebooting will be displayed under [Operation/Status Display/Sys/Reset].

For more information about the reboot reason please follow this chapter.

The reboot will also be logged within the event recorder. Rebooting causes an event named: Sys.reboot.

### Numerical reboot codes:

	Error messages / -codes			
1.	Reboot after clean switching off of the device normal reboot after clean shut down of the device.			
2.	Reboot by user command user-initiated reboot through panel-command.			
3.	Super reset: reset to factory settings			
4.	Restart by debugger; internally for system-analysis purpose.			
5.	Restart because of configuration changes.			
6.	General failure: reboot.			
7.	Reboot by SW-system abort (HOST-side); summary of several reboot reasons detected by software, i.e. wrong pointer, corrupted files etc.			
8.	Reboot by watchdog timeout (HOST-side) - Signaling if the protection-class-task hangs.			
9.	Reboot by system abort (DSP-side); summary of several reboot reasons detected by software, i.e. wrong pointer, DSP-side.			
10.	Reboot by watchdog timeout (DSP-side) - Appears when DSP sequence needs too long for one cycle.			
11.	Loss of auxiliary voltage or low voltage reboot after loss of auxiliary voltage or voltage dropping below reboot-level but not becoming zero.			
12.	Faulty memory access: message of MMU (memory mapping unit) that prohibited memory access has occurred.			

### **RTD Protection Module**

Elements:

<u>RTD</u>

### **General – Principle Use**

## NOTICE

The Resistance-based Temperature Detector (RTD) Protection Module uses temperature data that are provided by a Universal Resistance-based Temperature Detector (URTD) module (please refer to the URTD Module section).


NOTICE

If voting trip is required, please map the output used for tripping purposes: "RTD. Voting Trip Grp 1" or "RTD.Voting Trip Grp 2"

The protective device provides tripping and alarming functions based on the direct temperature measurements read from the URTD device that has 11 temperature sensor channels. Each channel will have one trip function without an intended delay and one alarm function with a delay.

- •The "trip" function has only a threshold setting.
- •Each individual »Alarm Function« will have a threshold setting range, and can be individually enabled or disabled. Since the temperature cannot change instantaneously (which is a way that temperature differs from current), the "delay" is essentially built in to the function due to the fact that the temperature will take some time to increase from room temperature to the "trip threshold" level.
- •The dropout ratio for both trip and alarm is 0.99.
- The temperature rise is limited by the RTD driver.

The entire function can be turned off or on, or individual channels can be turned off or on.

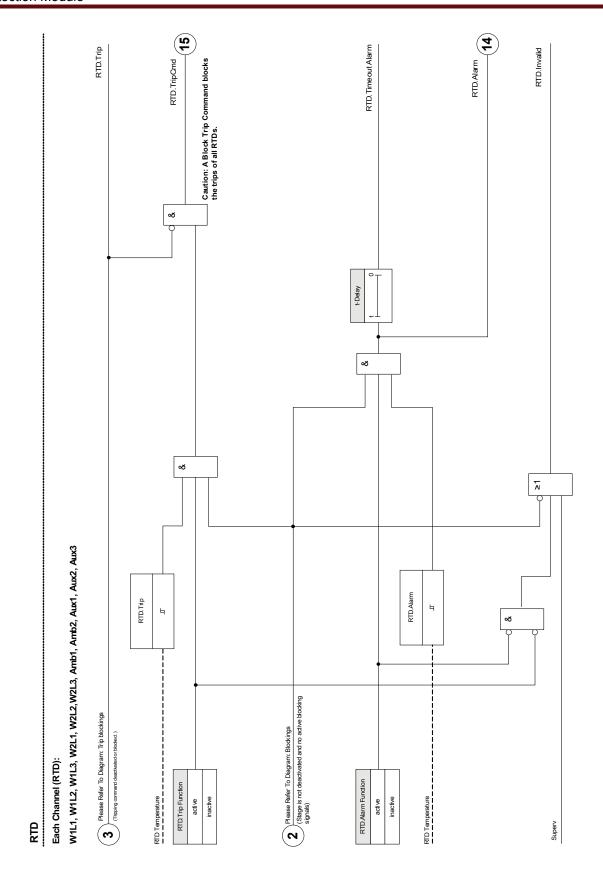

## **Device Planning Parameters of the RTD Temperature Protection Module**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	do not use	[Device planning]
		use		

## **Global Protection Parameters of the RTD Temperature Protection Module**

Parameter	Description	Setting range	Default	Menu path
ExBlo1		1n, Assignment List		[Protection Para
	(allowed) within a parameter set and if the state of the assigned signal is true.	LIST		/Global Prot Para
				/Temp-Prot
				/RTD]
ExBlo2	External blocking of the module, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	1n, Assignment List		[Protection Para
				/Global Prot Para
				/Temp-Prot
				/RTD]
ExBlo TripCmd	External blocking of the Trip Command of the	1n, Assignment		[Protection Para
	module/the stage, if blocking is activated (allowed) within a parameter set and if the state of the assigned signal is true.	List		/Global Prot Para
				/Temp-Prot
				/RTD]

# **Setting Group Parameters of the RTD Temperature Protection Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/General settings]
ExBlo Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo Fc=active".			/RTD
				/General settings]
Blo TripCmd	Permanent blocking of the Trip Command of the	inactive,	inactive	[Protection Para
	module/stage.	active		/<14>
				/Temp-Prot
				/RTD
				/General settings]
ExBlo TripCmd Fc	Activate (allow) or inactivate (disallow) blocking of the	inactive,	inactive	[Protection Para
	module/stage. This parameter is only effective if a signal is assigned to the corresponding global	active		/<14>
	protection parameter. If the signal becomes true, those			/Temp-Prot
	modules/stages are blocked that are parameterized "ExBlo TripCmd Fc=active".			/RTD
	ZASIO IMPORTO I GOLFO I			/General settings]
W1L1 Alarm	Winding1 Phase L1 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W1L1]
W1L1 Trip Function	Winding1 Phase L1 Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/W1L1]
W1L1 Alarm	Winding1 Phase L1 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W1L1]

Parameter	Description	Setting range	Default	Menu path
W1L1 t-Delay	Winding1 Phase L1 If this time is expired a	0 - 360min	1min	[Protection Para
	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W1L1]
W1L1 Trip	Winding1 Phase L1 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	aramable in Bernee planning. The Fandach acc			/Temp-Prot
				/RTD
				/W1L1]
W1L2 Alarm	Winding1 Phase L2 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W1L2]
W1L2 Trip Function	Winding1 Phase L2 Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/W1L2]
W1L2 Alarm	Winding1 Phase L2 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W1L2]
W1L2 t-Delay	Winding1 Phase L2 If this time is expired a	0 - 360min	1min	[Protection Para
	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W1L2]
W1L2 Trip	Winding1 Phase L2 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	City available ii. Device planning. The function - use			/Temp-Prot
				/RTD
				/W1L2]

Parameter	Description	Setting range	Default	Menu path
W1L3 Alarm	Winding1 Phase L3 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W1L3]
W1L3 Trip Function	Winding1 Phase L3 Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/W1L3]
W1L3 Alarm	Winding1 Phase L3 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W1L3]
W1L3 t-Delay	Winding1 Phase L3 If this time is expired a	0 - 360min	1min	[Protection Para
	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W1L3]
W1L3 Trip	Winding1 Phase L3 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Only available ii. Device planning. The function – use			/Temp-Prot
				/RTD
				/W1L3]
W2L1 Alarm	Winding2 Phase L1 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W2L1]
W2L1 Trip Function	Winding2 Phase L1 Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/W2L1]

Parameter	Description	Setting range	Default	Menu path
W2L1 Alarm	Winding2 Phase L1 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W2L1]
W2L1 t-Delay	Winding2 Phase L1 If this time is expired a	0 - 360min	1min	[Protection Para
	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W2L1]
W2L1 Trip	Winding2 Phase L1 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Only available ii. Device planning. The Function – use			/Temp-Prot
				/RTD
				/W2L1]
W2L2 Alarm	Winding2 Phase L2 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W2L2]
W2L2 Trip Function	Winding2 Phase L2 Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/W2L2]
W2L2 Alarm	Winding2 Phase L2 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W2L2]
W2L2 t-Delay	Winding2 Phase L2 If this time is expired a	0 - 360min	1min	[Protection Para
•	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W2L2]

Parameter	Description	Setting range	Default	Menu path
W2L2 Trip	Winding2 Phase L2 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	aramasio ii. Sories planning. The Fanotion also			/Temp-Prot
				/RTD
				/W2L2]
W2L3 Alarm	Winding2 Phase L3 Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/W2L3]
W2L3 Trip Function	Winding2 Phase L3 Trip Function	inactive,	active	[Protection Para
		active		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/W2L3]
W2L3 Alarm	Winding2 Phase L3 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/W2L3]
W2L3 t-Delay	Winding2 Phase L3 If this time is expired a	0 - 360min	1min	[Protection Para
	Temperature Alarm will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/W2L3]
W2L3 Trip	Winding2 Phase L3 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Only available ii. Device planning. The function – use			/Temp-Prot
				/RTD
				/W2L3]
Amb1 Alarm	Ambient Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Amb 1]

Parameter	Description	Setting range	Default	Menu path
Amb1 Trip Function	Ambient Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Amb 1]
Amb1 Alarm	Ambient Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Amb 1]
Amb1 t-Delay	Ambient If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Amb 1]
Amb1 Trip	Ambient Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Only available ii. Device planning. The runction – use			/Temp-Prot
				/RTD
				/Amb 1]
Amb2 Alarm	Ambient Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Amb 2]
Amb2 Alarm	Ambient Trip Function	inactive,	active	[Protection Para
Function		active		/<14>
_				/Temp-Prot
				/RTD
				/Amb 2]
Amb2 Alarm	Ambient Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Amb 2]

Parameter	Description	Setting range	Default	Menu path
Amb2 t-Delay	Ambient If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Amb 2]
Amb2 Trip	Ambient Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	only available in Bovice planning. The Calledon also			/Temp-Prot
				/RTD
				/Amb 2]
Aux1Alarm	Auxiliary Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Aux 1]
Aux1Trip Function	Auxiliary Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Aux 1]
Aux1 Alarm	Auxiliary Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Aux 1]
Aux1 t-Delay	Auxiliary If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Aux 1]
Aux1 Trip	Auxiliary Threshold for Temperature Trip	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Sing available in Device planning. The Function - use			/Temp-Prot
				/RTD
				/Aux 1]

Parameter	Description	Setting range	Default	Menu path
Aux2 Alarm	Auxiliary Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Aux 2]
Aux2 Trip Function	Auxiliary Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Aux 2]
Aux2 Alarm	Auxiliary Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Aux 2]
Aux2 t-Delay	Auxiliary If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Aux 2]
Aux2 Trip	Auxiliary Threshold for Temperature Trip	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	Only available ii. Device planning. The ranction – ase			/Temp-Prot
				/RTD
				/Aux 2]
Aux3 Alarm	Auxiliary Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
_				/Temp-Prot
				/RTD
				/Aux 3]
Aux3 Trip Function	Auxiliary Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
<b>y</b>				/RTD
				/Aux 3]

Parameter	Description	Setting range	Default	Menu path
Aux3 Alarm	Auxiliary Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Aux 3]
Aux3 t-Delay	Auxiliary If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Aux 3]
Aux3 Trip	Auxiliary Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	only available in Device planning. The Function also			/Temp-Prot
				/RTD
				/Aux 3]
Aux4 Alarm	Auxiliary Alarm Function	inactive,	active	[Protection Para
Function		active		/<14>
				/Temp-Prot
$\bigotimes$				/RTD
				/Aux 4]
Aux4 Trip Function	Auxiliary Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Aux 4]
Aux4 Alarm	Auxiliary Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
$\bigcirc$	use			/Temp-Prot
				/RTD
				/Aux 4]
Aux4 t-Delay	Auxiliary If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Aux 4]

Parameter	Description	Setting range	Default	Menu path
Aux4 Trip	Auxiliary Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	only available in Bevice planning. The Calledon also			/Temp-Prot
				/RTD
				/Aux 4]
Windg W1 Alarm	Winding W1 Alarm Function	inactive,	inactive	[Protection Para
Function		active		/<14>
				/Temp-Prot
$\bigotimes$				/RTD
				/Windg W1 Group]
Windg W1 Trip	Winding W1 Trip Function	inactive,	inactive	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Windg W1 Group]
Windg W1 Alarm	Winding W1 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Windg W1 Group]
Windg W1 t-Delay	Winding W1 If this time is expired a Temperature Alarm	0 - 360min	1min	[Protection Para
	will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Windg W1 Group]
Windg W1 Trip	Winding W1 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	only available in Bevice planning. The Calledon also			/Temp-Prot
				/RTD
				/Windg W1 Group]
Windg W2 Alarm	Winding W2 Alarm Function	inactive,	inactive	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Windg W2 Group]

Parameter	Description	Setting range	Default	Menu path
Windg W2 Trip	Winding W2 Trip Function	inactive,	inactive	[Protection Para
Function		active		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Windg W2 Group]
Windg W2 Alarm	Winding W2 Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Windg W2 Group]
Windg W2 t-Delay	Winding W2 If this time is expired a Temperature Alarm	0 - 360min	1min	[Protection Para
	will be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Windg W2 Group]
Windg W2 Trip	Winding W2 Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	only available in Bevice planning. The Canonicia and			/Temp-Prot
				/RTD
				/Windg W2 Group]
Amb Alarm	Ambient Alarm Function	inactive,	inactive	[Protection Para
Function		active		/<14>
				/Temp-Prot
				/RTD
				/Amb Group]
Amb Trip Function	Ambient Trip Function	inactive,	active	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Amb Group]
Amb Alarm	Ambient Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Amb Group]

Parameter	Description	Setting range	Default	Menu path
Amb t-Delay	Ambient If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Amb Group]
Amb Trip	Ambient Threshold for Temperature Trip	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Trip Function = use			/<14>
	orny available ii. Bovide planning. Trip i ariotteri add			/Temp-Prot
				/RTD
				/Amb Group]
Aux Alarm Function	Auxiliary Alarm Function	inactive,	inactive	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Aux Group]
Aux Trip Function	Auxiliary Trip Function	inactive,	inactive	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Aux Group]
Aux Alarm	Auxiliary Threshold for Temperature Alarm	0 - 200°C	80°C	[Protection Para
	Only available if: Device planning: Alarm Function =			/<14>
	use			/Temp-Prot
				/RTD
				/Aux Group]
Aux t-Delay	Auxiliary If this time is expired a Temperature Alarm will	0 - 360min	1min	[Protection Para
•	be generated.			/<14>
	Only available if: Device planning: Alarm Function =			/Temp-Prot
	use			/RTD
				/Aux Group]
Aux Trip	Auxiliary Threshold for Temperature Trip	0 - 200°C	100°C	[Protection Para
				/<14>
	Only available if: Device planning: Aux = use			/Temp-Prot
				/RTD
				/Aux Group]

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]
Voting 1	Voting: This parameter defines how many of the	1 - 12	1	[Protection Para
	selected channels must be over its threshold level for getting a voting trip			/<14>
$\bigcirc$	gotting a voting trip			/Temp-Prot
				/RTD
				/Voting1]
W1L1	Winding1 Phase L1	no,	yes	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
W1L2	Winding1 Phase L2	no,	yes	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
W1L3	Winding1 Phase L3	no,	yes	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]
W2L1	Winding2 Phase L1	no,	yes	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
W2L2	Winding2 Phase L2	no,	yes	[Protection Para
		yes		/<14>
				/Temp-Prot
<b>Y</b>				/RTD
				/Voting1]

Parameter	Description	Setting range	Default	Menu path
W2L3	Winding2 Phase L3	no,	yes	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]
Amb 1	Ambient 1	no,	no	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]
Amb 2	Ambient 2	no,	no	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]
Aux 1	Auxiliary 1	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
Aux 2	Auxiliary 2	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
Aux 3	Auxiliary 3	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting1]
Aux 4	Auxiliary 4	no,	no	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting1]

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Protection Para
		active		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
Voting 2	Voting: This parameter defines how many of the	1 - 12	1	[Protection Para
	selected channels must be over its threshold level for getting a voting trip			/<14>
	gotting a voting trip			/Temp-Prot
				/RTD
				/Voting2]
W1L1	Winding1 Phase L1	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
W1L2	Winding1 Phase L2	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
W1L3	Winding1 Phase L3	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
W2L1	Winding2 Phase L1	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
W2L2	Winding2 Phase L2	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]

Parameter	Description	Setting range	Default	Menu path
W2L3	Winding2 Phase L3	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
Amb 1	Ambient 1	no,	no	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
				/RTD
				/Voting2]
Amb 2	Ambient 2	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
Aux 1	Auxiliary 1	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
Aux 2	Auxiliary 2	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
				/RTD
				/Voting2]
Aux 3	Auxiliary 3	no,	no	[Protection Para
		yes		/<14>
				/Temp-Prot
<b>-</b>				/RTD
				/Voting2]
Aux 4	Auxiliary 4	no,	no	[Protection Para
		yes		/<14>
$\bigcirc$				/Temp-Prot
<b>V</b>				/RTD
				/Voting2]

# **RTD Temperature Protection Module Input States**

Name	Description	Assignment via
ExBlo1-I	Module input state: External blocking1	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/RTD]
ExBlo2-I	Module input state: External blocking2	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/RTD]
ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command	[Protection Para
		/Global Prot Para
		/Temp-Prot
		/RTD]

# **RTD Temperature Protection Module Signals (Output States)**

Signal	Description	
active	Signal: active	
ExBlo	Signal: External Blocking	
Blo TripCmd	Signal: Trip Command blocked	
ExBlo TripCmd	Signal: External Blocking of the Trip Command	
Alarm	Alarm RTD Temperature Protection	
Trip	Signal: Trip	
TripCmd	Signal: Trip Command	
W1L1 Trip	Winding1 Phase L1 Signal: Trip	
W1L1 Alarm	Winding1 Phase L1 Alarm RTD Temperature Protection	
W1L1 Timeout Alarm	Winding1 Phase L1 Timeout Alarm	
W1L1 Invalid	Winding1 Phase L1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
W1L2 Trip	Winding1 Phase L2 Signal: Trip	
W1L2 Alarm	Winding1 Phase L2 Alarm RTD Temperature Protection	
W1L2 Timeout Alarm	Winding1 Phase L2 Timeout Alarm	
W1L2 Invalid	Winding1 Phase L2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
W1L3 Trip	Winding1 Phase L3 Signal: Trip	
W1L3 Alarm	Winding1 Phase L3 Alarm RTD Temperature Protection	
W1L3 Timeout Alarm	Winding1 Phase L3 Timeout Alarm	
W1L3 Invalid	Winding1 Phase L3 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
W2L1 Trip	Winding2 Phase L1 Signal: Trip	
W2L1 Alarm	Winding2 Phase L1 Alarm RTD Temperature Protection	
W2L1 Timeout Alarm	Winding2 Phase L1 Timeout Alarm	
W2L1 Invalid	Winding2 Phase L1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
W2L2 Trip	Winding2 Phase L2 Signal: Trip	
W2L2 Alarm	Winding2 Phase L2 Alarm RTD Temperature Protection	
W2L2 Timeout Alarm	Winding2 Phase L2 Timeout Alarm	
W2L2 Invalid	Winding2 Phase L2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
W2L3 Trip	Winding2 Phase L3 Signal: Trip	
W2L3 Alarm	Winding2 Phase L3 Alarm RTD Temperature Protection	
W2L3 Timeout Alarm	Winding2 Phase L3 Timeout Alarm	
W2L3 Invalid	Winding2 Phase L3 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Amb 1 Trip	Ambient 1 Signal: Trip	
Amb 1 Alarm	Ambient 1 Alarm RTD Temperature Protection	

Signal	Description	
Amb 1 Timeout Alarm	Ambient 1 Timeout Alarm	
Amb 1 Invalid	Ambient 1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Amb 2 Trip	Ambient 2 Signal: Trip	
Amb 2 Alarm	Ambient 2 Alarm RTD Temperature Protection	
Amb 2 Timeout Alarm	Ambient 2 Timeout Alarm	
Amb 2 Invalid	Ambient 2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Aux 1 Trip	Auxiliary 1 Signal: Trip	
Aux 1 Alarm	Auxiliary 1 Alarm RTD Temperature Protection	
Aux 1 Timeout Alarm	Auxiliary 1 Timeout Alarm	
Aux 1 Invalid	Auxiliary 1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Aux 2 Trip	Auxiliary 2 Signal: Trip	
Aux 2 Alarm	Auxiliary 2 Alarm RTD Temperature Protection	
Aux 2 Timeout Alarm	Auxiliary 2 Timeout Alarm	
Aux 2 Invalid	Auxiliary 2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Aux 3 Trip	Auxiliary 3 Signal: Trip	
Aux 3 Alarm	Auxiliary 3 Alarm RTD Temperature Protection	
Aux 3 Timeout Alarm	Auxiliary 3 Timeout Alarm	
Aux 3 Invalid	Auxiliary 4 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Aux4 Trip	Auxiliary 4 Signal: Trip	
Aux4 Alarm	Auxiliary 4 Alarm RTD Temperature Protection	
Aux4 Timeout Alarm	Auxiliary 4 Timeout Alarm	
Aux4 Invalid	Auxiliary 4 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Trip WD W1 Group	Trip all Windings of group W1	
Alarm WD W1 Group	Alarm all Windings of group W1	
TimeoutAlmWDW1Grp	Timeout Alarm of group W1	
Windg W1 Group Invalid	Winding W1 Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Trip WD W2 Group	Trip all Windings of group W2	
Alarm WD W2 Group	Alarm all Windings of group W2	
TimeoutAlmWDW2Grp	Timeout Alarm of group W2	
Windg W2 Group Invalid	Winding W2 Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	
Trip Amb Group	Trip all Windings of group Ambient	
Alarm Amb Group	Alarm all Windings of group Ambient	
TimeoutAlmAmbGrp	Timeout Alarm of group Ambient	
Amb Group Invalid	Ambient Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)	

Signal	Description
Trip Any Group	Trip Any Group
Alarm Any Group	Alarm Any Group
TimeoutAlmAnyGrp	Timeout Alarm Any Group
Trip Group 1	Trip Group 1
Trip Group 2	Trip Group 2
Timeout Alarm	Alarm timeout expired
Trip Aux Group	Trip Auxiliary Group
Alarm Aux Group	Alarm Auxiliary Group
TimeoutAlmAuxGrp	Timeout Alarm Auxiliary Group
AuxGrpInvalid	Invalid Auxiliary Group

## **RTD Temperature Protection Module Counter Values**

Value	Description	Default	Size	Menu path
Hottest WD W1	Hottest winding on side W1	0°C	0 - 200°C	[Operation
				/Measured values
				/URTD]
Hottest WD W2	Hottest winding on side W2	0°C	0 - 200°C	[Operation
				/Measured values
				/URTD]
Hottest Amb	Hottest Ambient Temperature	0°C	0 - 200°C	[Operation
				/Measured values
				/URTD]
Hottest Aux Temp	Hottest Auxiliary temperature in degrees C.	0°C	0 - 200°C	[Operation
				/Measured values
				/URTD]

## **URTDII Module Interface\***

\*=Availability on request

**URTD** 

## **Principle – General Use**

The optional Universal Resistance-based Temperature Detector II (URTDII) Module provides temperature data to the protective device from up to 12 RTDs embedded in the motor, generator, transformer, or cable connector and driven equipment. The temperature data will be shown as measured values and statistics in the Operating Data menu. In addition, each channel will be monitored. The measured data provided by the URTDII Module can also be used for temperature protection (please refer to the Temperature Protection section).


The URTDII conveys multiplexed temperature data back to the relay via a single optical fiber. The URTDII may be mounted remotely from the protective device. The fiber optic connector is located on the **X102** terminal of the protective device.

Consider the benefit of mounting the URTDII module away from the protective device and as close to the protected equipment as possible. The big bundle of RTD wires to the protected equipment becomes much shorter. The URTDII may be placed up to 400 ft (121.9 m) from the protective device with the optical fiber connection. Note that the URTDII will require a power supply connection at its remote location.

Connect a suitable source to the power terminals J10A-1 and J10A-2 on the URTDII module.

<u>Style</u>	Power Supply
URTDII-01	48-240 V AC 48-250 V DC
URTDII-02	24-48 V DC

### **URTDII Module Fiber Optic Connection to the Protective Device**

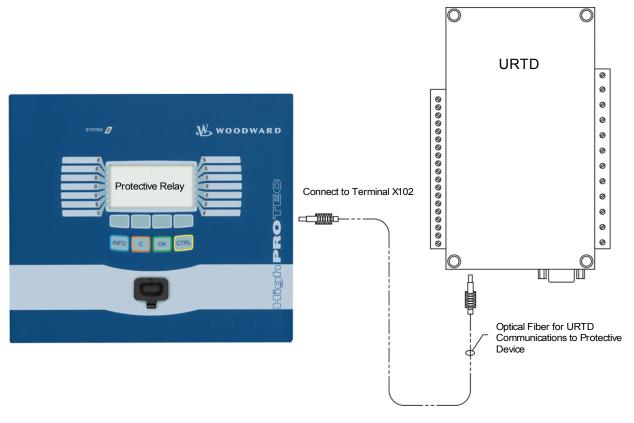

The figure above shows the fiber optic connections between the URTDII Module and the protective device. The protective device supports the optical fiber connection.

Preassembled plastic optical fibers with connectors can be ordered from any distributor of optical fiber products. In addition, these same distributors offer long rolls of cable with connectors that can be installed in the field. Some distributors will make custom lengths to order.



Surplus length of a pre-cut fiber does not cause a problems. Simply coil and tie the excess fiber at a convenient point. Avoid high tie pressure. Bending radius of the fiber should be greater than 2 in. (50.8 mm).

The fiber termination at the URTDII simply snaps into or out of the connector. To connect the fiber termination at the protective device, push the plug of the fiber optic onto the device interface then turn it until it "snaps".




The protective device as well as the URTDII have various power supply options. Make certain that the power supply is acceptable for both units before connecting the same power supply to both devices.

# NOTICE

#### Consult the URTDII Module Instruction Leaflet for complete instructions.

Three URTD terminals are provided for each RTD input.

The three terminals for any unused RTD input channel should be wired together. For example, if MW5 and MW6 are unused, MW5 terminals J2-15, J2-16, and J2-17 should be wired together and MW6 terminals J2-19, J2-20, J2-21 should be separately wired together.

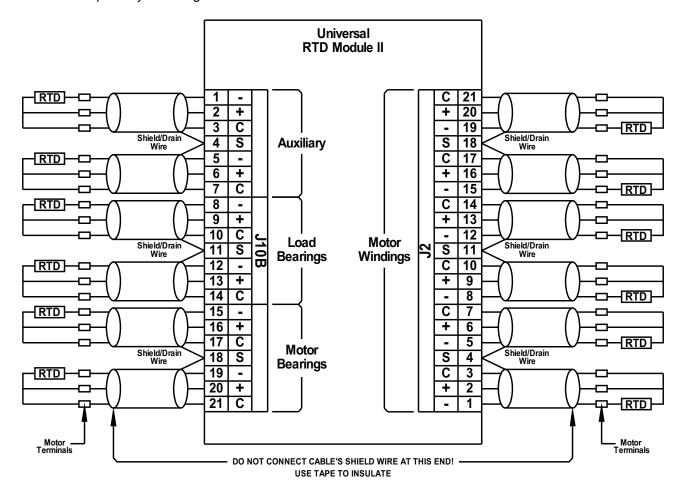

See the figure above for wiring of RTDs to the URTD inputs. Use three-conductor shielded cable. Note the connection rules in the figure. When making connections to a two-lead RTD, connect two of the cable conductors to one of the RTD leads as shown. Make this connection as close to the protected object as possible. Connect the third cable conductor to the remaining RTD lead.

Connect the shield / drain wire to the Shield terminal as shown in the figure. The RTD cable shield should be connected only at the URTD end, and insulated at the RTD end. The RTD's themselves must not be grounded at the object to be protected.

Remember to set the URTDII module DIP switches according to the types of RTDs in each of the channels.

## **Direct Commands of the URTD Module**

Parameter	Description	Setting range	Default	Menu path
Function	Permanent activation or deactivation of module/stage.	inactive,	inactive	[Service
		active		/Test (Prot inhibit)
				/URTD]
Force W1 L1	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force W1 L2	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
$\otimes$				/URTD]
Force W1 L2	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force W2 L1	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force W2 L2	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force W2 L2	Force Measured Value: Winding Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force Amb1	Force Measured Value: Ambient Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force Amb2	Force Measured Value: Ambient Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force Aux1	Force Measured Value: Auxiliary Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]
Force Aux2	Force Measured Value: Auxiliary Temperature	0 - 392	0	[Service
				/Test (Prot inhibit)
				/URTD]

Parameter	Description	Setting range	Default	Menu path
Force Aux3	Force Measured Value: Auxiliary Temperature	0 - 392	0	[Service /Test (Prot inhibit) /URTD]
Force Aux4	Force Measured Value: Auxiliary Temperature	0 - 392	0	[Service /Test (Prot inhibit) /URTD]

## **Global Protection Parameters of the URTD Module**

Parameter	Description	Setting range	Default	Menu path
Force Mode	By means of this function the normal Output Relay States can be overwritten (forced) in case that the Relay is not in a disarmed state. The relays can be set from normal operation (relay works according to the assigned signals) to "force energized" or "force deenergized" state.	permanent, timeout	permanent	[Service /Test (Prot inhibit) /URTD]
t-Timeout Force	The Output State will be set by force for the duration of this time. That means for the duration of this time the Output Relay does not show the state of the signals that are assigned on it.  Only available if: Mode = Timeout DISARM	0.00 - 300.00s	0.03s	[Service /Test (Prot inhibit) /URTD]
Temperature Unit	Temperature Unit	Celsius, Fahrenheit	Celsius	[Device Para /Measurem Display /General settings]

# **URTD Signals (Output States)**

Signal	Description
W1L1 Superv	Signal: Supervision Channel Winding1 Phase L1
W1L2 Superv	Signal: Supervision Channel Winding1 Phase L2
W1L3 Superv	Signal: Supervision Channel Winding1 Phase L3
W2L1 Superv	Signal: Supervision Channel Winding2 Phase L1
W2L2 Superv	Signal: Supervision Channel Winding2 Phase L2
W2L3 Superv	Signal: Supervision Channel Winding2 Phase L3
Amb1 Superv	Signal: Supervision Channel Ambient1
Amb2 Superv	Signal: Supervision Channel Ambient2
Aux1 Superv	Signal: Supervision Channel Auxiliary1
Aux2 Superv	Signal: Supervision Channel Auxiliary2
Aux3 Superv	Signal: Supervision Channel Auxiliary3
Aux4 Superv	Signal: Supervision Channel Auxiliary4
Superv	Signal: URTD Supervision Channel
active	Signal: URTD active
Outs forced	Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.

## **URTD Module Statistics**

Value	Description	Menu path
W1 L1 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
W1 L2 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
W1 L2 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
W2 L1 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
W2 L2 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
W2 L2 max	Measured Value: Winding Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
Amb1 max	Measured Value: Ambient Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
Amb2 max	Measured Value: Ambient Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
Aux1 max	Measured Value: Auxiliary Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]

Value	Description	Menu path
Aux2 max	Measured Value: Auxiliary Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
Aux3 max	Measured Value: Auxiliary Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]
Aux4 max	Measured Value: Auxiliary Temperature Maximum Value	[Operation
		/Statistics
		/Max
		/URTD]

## **URTD Measured Values**

Value	Description	Menu path
W1 L1	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
W1 L2	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
W1 L2	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
W2 L1	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
W2 L2	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
W2 L2	Measured Value: Winding Temperature	[Operation
		/Measured values
		/URTD]
Amb1	Measured Value: Ambient Temperature	[Operation
		/Measured values
		/URTD]
Amb2	Measured Value: Ambient Temperature	[Operation
		/Measured values
		/URTD]
Aux1	Measured Value: Auxiliary Temperature	[Operation
		/Measured values
		/URTD]
Aux2	Measured Value: Auxiliary Temperature	[Operation
		/Measured values
		/URTD]
Aux3	Measured Value: Auxiliary Temperature	[Operation
		/Measured values
		/URTD]
Aux4	Measured Value: Auxiliary Temperature	[Operation
		/Measured values
		/URTD]

### URTDII Module Interface\*

Value	Description	Menu path
RTD Max	Maximum temperature of all channels.	[Operation
		/Measured values
		/URTD]

# **Programmable Logic**


Available Elements (Equations): Logics

### **General Description**


The Protective Relay includes programmable Logic Equations for programming output relays, blocking of protective functions and custom logic functions in the relay.

The logic provides control of the output relays based on the state of the inputs that can be choosen from the assignment list (protective function pickups, protective function states, breaker states, system alarms, and module inputs). The user can use the outputs signals of a Logic Equation as inputs in higher equations (e.g. the output signal of Logic Equation 10 might be used as an input of Logic Equation 11).

#### Principle Overview

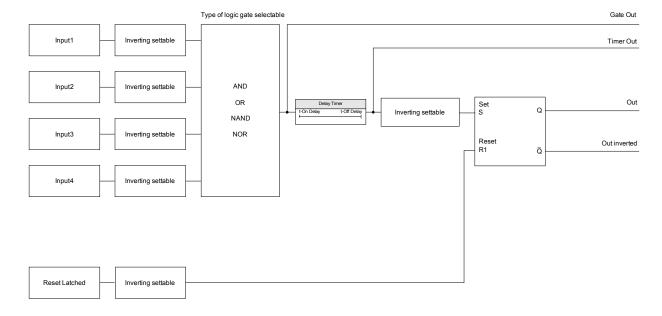


### Detailed Overview - Overall Logic diagram

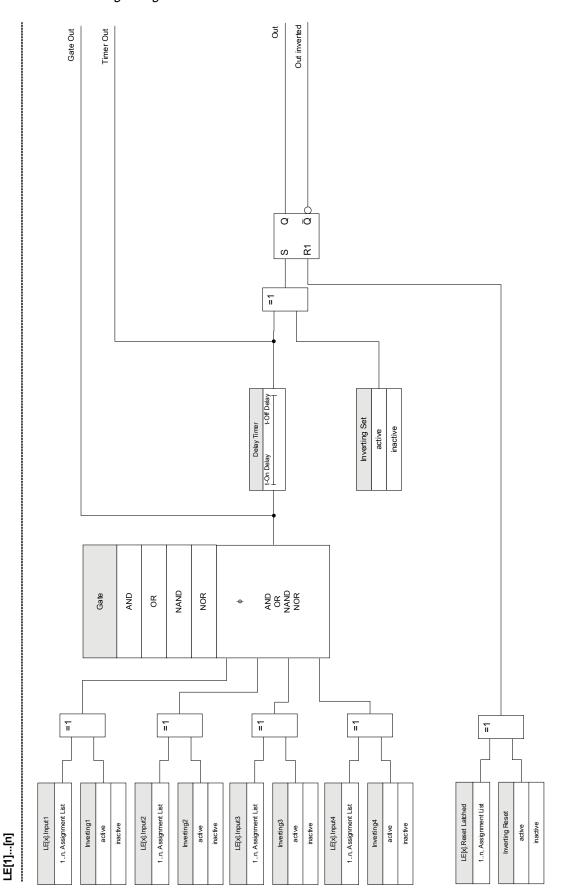

#### **Available Gates (Operators)**

Within the Logic Equation, the following Gates can be used:

Gate

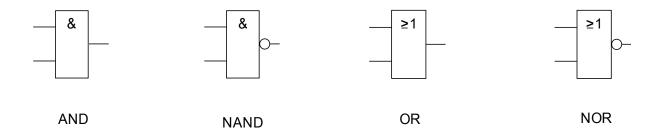

### **Input Signals**

The user can assign up to 4 Input signals (from the assignment list) to the inputs of the gate.

As an option, each of the 4 input signals can be inverted (negated)

### Timer Gate (On Delay and Off Delay)

The output of the gate can be delayed. The user has the option to set an On and an Off delay.

### Latching

The timer issues two signals. An unlatched and a latched signal. The latched input can optionally be inverted. In order to reset the latched signal the user has to assign an reset signal from the assignment list. The reset signal can also optionally be inverted.

#### **Cascading Logical Outputs**


The device will evaluate output states of the Logic Equations starting from Logic Equation 1 up to the Logic Equation with the highest number. This evaluation (device) cycle will be continuously repeated.

#### Cascading Logic Equations in an ascending sequence

Cascading in an ascending sequence means that the user uses the output signal of "Logic Equation **n**" as input of "Logic Equation **n+1**". If the state of "Logic Equation **n**" changes, the state of the output of "Logic Equation **n+1**" will be updated within the same cycle.

#### Cascading Logic Equations in a descending sequence

Cascading in a descending sequence means that the user uses the output signal of "Logic Equation **n+1**" as input of "Logic Equation **n**". If the output of "Logic Equation **n+1**" changes, this change of the feed back signal at the input of "Logic Equation **n**" will be delayed for one cycle.

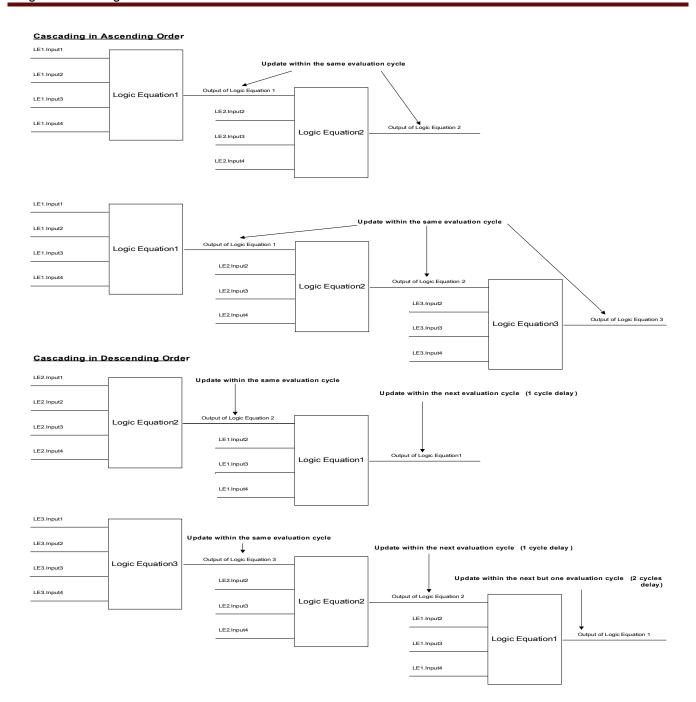

## **Programmable Logic at the Panel**



WARNING improper use of Logic Equations might result in personal injury or damage the electrical equipment.

Don't use Logic Equations unless that you can ensure the safe functionality.

How to configure a Logic Equation?

- Call up menu [Logics/LE [x]]:
- Set the Input Signals (where necessary, invert them).
- If required, configure the timer (» On delay« and » Off delay«).
- If the latched output signal is used assign a reset signal to the reset input.
- Within the »status display«, the user can check the status of the logical inputs and outputs of the Logic Equation.

In case that Logic Equations should be cascaded the user has to be aware of timing delays (cycles) in case of descending sequences (Please refer to section: Cascading Logical Outputs).

By means the Status Display [Operation/Status Display] the logical states can be verified.]

### **Programmable Logic via Smart view**



WARNING improper use of Logic Equations might result in personal injury or damage the electrical equipment.

Don't use Logic Equations unless that you can ensure the safe functionality.

# NOTICE

It is recommended to configure the logic via Smart view.

How to configure a Logic Equation?

- Call up menu [Logics/LE [x]:
- Call up the Logic Editor
- Set the Input Signals (where necessary, invert them).
- If required, configure the timer (» On delay« and » Off delay«).
- If the latched output signal is used assign a reset signal to the reset input.
- Within the »status display«, the user can check the status of the logical inputs and outputs of the Logic Equation.

In case that Logic Equations should be cascaded the user has to be aware of timing delays (cycles) in case of descending sequences (Please refer to section: Cascading Logical Outputs).

By means the Status Display [Operation/Status Display] the logical states can be verified.]

# **Device Planning Parameters of the Programmable Logic**

Parameter	Description	Options	Default	Menu path
No of Equations:	Number of required Logic Equations:	0,	20	[Device planning]
		5,		
$\otimes$		10,		
		20,		
		40,		
		80		

# **Global Protection Parameter of the Programmable Logic**

Parameter	Description	Setting range	Default	Menu path
LE1.Gate	Logic gate	AND,	AND	[Logics
		OR,		/LE 1]
		NAND,		
		NOR		
LE1.Input1	Assignment of the Input Signal	1n, Assignment		[Logics
		List		/LE 1]
LE1.Inverting1	Inverting the input signals.	inactive,	inactive	[Logics
	Only available if an input signal has been assigned.	active		/LE 1]
	omy aramable if an impact signal had been designed.			
LE1.Input2	Assignment of the Input Signal	1n, Assignment		[Logics
		List		/LE 1]
LE1.Inverting2	Inverting the input signals.	inactive,	inactive	[Logics
	Only available if an input signal has been assigned.	active		/LE 1]
	Only available if an input signal has been assigned.			
LE1.Input3	Assignment of the Input Signal	1n, Assignment		[Logics
		List		/LE 1]
LE1.Inverting3	Inverting the input signals.	inactive,	inactive	[Logics
	Only available if an input signal has been assigned.	active		/LE 1]
	, , , , , , , , , , , , , , , , , , ,			
LE1.Input4	Assignment of the Input Signal	1n, Assignment		[Logics
		List		/LE 1]
LE1.Inverting4	Inverting the input signals.	inactive,	inactive	[Logics
	Only available if an input signal has been assigned.	active		/LE 1]
	The stranger is an impact orginal ride boots designed.			
LE1.t-On Delay	Switch On Delay	0.00 - 36000.00s	0.00s	[Logics
				/LE 1]

Parameter	Description	Setting range	Default	Menu path
LE1.t-Off Delay	Switch Off Delay	0.00 - 36000.00s	0.00s	[Logics
				/LE 1]
LE1.Reset Latched	Reset Signal for the Latching	1n, Assignment		[Logics
		List		/LE 1]
LE1.Inverting Reset	Inverting Reset Signal for the Latching	inactive,	inactive	[Logics
		active		/LE 1]
LE1.Inverting Set	Inverting the Setting Signal for the Latching	inactive,	inactive	[Logics
		active		/LE 1]

# **Programmable Logic Inputs**

Name	Description	Assignment via
LE1.Gate In1-I	State of the module input: Assignment of the Input Signal	[Logics
		/LE 1]
LE1.Gate In2-I	State of the module input: Assignment of the Input Signal	[Logics
		/LE 1]
LE1.Gate In3-I	State of the module input: Assignment of the Input Signal	[Logics
		/LE 1]
LE1.Gate In4-I	State of the module input: Assignment of the Input Signal	[Logics
		/LE 1]
LE1.Reset Latch-I	State of the module input: Reset Signal for the Latching	[Logics
		/LE 1]

# **Programmable Logic Outputs**

Signal	Description
LE1.Gate Out	Signal: Output of the logic gate
LE1.Timer Out	Signal: Timer Output
LE1.Out	Signal: Latched Output (Q)
LE1.Out inverted	Signal: Negated Latched Output (Q NOT)

## **Commissioning**

Before starting work on an opened switchboard it is imperative that the complete switchboard is dead and the following 5 safety regulations are always met:,



#### Safety precautions:

- Disconnect from the power supply
- Secure against reconnection
- Verify if the equipment is dead
- Connect to ground and short-circuit all phases
- Cover or safeguard all live adjacent parts



The secondary circuit of a current transformer must never be opened during operation. The prevailing high voltages are dangerous to life.



Even when the auxiliary voltage is switched off, it is likely that there are still hazardous voltages at the component connections.

All locally applicable national and international installation and safety regulations for working at electrical power installations must always to be followed (e.g. VDE, EN, DIN, IEC).



Prior to the initial voltage connection, the following must be guaranteed:

- Correct grounding of the device
- That all signal circuits are tested
- That all control circuits are tested
- Transformer wiring is checked
- Correct rating of the CTs
- Correct burden of the CTs
- That the operational conditions are in line with the Technical Data
- Correct rating of the transformer protection
- **■** Function of the transformer fuses
- Correct wiring of all digital inputs
- Polarity and capacity of the supply voltage
- Correct wiring of the analogue inputs and outputs



The permissible deviations of measuring values and device adjustment are dependent on the technical data/tolerances.

### **Commissioning/Protection Test**



Putting into operation/Protection test must be carried out by authorized and qualified personnel. Before the device is put into operation the related documentation has to be read and understood.



With any test of the protection functions the following has to be checked:

- Is activation/tripping saved in the event recorder?
- Is tripping saved in the fault recorder?
- Is tripping saved in the disturbance recorder?
- Are all signals/messages correctly generated?
- Do all general parameterized blocking functions work properly?
- Do all temporary parameterized (via DI) blocking functions work properly?
- To enable checks on all LEDs and relay functions, these have to be provided with the relevant alarm and tripping functions of the respective protection functions/elements. This has to be tested in practical operation.



Check of all temporary blockings (via digital inputs):

■ In order to avoid malfunctions, all blockings related to tripping/non-tripping of protection function have to be tested. The test can be very complex and should therefore be performed by the same people who set up the protection concept.

# CAUTION

Check of all general trip blockings:

All general trip blockings have to be tested.

## NOTICE

Prior to the initial operation of the protection device all tripping times and values shown in the adjustment list have to be confirmed by a secondary test



Any description of functions, parameters, inputs or outputs that does not match the device in hand, can be ignored.

## Putting out of Operation - Plug out the Relay



Warning! Dismounting the relay will lead to a loss of the protection functionality. Ensure that there is a back-up protection. If you are not aware of the consequences of dismounting the device – stop! Don't start.



Inform SCADA before you start.

Switch-off the power supply.

Ensure, that the cabinet is dead and that there are no voltages that could lead to personal injury.

Plug-out the terminals at the rear-side of the device. Do not pull any cable – pull on the plugs! If it is stuck use for example a screw driver.

Fasten the cables and terminals in the cabinet by means of cable clips to ensure that no accidental electrical connections are caused.

Hold the device at the front-side while opening the mounting nuts.

Remove the device carefully out of the cabinet.

In case no other device is to be mounted or replaced cover/close the cutout in the front-door.

Close the cabinet.

# **Service and Commissioning Support**

Within the service menu various functions support maintenance and commissioning of the device.

#### **General**

Within the menu [Service/General], the user can initiate a reboot of the device.

#### **Forcing the Relay Output Contacts**



The parameters, their defaults and setting ranges have to be taken from Relay Output Contacts section.

### Principle - General Use



The User MUST ENSURE that the relay output contacts operate normally after the maintenance is completed. If the relay output contacts do not operate normally, the protective device WILL NOT provide protection.

For commissioning purposes or for maintenance, relay output contacts can be set by force.

Within this mode [Service/Test Mode/Force OR/BO Slot X(2/5)], relay output contacts can be set by force:

- Permanent; or
- Via timeout.

If they are set with a timeout, they will only keep their "Force Position" as long as this timer runs. If the timer expires, the relay will operate normally. If they are set as Permanent, they will keep the "Force Position" continuously.

There are two options available:

- Forcing a single relay » Force ORx«; and
- Forcing an entire group of relay output contacts » Force all Outs«.

Forcing an entire group takes precedence over forcing a single relay output contact!



A relay output contact <u>will NOT follow a force command</u> as long as it is disarmed at the same time.



A relay output contact will follow a force command:

- If it is not disarmed; and
- If the Direct Command is applied to the relay(s).

Keep in mind, that the forcing of all relay output contacts (of the same assembly group) takes precedence over the force command of a single relay output contact.

### **Disarming the Relay Output Contacts**



The parameters, their defaults, and setting ranges have to be taken from the Relay Output Contacts section.

#### Principle - General Use

Within this mode [Service/Test Mode/DISARMED], entire groups of relay output contacts can be disabled. By means of this test mode, contact outputs switching actions of the relay output contacts are prevented. If the relay output contacts are disarmed, maintenance actions can be carried out without the risk of taking entire processes offline.



The User MUST ENSURE that the relay output contacts are ARMED AGAIN after the maintenance is complete. If they are not armed, the protective device WILL NOT provide protection.



Zone Interlocking Output and the Supervision Contact cannot be disarmed.

Within this mode [Service/Test Mode/DISARMED] entire groups of relay output contacts can be disarmed:

- Permanent; or
- Via timeout.

If they are set with a timeout, they will only keep their "Disarm Position" as long as this timer runs. If the timer expires, the relay output contacts will operate normally. If they are set Permanent, they will keep the "Disarm State" continuously.

## NOTICE

A relay output contact will NOT be disarmed as long as:

- It's latched (and not yet reset).
- As long as a running t-OFF-delay timer is not yet expired (hold time of a relay output contact).
- The Disarm Control is not set to active.
- The Direct Command is not applied.

# NOTICE

A relay output contact will be disarmed if it's not latched and

- There is no running t-OFF-delay timer (hold time of a relay output contact) and
- The DISARM Control is set to active and
- The Direct Command Disarm is applied.

#### Forcing RTDs\*

\* = Availability depends on ordered device.



The parameters, their defaults, and setting ranges have to be taken from RTD/UTRD section.

#### Principle – General Use



The User MUST ENSURE that the RTDs operate normally after the maintenance is completed. If the RTDs do not operate normally, the protective device WILL NOT provide protection.

For commissioning purposes or for maintenance, RTD temperatures can be set by force.

Within this mode [Service/Test Mode/URTD], RTD temperatures can be set by force:

- Permanent; or
- Via timeout.

If they are set with a timeout, they will keep their "Forced Temperature" only as long as this timer runs. If the timer expires, the RTD will operate normally. If they are set as "Permanent", they will keep the "Forced Temperature" continuously. This menu will show the measured values of the RTDs until the User activates the force mode by calling up the "Function". As soon as the force mode is activated, the shown values will be frozen as long as this mode is active. Now the User can force RTD values. As soon as the force mode is deactivated, measured values will be shown again.

### Forcing Analog Outputs\*

\* = Availability depends on ordered device.



The parameters, their defaults, and setting ranges have to be taken from Analog Output section.

#### Principle – General Use



The User MUST ENSURE that the Analog Outputs operate normally after maintenance is completed. Do not use this mode if forced Analog Outputs cause issues in external processes.

For commissioning purposes or for maintenance, Analog Outputs can be set by force.

Within this mode [Service/Test Mode/Analog Output(x)], Analog Outputs can be set by force:

- Permanent; or
- Via timeout.

If they are set with a timeout, they will only keep their "Forced Value" as long as this timer runs. If the timer expires, the Analog Output will operate normally. If they are set as "">Permanent"</a>, they will keep the "Forced Value" continuously. This menu will show the current value that is assigned onto the Analog Output until the User activates the force mode by calling up the ""Function"</a>. As soon as the force mode is activated, the shown values will be frozen as long as this mode is active. Now the User can force Analog Output values. As soon as the force mode is deactivated, measured values will be shown again.

### Forcing Analog Inputs\*

\* = Availability depends on ordered device.



The parameters, their defaults, and setting ranges have to be taken from Analog Inputs section.

#### Principle - General Use



The User MUST ENSURE that the Analog Inputs operate normally after maintenance is completed.

For commissioning purposes or for maintenance, Analog Inputs can be set by force.

Within this mode [Service/Test Mode (Prot inhibit)/WARNING! Cont?/Analog Inputs], Analog Inputs can be set by force:

- Permanent; or
- Via timeout.

If they are set with a timeout, they will only keep their "Forced Value" as long as this timer runs. If the timer expires, the Analog Input will operate normally. If they are set as "Permanent", they will keep the "Forced Value" continuously. This menu will show the current value that is fed to the Analog Input until the User activates the force mode by calling up the "Function". As soon as the force mode is activated, the shown value will be frozen as long as this mode is active. Now the User can force the Analog Input value. As soon as the force mode is deactivated, measured value will be shown again.

### Failure Simulator (Sequencer)\*

Available Elements: Sgen

\* = Availability depends on ordered device.


For commissioning support and in order to analyze failures, the protective device offers the option to simulate measuring quantities. The simulation menu can be found within the [Service/Test Mode/Sgen] menu. The simulation cycle consists of three states:

- Pre-failure;
- Failure; and
- Post-failure State (Phase).

Within the [Service/Test Mode/Sgen/Configuration/Times] sub-menu, the duration of each phase can be set. In addition; the measuring quantities to be simulated can be determined (e.g.: voltages, currents, and the corresponding angles) for each phase (and ground). The simulation will be terminated, if a phase current exceeds 0.1 times In. A simulation can be restarted, five seconds after the current has fallen below 0.1 times In.



Setting the device into the simulation mode means taking the protective device out of operation for the duration of the simulation. Do not use this feature during operation of the device if the User cannot guarantee that there is a running and properly working backup protection.

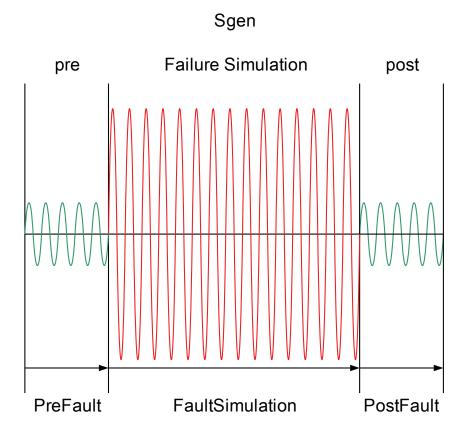

The energy counters will be stopped while the failure simulator is running.



The simulation voltages are always phase to neutral voltages, irrespectively of the mains voltage transformers' connection method (Phase-to-phase / Wey / Open Delta).

Application Options of the Fault Simulator\*\*:

Stop Options	Cold Simulation (Option 1)	Hot Simulation (Option 2)
Do not stop	Simulation without tripping the breaker:	Simulation is authorized to trip the breaker:
Run complete: Pre Failure, Failure, Post Failure.	Blocking protective Trips to the Breaker. That means verifying if the protective device generates a trip without energizing the trip coil of the breaker (similar to disarm	How To?: Call up [Service/Test Mode/Sgen /Process] TripCmd Mode = With TripCmd
How To?: Call up [Service/Test Mode/Sgen /Process]	the output relay).	Tripoma Wode – With Tripoma
Ex Force Post = no assignment	How To?: Call up [Service/Test Mode/Sgen /Process]	
Press/Call up Start Simulation.	TripCmd Mode = No TripCmd	
Stop by external signal	'	
Force Post: As soon as this signal becomes true, the Fault Simulation will be forced to switch into the Post Failure mode.		
How To?: Call up [Service/Test Mode/Sgen /Process]		
Ex Force Post = Assigned Signal		
Manual stop		
As soon as this signal becomes true, the Fault Simulation will be terminated and the device changes back to normal operation.		
How To?: Call up [Service/Test Mode/Sgen /Process]		
Press/Call up Stop Simulation.		

<sup>\*\*</sup>Please note: Due to internal dependencies, the frequency of the simulation module is 0.16% greater than the rated one.

## **Device Planning Parameters of the Failure Simulator**

Parameter	Description	Options	Default	Menu path
Mode	Mode	do not use,	use	[Device planning]
		use		

## **Global Protection Parameter of the Failure Simulator**

Parameter	Description	Setting range	Default	Menu path
PreFault	Pre Fault Duration	0.00 - 300.00s	0.0s	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/Times]
FaultSimulation	Duration of Fault Simulation	0.00 - 10800.00s	0.0s	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/Times]
PostFault	PostFault	0.00 - 300.00s	0.0s	[Service
				/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/Times]
TripCmd Mode	Trip Command Mode	No TripCmd,	No TripCmd	[Service
		With TripCmd		/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Process]
Ex Start Simulation	External Start of Fault Simulation (Using the test	1n, Assignment		[Service
	parameters)	List		/Test (Prot inhibit)
				/Sgen
				/Process]
ExBlo	External blocking of the module, if blocking is activated	1n, Assignment	SG[1].Pos ON	[Service
	(allowed) within a parameter set and if the state of the assigned signal is true.	List		/Test (Prot inhibit)
	assigned signal to day.			/Sgen
				/Process]

Parameter	Description	Setting range	Default	Menu path
Ex ForcePost	Force Post state. Abort simulation.	1n, Assignment		[Service
	List		/Test (Prot inhibit)	
				/Sgen
				/Process]

## **Current Parameter of the Failure Simulator**

Parameter	Description	Setting range	Default	Menu path
CT W1.IL1	Current Fundamental Magnitude in Pre State: phase L1	0.00 - 40.00In	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.IL2	Current Fundamental Magnitude in Pre State: phase L2	0.00 - 40.00In	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.IL3	Current Fundamental Magnitude in Pre State: phase L3	0.00 - 40.00In	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.IG meas	Current Fundamental Magnitude in Pre State: IG	0.00 - 25.00In	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]

Parameter	Description	Setting range	Default	Menu path
CT W1.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Pre-Phase:phase L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Pre-Phase:phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.phi IL3	Start Position respectively Start Angle of the Current	-360 - 360°	120°	[Service
-	Phasor during Pre-Phase:phase L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.phi IG meas		-360 - 360°	0°	[Service
	Phasor during Pre-Phase: IG			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W1]
CT W1.IL1	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00ln	0.0ln	[Service
	L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.IL2	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00ln	0.0ln	[Service
	L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]

Parameter	Description	Setting range	Default	Menu path
CT W1.IL3	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00ln	0.0In	[Service
	L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.IG meas	Current Fundamental Magnitude in Fault State: IG	0.00 - 25.00ln	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Fault-Phase:phase L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Fault-Phase:phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.phi IL3	Start Position respectively Start Angle of the Current	-360 - 360°	120°	[Service
	Phasor during Fault-Phase:phase L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]
CT W1.phi IG meas		-360 - 360°	0°	[Service
	Phasor during Fault-Phase: IG			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W1]

Parameter	Description	Setting range	Default	Menu path
CT W1.IL1	Current Fundamental Magnitude during Post phase:	0.00 - 40.00In	0.0ln	[Service
	phase L1			/Test (Prot inhibit)
				/Sgen
)				/Configuration
				/PostFault
				/CT W1]
CT W1.IL2	Current Fundamental Magnitude during Post phase:	0.00 - 40.00ln	0.0ln	[Service
	phase L2			/Test (Prot inhibit)
				/Sgen
)				/Configuration
				/PostFault
				/CT W1]
CT W1.IL3	Current Fundamental Magnitude during Post phase:	0.00 - 40.00ln	0.0ln	[Service
	phase L3			/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/PostFault
				/CT W1]
CT W1.IG meas	Current Fundamental Magnitude during Post phase: IG	0.00 - 25.00ln	0.0ln	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W1]
CT W1.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Post phase: phase L1			/Test (Prot inhibit)
$\bigcirc$				/Sgen
•				/Configuration
				/PostFault
				/CT W1]
CT W1.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Post phase: phase L2			/Test (Prot inhibit)
$\bigotimes$				/Sgen
				/Configuration
				/PostFault
				/CT W1]

Parameter	Description	Setting range	Default	Menu path
CT W1.phi IL3	Start Position respectively Start Angle of the Current	-360 - 360°	120°	[Service
	Phasor during Post phase: phase L3			/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/PostFault
				/CT W1]
CT W1.phi IG meas		-360 - 360°	0°	[Service
	Phasor during Post phase: IG			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W1]

Parameter	Description	Setting range	Default	Menu path
CT W2.IL1	Current Fundamental Magnitude in Pre State: phase L1	0.00 - 40.00In	0.0ln	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.IL2	Current Fundamental Magnitude in Pre State: phase L2	0.00 - 40.00In	0.0ln	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.IL3	Current Fundamental Magnitude in Pre State: phase L3	0.00 - 40.00In	0.0ln	[Service
				/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.IG meas	Current Fundamental Magnitude in Pre State: IG	0.00 - 25.00In	0.0ln	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]

Parameter	Description	Setting range	Default	Menu path
CT W2.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Pre-Phase:phase L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Pre-Phase:phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.phi IL3	Start Position respectively Start Angle of the Current	-360 - 360°	120°	[Service
-	Phasor during Pre-Phase:phase L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.phi IG meas	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Pre-Phase: IG			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PreFault
				/CT W2]
CT W2.IL1	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00In	0.0In	[Service
	L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.IL2	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00ln	0.0ln	[Service
	L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]

Parameter	Description	Setting range	Default	Menu path
CT W2.IL3	Current Fundamental Magnitude in Fault State: phase	0.00 - 40.00In	0.0In	[Service
	L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.IG meas	Current Fundamental Magnitude in Fault State: IG	0.00 - 25.00In	0.0In	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
·	Phasor during Fault-Phase:phase L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Fault-Phase:phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.phi IL3	Start Position respectively Start Angle of the Current	-360 - 360°	120°	[Service
	Phasor during Fault-Phase:phase L3			/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]
CT W2.phi IG meas		-360 - 360°	0°	[Service
	Phasor during Fault-Phase: IG			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/FaultSimulation
				/CT W2]

Parameter	Description	Setting range	Default	Menu path
CT W2.IL1	Current Fundamental Magnitude during Post phase:	0.00 - 40.00In	0.0ln	[Service
	phase L1			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.IL2	Current Fundamental Magnitude during Post phase:	0.00 - 40.00ln	0.0ln	[Service
	phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.IL3	Current Fundamental Magnitude during Post phase:	0.00 - 40.00ln	0.0ln	[Service
	phase L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.IG meas	Current Fundamental Magnitude during Post phase: IG	0.00 - 25.00ln	0.0ln	[Service
				/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.phi IL1	Start Position respectively Start Angle of the Current	-360 - 360°	0°	[Service
	Phasor during Post phase: phase L1			/Test (Prot inhibit)
$\bigotimes$				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.phi IL2	Start Position respectively Start Angle of the Current	-360 - 360°	240°	[Service
	Phasor during Post phase: phase L2			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]

Parameter	Description	Setting range	Default	Menu path
CT W2.phi IL3		-360 - 360°	120°	[Service
	Phasor during Post phase: phase L3			/Test (Prot inhibit)
				/Sgen
				/Configuration
				/PostFault
				/CT W2]
CT W2.phi IG meas		-360 - 360°	0°	[Service
	Phasor during Post phase: IG			/Test (Prot inhibit)
$\bigcirc$				/Sgen
				/Configuration
				/PostFault
				/CT W2]

# **States of the Inputs of the Failure Simulator**

Name	Description	Assignment via
Ex Start Simulation-I	(Using the test parameters)	[Service
		/Test (Prot inhibit)
		/Sgen
		/Process]
ExBlo	Module input state: External blocking	[Service
		/Test (Prot inhibit)
		/Sgen
		/Process]
Ex ForcePost-I	State of the module input:Force Post state. Abort simulation.	[Service
		/Test (Prot inhibit)
		/Sgen
		/Process]

# Signals of the Failure Simulator (States of the Outputs)

Signal	Description
Running	Signal; Measuring value simulation is running
State	Signal: Wave generation states: 0=Off, 1=PreFault, 2=Fault, 3=PostFault, 4=InitReset

#### **Direct Commands of the Failure Simulator**

Parameter	Description	Setting range	Default	Menu path
Start Simulation	Start Fault Simulation (Using the test parameters)	inactive,	inactive	[Service
		active		/Test (Prot inhibit)
				/Sgen
				/Process]
Stop Simulation	Stopp Fault Simulation (Using the test parameters)	inactive,	inactive	[Service
		active		/Test (Prot inhibit)
				/Sgen
				/Process]

# **Failure Simulator Values**

Value	Description	Default	Size	Menu path
State	, ,	Off	Off,	[Service
2=Fault, 3=PostFault, 4=InitReset		PreFault,	/Test (Prot inhibit)	
			FaultSimulation,	/Sgen
			PostFault,	/State]
			Init Res	

#### **Technical Data**



Use Copper conductors only, 75°C. Conductor size AWG 14 [2.5 mm<sup>2</sup>].

#### **Climatic Environmental Conditions**

Storage Temperature:	Operating Temperature:	
-30°C up to +70°C (-22°F to 158°F)	-20°C up to +60°C (-4°F to 140°F)	

Permissible Humidity at Ann. Average: <75% rel. (on 56d up to 95% rel.)

Permissible Installation Altitude: <2000 m (6561.67 ft) above sea level

If 4000 m (13123.35 ft) altitude apply a changed classification of

the operating and test voltages may be necessary.

## **Degree of Protection EN 60529**

HMI front panel with seal IP54
HMI front panel without seal IP50
Rear side terminals IP20

#### **Routine Test**

Insulation test acc. to IEC60255-5: All tests to be carried out against earth and other input- and

2.5 kV (eff) / 50 Hz

output circuits

Aux. voltage supply, digital inputs,

current measuring inputs, signal relay

outputs:

Voltage measuring inputs: 3.0 kV (eff) / 50 Hz

All wire-bound communication interfaces: 1.5 kV DC

## Housing

Housing B2: height/-width 173 mm (6.811")/ 212.7 mm (8.374")

(7 Pushbottons/Door Mounting)

Housing B2: height/-width 183 mm (7.205")/ 212.7 mm (8.374")

(8 Pushbottons/Door Mounting)

Housing B2: height/-width 173 mm (6.811" / 4U)/ 212.7 mm (8.374" / 42 HP)

(7 and 8 Pushbottons/19")

Housing depth (incl. terminals): 208 mm (8.189")

Material, housing: Aluminum extruded section

Material, front panel: Aluminum/Foil front

Mounting position: Horizontal (±45° around the X-axis are allowed)

Weight: approx. 4.7 kg (10.36 lb)

#### **Current and Earth Current Measurement**

#### Plug-in Connectors with Integrated Short-Circuiter

(Conventional Current Inputs)

Nominal currents: 1 A / 5 A

Max. measuring range: up to 40 x In (phase currents)

up to 25 x In (earth current standard) up to 2.5 x In (earth current sensitive)

Continuous loading capacity: Phase current/Earth current Earth current sensitive

4 x In/continuously

Overcurrent proof: Phase current/Earth current Earth current sensitive

30 x ln/10 s 100 x ln/1 s 25 x ln/1 s

S = 120 mVA

250 x ln/10 ms (1 half-wave) 100 x ln/10 ms (1 half-wave)

2 x In/continuously

Power consumption: Phase current inputs: Sensitive earth current input:

Earth current input: at In = 0.5 A S = 5.4 mVA at In = 1 A S = 25 mVA

Frequency range: 50 Hz / 60 Hz ±10%

Terminals: Screw-type terminals with integrated short-circuiters (contacts)

Screws: M4, captive type acc. to VDEW

at ln = 5 A

Connection Cross Sections: 1 x or 2 x 2.5 mm<sup>2</sup> (2 x AWG 14) with wire end ferrule

1 x or 2 x 4.0 mm $^2$  (2 x AWG 12) with ring cable sleeve or cable sleeve 1 x or 2 x 6 mm $^2$  (2 x AWG 10) with ring cable sleeve or cable sleeve

The current measuring board's terminal blocks may be used as with 2 (double) conductors AWG 10,12,14 otherwise with single conductors

only.

## **Voltage Supply**

Aux. Voltage: 24V - 270 V DC/48 - 230 V AC (-20/+10%) ≂

Buffer time in case of supply failure: >= 50 ms at minimal aux. voltage. The device will shut down if

the buffer time is expired.

Note: communication could be interrupted

Max. permissible making current: 18 A peak value for <0.25 ms

12 A peak value for <1 ms

The voltage supply must be protected by a fuse of:

■ 2,5 A time-lag miniature fuse 5x20 mm (approx. 1/5" x 0.8") according to IEC 60127

■ 3,5 A time-lag miniature fuse 6,3x32 mm (approx. 1/4" x 1 1/4") according to UL 248-14

## **Power Consumption**

Power supply range: Power consumption Max. power consumption

in idle mode

24-270 V DC: 8 W 13 W

48-230 V AC 8W / 16 VA 13 W / 21 VA

(for frequencies of 50-60 Hz):

# **Display**

Display type: LCD with LED background illumination

Resolution graphics display: 128 x 64 pixel

LED-Type: Two colored: red/green

Number of LEDs, Housing B2: 15

#### Front Interface RS232

Baud rates: 115200 Baud
Handshake: RTS and CTS
Connection: 9-pole D-Sub plug

## **Real Time Clock**

Running reserve of the real time clock: 1 year min.

## **Digital Inputs**

Max. input voltage: 300 V DC/259 V AC


Input current: DC <4 mA


AC <16 mA

Reaction time: <20 ms

Fallback Time:

Shorted inputs <30 ms
Open inputs <90 ms

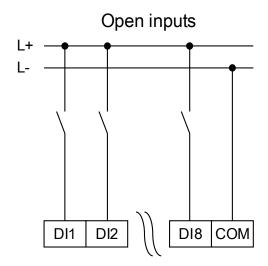

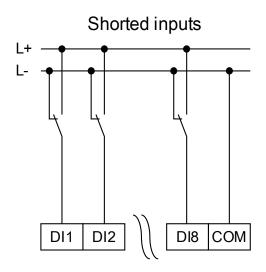

#### (Safe state of the digital inputs)

4 Switching thresholds: Un = 24 V DC, 48 V DC, 60 V DC,

110 V AC/DC, 230 V AC/DC

Un = 24 V DC:

Switching threshold 1 ON: min. 19.2 V DC Switching threshold 1 OFF: max. 9.6 V DC

Un = 48 V/60V DC:

Switching threshold 2 ON: Min. 42.6 V DC Switching threshold 2 OFF: max. 21.3 V DC

Un = 110 V AC/DC:

Switching threshold 3 ON: min. 88.0 V DC/88.0 V AC Switching threshold 3 OFF: max. 44.0 V DC/44.0 V AC

Un = 230 V AC/DC:

Switching threshold 4 ON: min. 184 V DC/184 V AC
Switching threshold 4 OFF max. 92 V DC/92 V AC

Terminals: Screw-type terminals

#### **Binary Output Relays**

Continuous current: 5 A AC/DC

Max. Switch-on current: 25 A AC/DC for 4 s

 $30~\text{A}\,/\,230~\text{Vac}$  according to ANSI IEEE Std C37.90-2005

30 A / 250 Vdc according to ANSI IEEE Std C37.90-2005

Max. breaking current: 5 A AC up to 240 V AC

5 A DC up to 30 V (resistive) 0.3 A DC at 250 V (resistive)

Max. switching voltage: 250 V AC/250 V DC

Switching capacity: 1250 VA

Contact type: 1 changeover contact or normally open or normally closed

Terminals: Screw-type terminals

## **Supervision Contact (SC)**

Continuous current:: 5 A AC/DC

Max. Switch-on current: 15 A AC/DC for 4 s
Max. breaking current: 5 A AC up to 250 V AC

5 A DC up to 30 V (resistive) 0.25 A DC at 250 V (resistive)

Max. switching voltage: 250 V AC/250 V DC

Switching capacity: 1250 VA

Contact type: 1 changeover contact Terminals: Screw-type terminals

## **Time Synchronization IRIG**

Nominal input voltage: 5 V

Connection: Screw-type terminals (twisted pair)

#### RS485\*


Master/Slave: Slave

Connection: 9-pole D-Sub socket

(external terminating resistors/in D-Sub)

or 6 screw-clamping terminals RM 3.5 mm (138 MIL)

(terminating resistors internal)



In case that the RS485 interface is realized via terminals, the communication cable has to be shielded.

# Fibre Optic\*

Master/Slave: Slave
Connection: ST-Plug
Wavelength 820 nm

#### **URTD-Interface\***

Connection: Versatile Link

## **Boot phase**

After switching on the power supply the protection will be available in approximately 32 seconds. After approximately 80 seconds the boot phase is completed (HMI and Communication initialized).

<sup>\*</sup>availability depends on device

#### **Standards**

## **Approvals**

■ GOST-R

UL- File No.: E217753CSA File No.: 251990\*\*

■ CEI 0-16\* (Tested by EuroTest Laboratori S.r.I, Italy)\*

## **Design Standards**

Generic standard EN 61000-6-2

EN 61000-6-3

Product standard IEC 60255-6

EN 50178

UL 508 (Industrial Control Equipment)

CSA C22.2 No. 14-95 (Industrial Control Equipment)

ANSI C37.90

## **High Voltage Tests (IEC 60255-6)**

High frequency interference test

IEC 60255-22-1 Within one circuit 1 kV/2 s

Circuit to earth 2.5 kV/2 s

Circuit to circuit 2.5 kV/2 s

Insulation voltage test

class 3

IEC 60255-5 All circuits to other circuits and exposed 2.5 kV (eff.)/50Hz, 1 min.

EN 50178 conductive parts

Except interfaces 1,5 kV DC, 1 min.

and Voltage measuring input 3 kV (eff.)/50 Hz, 1 min.

Impulse voltage test

IEC 60255-5 5 kV/0.5J, 1.2/50 μs

<sup>\* =</sup> applies to MRU4

<sup>\*\* =</sup> applies to (MRA4, MRU4, MRI4, MRDT4, MRM4)

## **EMC Immunity Tests**

Fast transient disturbance immunity test (Burst)

IEC 60255-22-4 Power supply, mains inputs  $\pm 4$  kV, 2.5 kHz

IEC 61000-4-4

class 4 Other in- and outputs  $\pm 2 \text{ kV}$ , 5 kHz

Surge immunity test

IEC 61000-4-5 Within one circuit 2 kV

class 4

Circuit to earth 4 kV

Class 3 Communication cables to earth 2 kV

Electrical discharge immunity test

IEC 60255-22-2 Air discharge 8 kV

IEC 61000-4-2

class 3 Contact discharge 6 kV

Radiated radio-frequency electromagnetic field immunity test

IEC 61000-4-3 26 MHz – 80 MHz 10 V/m ANSI C37.90.2 80 MHz – 1 GHz 35 V/m 1 GHz – 3 GHz 10 V/m

Immunity to conducted disturbances induced by radio frequency fields

IEC 61000-4-6 10 V

class 3

Power frequency magnetic field immunity test

IEC 61000-4-8 continues 30 A/m class 4 3 sec 300 A/m

#### **EMC Emission Tests**

Radio interference suppression test

IEC/CISPR11 Limit value class B

Radio interference radiation test

IEC/CISPR11 Limit value class B

# **Environmental Tests**

Classification: IEC 60068-1	Climatic classification	20/060/56
IEC 60721-3-1	Classification of ambient conditions (Storage)	1K5/1B1/1C1L/1S1/1M2 but min30°C
IEC 60721-3-2	Classification of ambient conditions	2K4/2B1/2C1/2S1/2M2
IEC 60721-3-3	(Transportation) Classification of ambient conditions (Stationary use at weather protected locations)	but min30°C 3K6/3B1/3C1/3S1/3M2 but min20°C/max +60°C
Test Ad: Cold IEC 60068-2-1	Temperature test duration	-20°C 16 h
Test Ad: Cold CEI 0-16* (IEC 60068-2-1)	Temperature test duration	-25°C 16 h
<i>Test Bd: Dry Heat</i> IEC 60068-2-2	Temperature Relative humidity test duration	60°C <50% 72 h
Test Bd: Dry Heat CEI 0-16* (IEC 60068-2-2)	Temperature Relative humidity test duration	70°C <50% 72 h
Test Db: Damp Heat (cyclic) IEC 60068-2-30	Temperature Relative humidity Cycles (12 + 12-hour)	60°C 95% 2

<sup>\*</sup> applies to MRU4 only

#### **Mechanical Tests**

Test Fc: Vibration response test

IEC 60068-2-6 (10 Hz – 59 Hz) 0.035 mm

IEC 60255-21-1 Displacement

class 1 (59Hz – 150Hz) 0.5 gn

Acceleration

Number of cycles in each axis 1

Test Fc: Vibration endurance test

IEC 60068-2-6 (10 Hz – 150 Hz) 1.0 gn

IEC 60255-21-1 Acceleration

class 1 Number of cycles in each axis 20

Test Ea: Shock tests

IEC 60068-2-27 Shock response test 5 gn, 11 ms, 3 impulses in each

IEC 60255-21-2 direction

class 1

Shock resistance test 15 gn, 11 ms, 3 impulses in each

direction

Test Eb: Shockendurance test

IEC 60068-2-29 Shock endurance test 10 gn, 16 ms, 1000 impulses in each

IEC 60255-21-2 direction

class 1

Test Fe: Earthquake test

IEC 60068-3-3 Single axis earthquake vibration test 3 – 7 Hz: Horizontal 10 mm,

KTA 3503 1 cycle each axis

IEC 60255-21-3

class 2 7 – 35 Hz Horizontal: 2 gn,

1 cycle each axis

# **Assignment List**

The »ASSIGNMENT LIST« below summarizes all module outputs (signals) and inputs (e.g. states of the assignments).

Name	Description
	No assignment
Prot.available	Signal: Protection is available
Prot.active	Signal: active
Prot.ExBlo	Signal: External Blocking
Prot.Blo TripCmd	Signal: Trip Command blocked
Prot.ExBlo TripCmd	Signal: External Blocking of the Trip Command
Prot.Alarm L1	Signal: General-Alarm L1
Prot.Alarm L2	Signal: General-Alarm L2
Prot.Alarm L3	Signal: General-Alarm L3
Prot.Alarm G	Signal: General-Alarm - Earth fault
Prot.Alarm	Signal: General Alarm
Prot.Trip L1	Signal: General Trip L1
Prot.Trip L2	Signal: General Trip L2
Prot.Trip L3	Signal: General Trip L3
Prot.Trip G	Signal: General Trip Ground fault
Prot.Trip	Signal: General Trip
Prot.Res Fault a Mains No	Signal: Resetting of fault number and number of grid faults.
Prot.ExBlo1-I	Module input state: External blocking1
Prot.ExBlo2-I	Module input state: External blocking2
Prot.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ctrl.Local	Switching Authority: Local
Ctrl.Remote	Switching Authority: Remote
Ctrl.NonInterl	Non-Interlocking is active
Ctrl.SG Indeterm	Minimum one Switchgear is moving (Position cannot be determined).
Ctrl.SG Disturb	Minimum one Switchgear is disturbed.
Ctrl.NonInterl-I	Non-Interlocking
SG[1].SI SingleContactInd	Signal: The Position of the Switchgear is detected by one auxiliary contact (pole) only. Thus indeterminate and disturbed Positions cannot be detected.
SG[1].Pos not ON	Signal: Pos not ON
SG[1].Pos ON	Signal: Circuit Breaker is in ON-Position
SG[1].Pos OFF	Signal: Circuit Breaker is in OFF-Position
SG[1].Pos Indeterm	Signal: Circuit Breaker is in Indeterminate Position
SG[1].Pos Disturb	Signal: Circuit Breaker Disturbed - Undefined Breaker Position. The Position Indicators contradict themselves. After expiring of a supervision timer this signal becomes true.
SG[1].Ready	Signal: Circuit breaker is ready for operation.
SG[1].t-Dwell	Signal: Dwell time

Name	Description
SG[1].Removed	Signal: The withdrawable circuit breaker is Removed
SG[1].Interl ON	Signal: One or more IL_On inputs are active.
SG[1].Interl OFF	Signal: One or more IL_Off inputs are active.
SG[1].CES succesf	Signal: Command Execution Supervision: Switching command executed successfully.
SG[1].CES Disturbed	Signal: Command Execution Supervision: Switching Command unsuccessful. Switchgear in disturbed position.
SG[1].CES Fail TripCmd	Signal: Command Execution Supervision: Command execution failed because trip command is pending.
SG[1].CES SwitchDir	Signal: Command Execution Supervision respectively Switching Direction Control: This signal becomes true, if a switch command is issued even though the switchgear is already in the requested position. Example: A switchgear that is already OFF should be switched OFF again (doubly). The same applies to CLOSE commands.
SG[1].CES ON d OFF	Signal: Command Execution Supervision: On Command during a pending OFF Command.
SG[1].CES SG not ready	Signal: Command Execution Supervision: Switchgear not ready
SG[1].CES Fiel Interl	Signal: Command Execution Supervision: Switching Command not executed because of field interlocking.
SG[1].CES SyncTimeout	Signal: Command Execution Supervision: Switching Command not executed. No Synchronization signal while t-sync was running.
SG[1].CES SG removed	Signal: Command Execution Supervision: Switching Command unsuccessful, Switchgear removed.
SG[1].Prot ON	Signal: ON Command issued by the Prot module
SG[1].TripCmd	Signal: Trip Command
SG[1].Ack TripCmd	Signal: Acknowledge Trip Command
SG[1].ON incl Prot ON	Signal: The ON Command includes the ON Command issued by the Protection module.
SG[1].OFF incl TripCmd	Signal: The OFF Command includes the OFF Command issued by the Protection module.
SG[1].Position Ind manipul	Signal: Position Indicators faked
SG[1].SGwear Slow SG	Signal: Alarm, the circuit breaker (load-break switch) becomes slower
SG[1].Res SGwear SI SG	Signal: Resetting the slow Switchgear Alarm
SG[1].ON Cmd	Signal: ON Command issued to the switchgear. Depending on the setting the signal may include the ON command of the Prot module.
SG[1].OFF Cmd	Signal: OFF Command issued to the switchgear. Depending on the setting the signal may include the OFF command of the Prot module.
SG[1].ON Cmd manual	Signal: ON Cmd manual
SG[1].OFF Cmd manual	Signal: OFF Cmd manual
SG[1].Sync ON request	Signal: Synchronous ON request
SG[1].Aux ON-I	Module Input State: Position indicator/check-back signal of the CB (52a)
SG[1].Aux OFF-I	Module input state: Position indicator/check-back signal of the CB (52b)
SG[1].Ready-I	Module input state: CB ready
SG[1].Sys-in-Sync-I	State of the module input: This signals has to become true within the synchronization time. If not, switching is unsuccessful.
SG[1].Removed-I	State of the module input: The withdrawable circuit breaker is Removed
SG[1].Ack TripCmd-I	State of the module input: Acknowledgement Signal (only for automatic acknowledgement) Module input signal
SG[1].Interl ON1-I	State of the module input: Interlocking of the ON command
SG[1].Interl ON2-I	State of the module input: Interlocking of the ON command
SG[1].Interl ON3-I	State of the module input: Interlocking of the ON command

Name	Description
SG[1].Interl OFF1-I	State of the module input: Interlocking of the OFF command
SG[1].Interl OFF2-I	State of the module input: Interlocking of the OFF command
SG[1].Interl OFF3-I	State of the module input: Interlocking of the OFF command
SG[1].SCmd ON-I	State of the module input: Switching ON Command, e.g. the state of the Logics or the state of the digital input
SG[1].SCmd OFF-I	State of the module input: Switching OFF Command, e.g. the state of the Logics or the state of the digital input
SG[1].Operations Alarm	Signal: Service Alarm, too many Operations
SG[1].Isum Intr trip: IL1	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL1
SG[1].Isum Intr trip: IL2	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL2
SG[1].Isum Intr trip: IL3	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL3
SG[1].Isum Intr trip	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded in at least one phase.
SG[1].Res TripCmd Cr	Signal: Resetting of the Counter: total number of trip commands
SG[1].Res Sum trip	Signal: Reset summation of the tripping currents
SG[1].WearLevel Alarm	Signal: Threshold for the Alarm
SG[1].WearLevel Lockout	Signal: Threshold for the Lockout Level
SG[1].Res SGwear Curve	Signal: Reset of the Circuit Breaker (load-break switch) Wear maintenance curve.
SG[1].Isum Intr ph Alm	Signal: Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.
SG[1].Res Isum Intr ph Alm	Signal: Reset of the Alarm, "the per hour Sum (Limit) of interrupting currents has been exceeded".
SG[2].SI SingleContactInd	Signal: The Position of the Switchgear is detected by one auxiliary contact (pole) only. Thus indeterminate and disturbed Positions cannot be detected.
SG[2].Pos not ON	Signal: Pos not ON
SG[2].Pos ON	Signal: Circuit Breaker is in ON-Position
SG[2].Pos OFF	Signal: Circuit Breaker is in OFF-Position
SG[2].Pos Indeterm	Signal: Circuit Breaker is in Indeterminate Position
SG[2].Pos Disturb	Signal: Circuit Breaker Disturbed - Undefined Breaker Position. The Position Indicators contradict themselves. After expiring of a supervision timer this signal becomes true.
SG[2].Ready	Signal: Circuit breaker is ready for operation.
SG[2].t-Dwell	Signal: Dwell time
SG[2].Removed	Signal: The withdrawable circuit breaker is Removed
SG[2].Interl ON	Signal: One or more IL_On inputs are active.
SG[2].Interl OFF	Signal: One or more IL_Off inputs are active.
SG[2].CES succesf	Signal: Command Execution Supervision: Switching command executed successfully.
SG[2].CES Disturbed	Signal: Command Execution Supervision: Switching Command unsuccessful. Switchgear in disturbed position.
SG[2].CES Fail TripCmd	Signal: Command Execution Supervision: Command execution failed because trip command is pending.
SG[2].CES SwitchDir	Signal: Command Execution Supervision respectively Switching Direction Control: This signal becomes true, if a switch command is issued even though the switchgear is already in the requested position. Example: A switchgear that is already OFF should be switched OFF again (doubly). The same applies to CLOSE commands.
SG[2].CES ON d OFF	Signal: Command Execution Supervision: On Command during a pending OFF Command.
SG[2].CES SG not ready	Signal: Command Execution Supervision: Switchgear not ready

Name	Description
SG[2].CES Fiel Interl	Signal: Command Execution Supervision: Switching Command not executed because of field interlocking.
SG[2].CES SyncTimeout	Signal: Command Execution Supervision: Switching Command not executed. No Synchronization signal while t-sync was running.
SG[2].CES SG removed	Signal: Command Execution Supervision: Switching Command unsuccessful, Switchgear removed.
SG[2].Prot ON	Signal: ON Command issued by the Prot module
SG[2].TripCmd	Signal: Trip Command
SG[2].Ack TripCmd	Signal: Acknowledge Trip Command
SG[2].ON incl Prot ON	Signal: The ON Command includes the ON Command issued by the Protection module.
SG[2].OFF incl TripCmd	Signal: The OFF Command includes the OFF Command issued by the Protection module.
SG[2].Position Ind manipul	Signal: Position Indicators faked
SG[2].SGwear Slow SG	Signal: Alarm, the circuit breaker (load-break switch) becomes slower
SG[2].Res SGwear SI SG	Signal: Resetting the slow Switchgear Alarm
SG[2].ON Cmd	Signal: ON Command issued to the switchgear. Depending on the setting the signal may include the ON command of the Prot module.
SG[2].OFF Cmd	Signal: OFF Command issued to the switchgear. Depending on the setting the signal may include the OFF command of the Prot module.
SG[2].ON Cmd manual	Signal: ON Cmd manual
SG[2].OFF Cmd manual	Signal: OFF Cmd manual
SG[2].Sync ON request	Signal: Synchronous ON request
SG[2].Aux ON-I	Module Input State: Position indicator/check-back signal of the CB (52a)
SG[2].Aux OFF-I	Module input state: Position indicator/check-back signal of the CB (52b)
SG[2].Ready-I	Module input state: CB ready
SG[2].Sys-in-Sync-I	State of the module input: This signals has to become true within the synchronization time. If not, switching is unsuccessful.
SG[2].Removed-I	State of the module input: The withdrawable circuit breaker is Removed
SG[2].Ack TripCmd-I	State of the module input: Acknowledgement Signal (only for automatic acknowledgement) Module input signal
SG[2].Interl ON1-l	State of the module input: Interlocking of the ON command
SG[2].Interl ON2-l	State of the module input: Interlocking of the ON command
SG[2].Interl ON3-l	State of the module input: Interlocking of the ON command
SG[2].Interl OFF1-I	State of the module input: Interlocking of the OFF command
SG[2].Interl OFF2-I	State of the module input: Interlocking of the OFF command
SG[2].Interl OFF3-I	State of the module input: Interlocking of the OFF command
SG[2].SCmd ON-I	State of the module input: Switching ON Command, e.g. the state of the Logics or the state of the digital input
SG[2].SCmd OFF-I	State of the module input: Switching OFF Command, e.g. the state of the Logics or the state of the digital input
SG[2].Operations Alarm	Signal: Service Alarm, too many Operations
SG[2].lsum Intr trip: IL1	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL1
SG[2].lsum Intr trip: IL2	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL2
SG[2].lsum Intr trip: IL3	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded: IL3

Name	Description
SG[2].Isum Intr trip	Signal: Maximum permissible Summation of the interrupting (tripping) currents exceeded in at least one phase.
SG[2].Res TripCmd Cr	Signal: Resetting of the Counter: total number of trip commands
SG[2].Res Sum trip	Signal: Reset summation of the tripping currents
SG[2].WearLevel Alarm	Signal: Threshold for the Alarm
SG[2].WearLevel Lockout	Signal: Threshold for the Lockout Level
SG[2].Res SGwear Curve	Signal: Reset of the Circuit Breaker (load-break switch) Wear maintenance curve.
SG[2].lsum Intr ph Alm	Signal: Alarm, the per hour Sum (Limit) of interrupting currents has been exceeded.
SG[2].Res Isum Intr ph Alm	Signal: Reset of the Alarm, "the per hour Sum (Limit) of interrupting currents has been exceeded".
Id.active	Signal: active
Id.ExBlo	Signal: External Blocking
Id.Blo TripCmd	Signal: Trip Command blocked
Id.ExBlo TripCmd	Signal: External Blocking of the Trip Command
Id.Alarm L1	Signal: Alarm System Phase L1
Id.Alarm L2	Signal: Alarm System Phase L2
Id.Alarm L3	Signal: Alarm System L3
ld.Alarm	Signal: Alarm
Id.Trip L1	Signal: Trip System Phase L1
Id.Trip L2	Signal: Trip System Phase L2
Id.Trip L3	Signal: Trip System Phase L3
Id.Trip	Signal: Trip
Id.TripCmd	Signal: Trip Command
Id.Blo H2	Signal: Blocked by Harmonic:2
Id.Blo H4	Signal: Blocked by Harmonic:4
Id.Blo H5	Signal: Blocked by Harmonic:5
Id.H2,H4,H5 Blo	Signal: Blocked by Harmonics (Inhibit)
Id.Slope Blo	Signal: Differential protection was blocked by current transformer saturation. The tripping characteristic was lifted because of current transformer saturation.
Id.Transient	Signal: Temporary stabilization of the differential protection afterwards the transformer is being engergized.
Id.Restraining	Signal: Restraining of the differential protection by means of rising the tripping curve.
Id.Slope Blo: L1	Slope Blo: L1
Id.Slope Blo: L2	Slope Blo: L2
Id.Slope Blo: L3	Slope Blo: L3
Id.Restraining: L1	Restraining: L1
Id.Restraining: L2	Restraining: L2
Id.Restraining: L3	Restraining: L3
Id.IH2 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of second Harmonic.
Id.IH2 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of second Harmonic.
Id.IH2 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of second Harmonic.
Id.IH4 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of fourth Harmonic.

Name	Description
Id.IH4 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of fourth Harmonic.
Id.IH4 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of fourth Harmonic.
Id.IH5 Blo L1	Signal:Phase L1: Blocking of the Phase Differential Protection because of fifth Harmonic.
Id.IH5 Blo L2	Signal:Phase L2: Blocking of the Phase Differential Protection because of fifth Harmonic.
Id.IH5 Blo L3	Signal:Phase L3: Blocking of the Phase Differential Protection because of fifth Harmonic.
Id.ExBlo1-I	Module input state: External blocking1
Id.ExBlo2-I	Module input state: External blocking2
Id.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IdH.active	Signal: active
IdH.ExBlo	Signal: External Blocking
IdH.Blo TripCmd	Signal: Trip Command blocked
IdH.ExBlo TripCmd	Signal: External Blocking of the Trip Command
IdH.Alarm L1	Signal: Alarm System Phase L1
IdH.Alarm L2	Signal: Alarm System Phase L2
IdH.Alarm L3	Signal: Alarm System L3
IdH.Alarm	Signal: Alarm
IdH.Trip L1	Signal: Trip System Phase L1
IdH.Trip L2	Signal: Trip System Phase L2
IdH.Trip L3	Signal: Trip System Phase L3
IdH.Trip	Signal: Trip
IdH.TripCmd	Signal: Trip Command
IdH.ExBlo1-I	Module input state: External blocking1
IdH.ExBlo2-I	Module input state: External blocking2
IdH.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IdG[1].active	Signal: active
IdG[1].ExBlo	Signal: External Blocking
IdG[1].Blo TripCmd	Signal: Trip Command blocked
IdG[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IdG[1].Alarm	Signal: Alarm
IdG[1].Trip	Signal: Trip
IdG[1].TripCmd	Signal: Trip Command
IdG[1].ExBlo1-I	Module input state: External blocking1
IdG[1].ExBlo2-I	Module input state: External blocking2
IdG[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IdGH[1].active	Signal: active
IdGH[1].ExBlo	Signal: External Blocking
IdGH[1].Blo TripCmd	Signal: Trip Command blocked
IdGH[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IdGH[1].Alarm	Signal: Alarm
IdGH[1].Trip	Signal: Trip

Name	Description
IdGH[1].TripCmd	Signal: Trip Command
IdGH[1].ExBlo1-l	Module input state: External blocking1
IdGH[1].ExBlo2-I	Module input state: External blocking2
IdGH[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IdG[2].active	Signal: active
IdG[2].ExBlo	Signal: External Blocking
IdG[2].Blo TripCmd	Signal: Trip Command blocked
IdG[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IdG[2].Alarm	Signal: Alarm
IdG[2].Trip	Signal: Trip
IdG[2].TripCmd	Signal: Trip Command
IdG[2].ExBlo1-I	Module input state: External blocking1
IdG[2].ExBlo2-I	Module input state: External blocking2
IdG[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IdGH[2].active	Signal: active
IdGH[2].ExBlo	Signal: External Blocking
IdGH[2].Blo TripCmd	Signal: Trip Command blocked
IdGH[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IdGH[2].Alarm	Signal: Alarm
IdGH[2].Trip	Signal: Trip
IdGH[2].TripCmd	Signal: Trip Command
IdGH[2].ExBlo1-I	Module input state: External blocking1
IdGH[2].ExBlo2-I	Module input state: External blocking2
IdGH[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[1].active	Signal: active
I[1].ExBlo	Signal: External Blocking
I[1].Ex rev Interl	Signal: External reverse Interlocking
I[1].Blo TripCmd	Signal: Trip Command blocked
I[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[1].IH2 Blo	Signal: Blocking the trip command by an inrush
I[1].Alarm L1	Signal: Alarm L1
I[1].Alarm L2	Signal: Alarm L2
I[1].Alarm L3	Signal: Alarm L3
I[1].Alarm	Signal: Alarm
I[1].Trip L1	Signal: General Trip Phase L1
I[1].Trip L2	Signal: General Trip Phase L2
I[1].Trip L3	Signal: General Trip Phase L3
I[1].Trip	Signal: Trip
I[1].TripCmd	Signal: Trip Command
I[1].DefaultSet	Signal: Default Parameter Set

Name	Description
I[1].AdaptSet 1	Signal: Adaptive Parameter 1
I[1].AdaptSet 2	Signal: Adaptive Parameter 2
I[1].AdaptSet 3	Signal: Adaptive Parameter 3
I[1].AdaptSet 4	Signal: Adaptive Parameter 4
I[1].ExBlo1-I	Module input state: External blocking1
I[1].ExBlo2-I	Module input state: External blocking2
I[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[1].Ex rev Interl-I	Module input state: External reverse interlocking
I[1].AdaptSet1-I	Module input state: Adaptive Parameter1
I[1].AdaptSet2-I	Module input state: Adaptive Parameter2
I[1].AdaptSet3-I	Module input state: Adaptive Parameter3
I[1].AdaptSet4-I	Module input state: Adaptive Parameter4
I[2].active	Signal: active
I[2].ExBlo	Signal: External Blocking
I[2].Ex rev Interl	Signal: External reverse Interlocking
I[2].Blo TripCmd	Signal: Trip Command blocked
I[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[2].IH2 Blo	Signal: Blocking the trip command by an inrush
I[2].Alarm L1	Signal: Alarm L1
I[2].Alarm L2	Signal: Alarm L2
I[2].Alarm L3	Signal: Alarm L3
I[2].Alarm	Signal: Alarm
I[2].Trip L1	Signal: General Trip Phase L1
I[2].Trip L2	Signal: General Trip Phase L2
I[2].Trip L3	Signal: General Trip Phase L3
I[2].Trip	Signal: Trip
I[2].TripCmd	Signal: Trip Command
I[2].DefaultSet	Signal: Default Parameter Set
I[2].AdaptSet 1	Signal: Adaptive Parameter 1
I[2].AdaptSet 2	Signal: Adaptive Parameter 2
I[2].AdaptSet 3	Signal: Adaptive Parameter 3
I[2].AdaptSet 4	Signal: Adaptive Parameter 4
I[2].ExBlo1-I	Module input state: External blocking1
I[2].ExBlo2-I	Module input state: External blocking2
I[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[2].Ex rev Interl-I	Module input state: External reverse interlocking
I[2].AdaptSet1-I	Module input state: Adaptive Parameter1
I[2].AdaptSet2-I	Module input state: Adaptive Parameter2
I[2].AdaptSet3-I	Module input state: Adaptive Parameter3
I[2].AdaptSet4-I	Module input state: Adaptive Parameter4

Name	Description
I[3].active	Signal: active
I[3].ExBlo	Signal: External Blocking
I[3].Ex rev Interl	Signal: External reverse Interlocking
I[3].Blo TripCmd	Signal: Trip Command blocked
I[3].ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[3].IH2 Blo	Signal: Blocking the trip command by an inrush
I[3].Alarm L1	Signal: Alarm L1
I[3].Alarm L2	Signal: Alarm L2
I[3].Alarm L3	Signal: Alarm L3
I[3].Alarm	Signal: Alarm
I[3].Trip L1	Signal: General Trip Phase L1
I[3].Trip L2	Signal: General Trip Phase L2
I[3].Trip L3	Signal: General Trip Phase L3
I[3].Trip	Signal: Trip
I[3].TripCmd	Signal: Trip Command
I[3].DefaultSet	Signal: Default Parameter Set
I[3].AdaptSet 1	Signal: Adaptive Parameter 1
I[3].AdaptSet 2	Signal: Adaptive Parameter 2
I[3].AdaptSet 3	Signal: Adaptive Parameter 3
I[3].AdaptSet 4	Signal: Adaptive Parameter 4
I[3].ExBlo1-I	Module input state: External blocking1
I[3].ExBlo2-I	Module input state: External blocking2
I[3].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[3].Ex rev Interl-I	Module input state: External reverse interlocking
I[3].AdaptSet1-I	Module input state: Adaptive Parameter1
I[3].AdaptSet2-I	Module input state: Adaptive Parameter2
I[3].AdaptSet3-I	Module input state: Adaptive Parameter3
I[3].AdaptSet4-I	Module input state: Adaptive Parameter4
I[4].active	Signal: active
I[4].ExBlo	Signal: External Blocking
I[4].Ex rev Interl	Signal: External reverse Interlocking
I[4].Blo TripCmd	Signal: Trip Command blocked
I[4].ExBlo TripCmd	Signal: External Blocking of the Trip Command
I[4].IH2 Blo	Signal: Blocking the trip command by an inrush
I[4].Alarm L1	Signal: Alarm L1
I[4].Alarm L2	Signal: Alarm L2
I[4].Alarm L3	Signal: Alarm L3
I[4].Alarm	Signal: Alarm
I[4].Trip L1	Signal: General Trip Phase L1
I[4].Trip L2	Signal: General Trip Phase L2

Name	Description
I[4].Trip L3	Signal: General Trip Phase L3
I[4].Trip	Signal: Trip
I[4].TripCmd	Signal: Trip Command
I[4].DefaultSet	Signal: Default Parameter Set
I[4].AdaptSet 1	Signal: Adaptive Parameter 1
I[4].AdaptSet 2	Signal: Adaptive Parameter 2
I[4].AdaptSet 3	Signal: Adaptive Parameter 3
I[4].AdaptSet 4	Signal: Adaptive Parameter 4
I[4].ExBlo1-I	Module input state: External blocking1
I[4].ExBlo2-I	Module input state: External blocking2
I[4].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I[4].Ex rev Interl-I	Module input state: External reverse interlocking
I[4].AdaptSet1-I	Module input state: Adaptive Parameter1
I[4].AdaptSet2-I	Module input state: Adaptive Parameter2
I[4].AdaptSet3-I	Module input state: Adaptive Parameter3
I[4].AdaptSet4-I	Module input state: Adaptive Parameter4
IG[1].active	Signal: active
IG[1].ExBlo	Signal: External Blocking
IG[1].Ex rev Interl	Signal: External reverse Interlocking
IG[1].Blo TripCmd	Signal: Trip Command blocked
IG[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IG[1].Alarm	Signal: Alarm IG
IG[1].Trip	Signal: Trip
IG[1].TripCmd	Signal: Trip Command
IG[1].IGH2 Blo	Signal: blocked by an inrush
IG[1].DefaultSet	Signal: Default Parameter Set
IG[1].AdaptSet 1	Signal: Adaptive Parameter 1
IG[1].AdaptSet 2	Signal: Adaptive Parameter 2
IG[1].AdaptSet 3	Signal: Adaptive Parameter 3
IG[1].AdaptSet 4	Signal: Adaptive Parameter 4
IG[1].ExBlo1-l	Module input state: External blocking1
IG[1].ExBlo2-l	Module input state: External blocking2
IG[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IG[1].Ex rev Interl-I	Module input state: External reverse interlocking
IG[1].AdaptSet1-I	Module input state: Adaptive Parameter1
IG[1].AdaptSet2-I	Module input state: Adaptive Parameter2
IG[1].AdaptSet3-I	Module input state: Adaptive Parameter3
IG[1].AdaptSet4-I	Module input state: Adaptive Parameter4
IG[2].active	Signal: active
IG[2].ExBlo	Signal: External Blocking

Name	Description
IG[2].Ex rev Interl	Signal: External reverse Interlocking
IG[2].Blo TripCmd	Signal: Trip Command blocked
IG[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IG[2].Alarm	Signal: Alarm IG
IG[2].Trip	Signal: Trip
IG[2].TripCmd	Signal: Trip Command
IG[2].IGH2 Blo	Signal: blocked by an inrush
IG[2].DefaultSet	Signal: Default Parameter Set
IG[2].AdaptSet 1	Signal: Adaptive Parameter 1
IG[2].AdaptSet 2	Signal: Adaptive Parameter 2
IG[2].AdaptSet 3	Signal: Adaptive Parameter 3
IG[2].AdaptSet 4	Signal: Adaptive Parameter 4
IG[2].ExBlo1-l	Module input state: External blocking1
IG[2].ExBlo2-I	Module input state: External blocking2
IG[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IG[2].Ex rev Interl-I	Module input state: External reverse interlocking
IG[2].AdaptSet1-I	Module input state: Adaptive Parameter1
IG[2].AdaptSet2-I	Module input state: Adaptive Parameter2
IG[2].AdaptSet3-I	Module input state: Adaptive Parameter3
IG[2].AdaptSet4-I	Module input state: Adaptive Parameter4
IG[3].active	Signal: active
IG[3].ExBlo	Signal: External Blocking
IG[3].Ex rev Interl	Signal: External reverse Interlocking
IG[3].Blo TripCmd	Signal: Trip Command blocked
IG[3].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IG[3].Alarm	Signal: Alarm IG
IG[3].Trip	Signal: Trip
IG[3].TripCmd	Signal: Trip Command
IG[3].IGH2 Blo	Signal: blocked by an inrush
IG[3].DefaultSet	Signal: Default Parameter Set
IG[3].AdaptSet 1	Signal: Adaptive Parameter 1
IG[3].AdaptSet 2	Signal: Adaptive Parameter 2
IG[3].AdaptSet 3	Signal: Adaptive Parameter 3
IG[3].AdaptSet 4	Signal: Adaptive Parameter 4
IG[3].ExBlo1-l	Module input state: External blocking1
IG[3].ExBlo2-l	Module input state: External blocking2
IG[3].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IG[3].Ex rev Interl-I	Module input state: External reverse interlocking
IG[3].AdaptSet1-I	Module input state: Adaptive Parameter1
IG[3].AdaptSet2-I	Module input state: Adaptive Parameter2

Name	Description
IG[3].AdaptSet3-I	Module input state: Adaptive Parameter3
IG[3].AdaptSet4-I	Module input state: Adaptive Parameter4
IG[4].active	Signal: active
IG[4].ExBlo	Signal: External Blocking
IG[4].Ex rev Interl	Signal: External reverse Interlocking
IG[4].Blo TripCmd	Signal: Trip Command blocked
IG[4].ExBlo TripCmd	Signal: External Blocking of the Trip Command
IG[4].Alarm	Signal: Alarm IG
IG[4].Trip	Signal: Trip
IG[4].TripCmd	Signal: Trip Command
IG[4].IGH2 Blo	Signal: blocked by an inrush
IG[4].DefaultSet	Signal: Default Parameter Set
IG[4].AdaptSet 1	Signal: Adaptive Parameter 1
IG[4].AdaptSet 2	Signal: Adaptive Parameter 2
IG[4].AdaptSet 3	Signal: Adaptive Parameter 3
IG[4].AdaptSet 4	Signal: Adaptive Parameter 4
IG[4].ExBlo1-I	Module input state: External blocking1
IG[4].ExBlo2-I	Module input state: External blocking2
IG[4].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IG[4].Ex rev Interl-I	Module input state: External reverse interlocking
IG[4].AdaptSet1-I	Module input state: Adaptive Parameter1
IG[4].AdaptSet2-I	Module input state: Adaptive Parameter2
IG[4].AdaptSet3-I	Module input state: Adaptive Parameter3
IG[4].AdaptSet4-I	Module input state: Adaptive Parameter4
ThR.active	Signal: active
ThR.ExBlo	Signal: External Blocking
ThR.Blo TripCmd	Signal: Trip Command blocked
ThR.ExBlo TripCmd	Signal: External Blocking of the Trip Command
ThR.Alarm	Signal: Alarm Thermal Overload
ThR.Trip	Signal: Trip
ThR.TripCmd	Signal: Trip Command
ThR.Res Thermal Cap	Signal: Resetting Thermal Replica
ThR.ExBlo1-I	Module input state: External blocking1
ThR.ExBlo2-I	Module input state: External blocking2
ThR.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
I2>[1].active	Signal: active
I2>[1].ExBlo	Signal: External Blocking
I2>[1].Blo TripCmd	Signal: Trip Command blocked
I2>[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
12>[1].Alarm	Signal: Alarm Negative Sequence

Name	Description
12>[1].Trip	Signal: Trip
I2>[1].TripCmd	Signal: Trip Command
12>[1].ExBlo1-l	Module input state: External blocking1
12>[1].ExBlo2-l	Module input state: External blocking2
I2>[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
12>[2].active	Signal: active
12>[2].ExBlo	Signal: External Blocking
I2>[2].Blo TripCmd	Signal: Trip Command blocked
I2>[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
12>[2].Alarm	Signal: Alarm Negative Sequence
12>[2].Trip	Signal: Trip
I2>[2].TripCmd	Signal: Trip Command
12>[2].ExBlo1-l	Module input state: External blocking1
I2>[2].ExBlo2-I	Module input state: External blocking2
I2>[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
IH2[1].active	Signal: active
IH2[1].ExBlo	Signal: External Blocking
IH2[1].Blo L1	Signal: Blocked L1
IH2[1].Blo L2	Signal: Blocked L2
IH2[1].Blo L3	Signal: Blocked L3
IH2[1].Blo IG meas	Signal: Blocking of the ground (earth) protection module (measured ground current)
IH2[1].Blo IG calc	Signal: Blocking of the ground (earth) protection module (calculated ground current)
IH2[1].3-ph Blo	Signal: Inrush was detected in at least one phase - trip command blocked.
IH2[1].ExBlo1-I	Module input state: External blocking1
IH2[1].ExBlo2-I	Module input state: External blocking2
IH2[2].active	Signal: active
IH2[2].ExBlo	Signal: External Blocking
IH2[2].Blo L1	Signal: Blocked L1
IH2[2].Blo L2	Signal: Blocked L2
IH2[2].Blo L3	Signal: Blocked L3
IH2[2].Blo IG meas	Signal: Blocking of the ground (earth) protection module (measured ground current)
IH2[2].Blo IG calc	Signal: Blocking of the ground (earth) protection module (calculated ground current)
IH2[2].3-ph Blo	Signal: Inrush was detected in at least one phase - trip command blocked.
IH2[2].ExBlo1-I	Module input state: External blocking1
IH2[2].ExBlo2-I	Module input state: External blocking2
ExP[1].active	Signal: active
ExP[1].ExBlo	Signal: External Blocking
ExP[1].Blo TripCmd	Signal: Trip Command blocked
ExP[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
ExP[1].Alarm	Signal: Alarm

Name	Description
ExP[1].Trip	Signal: Trip
ExP[1].TripCmd	Signal: Trip Command
ExP[1].ExBlo1-l	Module input state: External blocking1
ExP[1].ExBlo2-l	Module input state: External blocking2
ExP[1].ExBlo TripCmd-l	Module input state: External Blocking of the Trip Command
ExP[1].Alarm-l	Module input state: Alarm
ExP[1].Trip-I	Module input state: Trip
ExP[2].active	Signal: active
ExP[2].ExBlo	Signal: External Blocking
ExP[2].Blo TripCmd	Signal: Trip Command blocked
ExP[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
ExP[2].Alarm	Signal: Alarm
ExP[2].Trip	Signal: Trip
ExP[2].TripCmd	Signal: Trip Command
ExP[2].ExBlo1-l	Module input state: External blocking1
ExP[2].ExBlo2-l	Module input state: External blocking2
ExP[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
ExP[2].Alarm-I	Module input state: Alarm
ExP[2].Trip-I	Module input state: Trip
ExP[3].active	Signal: active
ExP[3].ExBlo	Signal: External Blocking
ExP[3].Blo TripCmd	Signal: Trip Command blocked
ExP[3].ExBlo TripCmd	Signal: External Blocking of the Trip Command
ExP[3].Alarm	Signal: Alarm
ExP[3].Trip	Signal: Trip
ExP[3].TripCmd	Signal: Trip Command
ExP[3].ExBlo1-l	Module input state: External blocking1
ExP[3].ExBlo2-l	Module input state: External blocking2
ExP[3].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
ExP[3].Alarm-I	Module input state: Alarm
ExP[3].Trip-I	Module input state: Trip
ExP[4].active	Signal: active
ExP[4].ExBlo	Signal: External Blocking
ExP[4].Blo TripCmd	Signal: Trip Command blocked
ExP[4].ExBlo TripCmd	Signal: External Blocking of the Trip Command
ExP[4].Alarm	Signal: Alarm
ExP[4].Trip	Signal: Trip
ExP[4].TripCmd	Signal: Trip Command
ExP[4].ExBlo1-l	Module input state: External blocking1
ExP[4].ExBlo2-l	Module input state: External blocking2

Name	Description
ExP[4].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
ExP[4].Alarm-I	Module input state: Alarm
ExP[4].Trip-I	Module input state: Trip
Ext Sudd Press.active	Signal: active
Ext Sudd Press.ExBlo	Signal: External Blocking
Ext Sudd Press.Blo TripCmd	Signal: Trip Command blocked
Ext Sudd Press.ExBlo TripCmd	Signal: External Blocking of the Trip Command
Ext Sudd Press.Alarm	Signal: Alarm
Ext Sudd Press.Trip	Signal: Trip
Ext Sudd Press.TripCmd	Signal: Trip Command
Ext Sudd Press.ExBlo1-I	Module input state: External blocking1
Ext Sudd Press.ExBlo2-I	Module input state: External blocking2
Ext Sudd Press.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ext Sudd Press.Alarm-I	Module input state: Alarm
Ext Sudd Press.Trip-I	Module input state: Trip
Ex Oil Temp.active	Signal: active
Ex Oil Temp.ExBlo	Signal: External Blocking
Ex Oil Temp.Blo TripCmd	Signal: Trip Command blocked
Ex Oil Temp.ExBlo TripCmd	Signal: External Blocking of the Trip Command
Ex Oil Temp.Alarm	Signal: Alarm
Ex Oil Temp.Trip	Signal: Trip
Ex Oil Temp.TripCmd	Signal: Trip Command
Ex Oil Temp.ExBlo1-I	Module input state: External blocking1
Ex Oil Temp.ExBlo2-I	Module input state: External blocking2
Ex Oil Temp.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ex Oil Temp.Alarm-I	Module input state: Alarm
Ex Oil Temp.Trip-I	Module input state: Trip
Ext Temp Superv[1].active	Signal: active
Ext Temp Superv[1].ExBlo	Signal: External Blocking
Ext Temp Superv[1].Blo TripCmd	Signal: Trip Command blocked
Ext Temp Superv[1].ExBlo TripCmd	Signal: External Blocking of the Trip Command
Ext Temp Superv[1].Alarm	Signal: Alarm
Ext Temp Superv[1].Trip	Signal: Trip
Ext Temp Superv[1].TripCmd	Signal: Trip Command
Ext Temp Superv[1].ExBlo1-I	Module input state: External blocking1
Ext Temp Superv[1].ExBlo2-I	Module input state: External blocking2

Name	Description
Ext Temp Superv[1].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ext Temp Superv[1].Alarm-I	Module input state: Alarm
Ext Temp Superv[1].Trip-I	Module input state: Trip
Ext Temp Superv[2].active	Signal: active
Ext Temp Superv[2].ExBlo	Signal: External Blocking
Ext Temp Superv[2].Blo TripCmd	Signal: Trip Command blocked
Ext Temp Superv[2].ExBlo TripCmd	Signal: External Blocking of the Trip Command
Ext Temp Superv[2].Alarm	Signal: Alarm
Ext Temp Superv[2].Trip	Signal: Trip
Ext Temp Superv[2].TripCmd	Signal: Trip Command
Ext Temp Superv[2].ExBlo1-I	Module input state: External blocking1
Ext Temp Superv[2].ExBlo2-I	Module input state: External blocking2
Ext Temp Superv[2].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ext Temp Superv[2].Alarm-I	Module input state: Alarm
Ext Temp Superv[2].Trip-I	Module input state: Trip
Ext Temp Superv[3].active	Signal: active
Ext Temp Superv[3].ExBlo	Signal: External Blocking
Ext Temp Superv[3].Blo TripCmd	Signal: Trip Command blocked
Ext Temp Superv[3].ExBlo TripCmd	Signal: External Blocking of the Trip Command
Ext Temp Superv[3].Alarm	Signal: Alarm
Ext Temp Superv[3].Trip	Signal: Trip
Ext Temp Superv[3].TripCmd	Signal: Trip Command
Ext Temp Superv[3].ExBlo1-I	Module input state: External blocking1
Ext Temp Superv[3].ExBlo2-I	Module input state: External blocking2
Ext Temp Superv[3].ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
Ext Temp Superv[3].Alarm-I	Module input state: Alarm
Ext Temp Superv[3].Trip-I	Module input state: Trip
URTD.W1L1 Superv	Signal: Supervision Channel Winding1 Phase L1
URTD.W1L2 Superv	Signal: Supervision Channel Winding1 Phase L2
URTD.W1L3 Superv	Signal: Supervision Channel Winding1 Phase L3
URTD.W2L1 Superv	Signal: Supervision Channel Winding2 Phase L1
URTD.W2L2 Superv	Signal: Supervision Channel Winding2 Phase L2
URTD.W2L3 Superv	Signal: Supervision Channel Winding2 Phase L3
URTD.Amb1 Superv	Signal: Supervision Channel Ambient1
URTD.Amb2 Superv	Signal: Supervision Channel Ambient2

Name	Description
URTD.Aux1 Superv	Signal: Supervision Channel Auxiliary1
URTD.Aux2 Superv	Signal: Supervision Channel Auxiliary2
URTD.Aux3 Superv	Signal: Supervision Channel Auxiliary3
URTD.Aux4 Superv	Signal: Supervision Channel Auxiliary4
URTD.Superv	Signal: URTD Supervision Channel
URTD.active	Signal: URTD active
URTD.Outs forced	Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.
RTD.active	Signal: active
RTD.ExBlo	Signal: External Blocking
RTD.Blo TripCmd	Signal: Trip Command blocked
RTD.ExBlo TripCmd	Signal: External Blocking of the Trip Command
RTD.Alarm	Alarm RTD Temperature Protection
RTD.Trip	Signal: Trip
RTD.TripCmd	Signal: Trip Command
RTD.W1L1 Trip	Winding1 Phase L1 Signal: Trip
RTD.W1L1 Alarm	Winding1 Phase L1 Alarm RTD Temperature Protection
RTD.W1L1 Timeout Alarm	Winding1 Phase L1 Timeout Alarm
RTD.W1L1 Invalid	Winding1 Phase L1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.W1L2 Trip	Winding1 Phase L2 Signal: Trip
RTD.W1L2 Alarm	Winding1 Phase L2 Alarm RTD Temperature Protection
RTD.W1L2 Timeout Alarm	Winding1 Phase L2 Timeout Alarm
RTD.W1L2 Invalid	Winding1 Phase L2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.W1L3 Trip	Winding1 Phase L3 Signal: Trip
RTD.W1L3 Alarm	Winding1 Phase L3 Alarm RTD Temperature Protection
RTD.W1L3 Timeout Alarm	Winding1 Phase L3 Timeout Alarm
RTD.W1L3 Invalid	Winding1 Phase L3 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.W2L1 Trip	Winding2 Phase L1 Signal: Trip
RTD.W2L1 Alarm	Winding2 Phase L1 Alarm RTD Temperature Protection
RTD.W2L1 Timeout Alarm	Winding2 Phase L1 Timeout Alarm
RTD.W2L1 Invalid	Winding2 Phase L1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.W2L2 Trip	Winding2 Phase L2 Signal: Trip
RTD.W2L2 Alarm	Winding2 Phase L2 Alarm RTD Temperature Protection
RTD.W2L2 Timeout Alarm	Winding2 Phase L2 Timeout Alarm
RTD.W2L2 Invalid	Winding2 Phase L2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.W2L3 Trip	Winding2 Phase L3 Signal: Trip
RTD.W2L3 Alarm	Winding2 Phase L3 Alarm RTD Temperature Protection

Name	Description
RTD.W2L3 Timeout Alarm	Winding2 Phase L3 Timeout Alarm
RTD.W2L3 Invalid	Winding2 Phase L3 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Amb 1 Trip	Ambient 1 Signal: Trip
RTD.Amb 1 Alarm	Ambient 1 Alarm RTD Temperature Protection
RTD.Amb 1 Timeout Alarm	Ambient 1 Timeout Alarm
RTD.Amb 1 Invalid	Ambient 1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Amb 2 Trip	Ambient 2 Signal: Trip
RTD.Amb 2 Alarm	Ambient 2 Alarm RTD Temperature Protection
RTD.Amb 2 Timeout Alarm	Ambient 2 Timeout Alarm
RTD.Amb 2 Invalid	Ambient 2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Aux 1 Trip	Auxiliary 1 Signal: Trip
RTD.Aux 1 Alarm	Auxiliary 1 Alarm RTD Temperature Protection
RTD.Aux 1 Timeout Alarm	Auxiliary 1 Timeout Alarm
RTD.Aux 1 Invalid	Auxiliary 1 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Aux 2 Trip	Auxiliary 2 Signal: Trip
RTD.Aux 2 Alarm	Auxiliary 2 Alarm RTD Temperature Protection
RTD.Aux 2 Timeout Alarm	Auxiliary 2 Timeout Alarm
RTD.Aux 2 Invalid	Auxiliary 2 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Aux 3 Trip	Auxiliary 3 Signal: Trip
RTD.Aux 3 Alarm	Auxiliary 3 Alarm RTD Temperature Protection
RTD.Aux 3 Timeout Alarm	Auxiliary 3 Timeout Alarm
RTD.Aux 3 Invalid	Auxiliary 4 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Aux4 Trip	Auxiliary 4 Signal: Trip
RTD.Aux4 Alarm	Auxiliary 4 Alarm RTD Temperature Protection
RTD.Aux4 Timeout Alarm	Auxiliary 4 Timeout Alarm
RTD.Aux4 Invalid	Auxiliary 4 Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Trip WD W1 Group	Trip all Windings of group W1
RTD.Alarm WD W1 Group	Alarm all Windings of group W1
RTD.TimeoutAlmWDW1Grp	Timeout Alarm of group W1
RTD.Windg W1 Group Invalid	Winding W1 Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Trip WD W2 Group	Trip all Windings of group W2
RTD.Alarm WD W2 Group	Alarm all Windings of group W2
RTD.TimeoutAlmWDW2Grp	Timeout Alarm of group W2
RTD.Windg W2 Group Invalid	Winding W2 Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)

Name	Description
RTD.Trip Amb Group	Trip all Windings of group Ambient
RTD.Alarm Amb Group	Alarm all Windings of group Ambient
RTD.TimeoutAlmAmbGrp	Timeout Alarm of group Ambient
RTD.Amb Group Invalid	Ambient Group Signal: Invalid Temperature Measurement Value (e.g caused by an defective or interrupted RTD Measurement)
RTD.Trip Any Group	Trip Any Group
RTD.Alarm Any Group	Alarm Any Group
RTD.TimeoutAlmAnyGrp	Timeout Alarm Any Group
RTD.Trip Group 1	Trip Group 1
RTD.Trip Group 2	Trip Group 2
RTD.Timeout Alarm	Alarm timeout expired
RTD.Trip Aux Group	Trip Auxiliary Group
RTD.Alarm Aux Group	Alarm Auxiliary Group
RTD.TimeoutAlmAuxGrp	Timeout Alarm Auxiliary Group
RTD.AuxGrpInvalid	Invalid Auxiliary Group
RTD.ExBlo1-I	Module input state: External blocking1
RTD.ExBlo2-I	Module input state: External blocking2
RTD.ExBlo TripCmd-I	Module input state: External Blocking of the Trip Command
SOTF.active	Signal: active
SOTF.ExBlo	Signal: External Blocking
SOTF.Ex rev Interl	Signal: External reverse Interlocking
SOTF.enabled	Signal: Switch Onto Fault enabled. This Signal can be used to modify Overcurrent Protection Settings.
SOTF.I<	Signal: No Load Current.
SOTF.ExBlo1-I	Module input state: External blocking
SOTF.ExBlo2-I	Module input state: External blocking
SOTF.Ex rev Interl-I	Module input state: External reverse interlocking
SOTF.Ext SOTF-I	Module input state: External Switch Onto Fault Alarm
CLPU.active	Signal: active
CLPU.ExBlo	Signal: External Blocking
CLPU.Ex rev Interl	Signal: External reverse Interlocking
CLPU.enabled	Signal: Cold Load enabled
CLPU.detected	Signal: Cold Load detected
CLPU.I<	Signal: No Load Current.
CLPU.Load Inrush	Signal: Load Inrush
CLPU.Settle Time	Signal: Settle Time
CLPU.ExBlo1-I	Module input state: External blocking
CLPU.ExBlo2-I	Module input state: External blocking
CLPU.Ex rev Interl-I	Module input state: External reverse interlocking
CBF[1].active	Signal: active
CBF[1].ExBlo	Signal: External Blocking

Name	Description
CBF[1].Waiting for Trigger	Waiting for Trigger
CBF[1].running	Signal: CBF-Module started
CBF[1].Alarm	Signal: Circuit Breaker Failure
CBF[1].Lockout	Signal: Lockout
CBF[1].Res Lockout	Signal: Reset Lockout
CBF[1].ExBlo1-I	Module input state: External blocking1
CBF[1].ExBlo2-l	Module input state: External blocking2
CBF[1].Trigger1-I	Module Input: Trigger that will start the CBF
CBF[1].Trigger2-I	Module Input: Trigger that will start the CBF
CBF[1].Trigger3-I	Module Input: Trigger that will start the CBF
CBF[2].active	Signal: active
CBF[2].ExBlo	Signal: External Blocking
CBF[2].Waiting for Trigger	Waiting for Trigger
CBF[2].running	Signal: CBF-Module started
CBF[2].Alarm	Signal: Circuit Breaker Failure
CBF[2].Lockout	Signal: Lockout
CBF[2].Res Lockout	Signal: Reset Lockout
CBF[2].ExBlo1-I	Module input state: External blocking1
CBF[2].ExBlo2-I	Module input state: External blocking2
CBF[2].Trigger1-I	Module Input: Trigger that will start the CBF
CBF[2].Trigger2-I	Module Input: Trigger that will start the CBF
CBF[2].Trigger3-I	Module Input: Trigger that will start the CBF
TCS[1].active	Signal: active
TCS[1].ExBlo	Signal: External Blocking
TCS[1].Alarm	Signal: Alarm Trip Circuit Supervision
TCS[1].Not Possible	Not possible because no state indicator assigned to the breaker.
TCS[1].Aux ON-I	Module Input State: Position indicator/check-back signal of the CB (52a)
TCS[1].Aux OFF-I	Module input state: Position indicator/check-back signal of the CB (52b)
TCS[1].ExBlo1-I	Module input state: External blocking1
TCS[1].ExBlo2-l	Module input state: External blocking2
TCS[2].active	Signal: active
TCS[2].ExBlo	Signal: External Blocking
TCS[2].Alarm	Signal: Alarm Trip Circuit Supervision
TCS[2].Not Possible	Not possible because no state indicator assigned to the breaker.
TCS[2].Aux ON-I	Module Input State: Position indicator/check-back signal of the CB (52a)
TCS[2].Aux OFF-I	Module input state: Position indicator/check-back signal of the CB (52b)
TCS[2].ExBlo1-l	Module input state: External blocking1
TCS[2].ExBlo2-l	Module input state: External blocking2
CTS[1].active	Signal: active
CTS[1].ExBlo	Signal: External Blocking

Name	Description
CTS[1].Alarm	Signal: Alarm Current Transformer Measuring Circuit Supervision
CTS[1].ExBlo1-l	Module input state: External blocking1
CTS[1].ExBlo2-l	Module input state: External blocking2
CTS[2].active	Signal: active
CTS[2].ExBlo	Signal: External Blocking
CTS[2].Alarm	Signal: Alarm Current Transformer Measuring Circuit Supervision
CTS[2].ExBlo1-l	Module input state: External blocking1
CTS[2].ExBlo2-l	Module input state: External blocking2
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
BO Slot X2.BO 1	Signal: Binary Output Relay
BO Slot X2.BO 2	Signal: Binary Output Relay
BO Slot X2.BO 3	Signal: Binary Output Relay
BO Slot X2.BO 4	Signal: Binary Output Relay
BO Slot X2.BO 5	Signal: Binary Output Relay
BO Slot X2.BO 6	Signal: Binary Output Relay
BO Slot X2.DISARMED!	Signal: CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Self Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance
BO Slot X2.Outs forced	Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.
BO Slot X5.BO 1	Signal: Binary Output Relay
BO Slot X5.BO 2	Signal: Binary Output Relay
BO Slot X5.BO 3	Signal: Binary Output Relay
BO Slot X5.BO 4	Signal: Binary Output Relay
BO Slot X5.BO 5	Signal: Binary Output Relay
BO Slot X5.BO 6	Signal: Binary Output Relay

Name	Description
BO Slot X5.DISARMED!	Signal: CAUTION! RELAYS DISARMED in order to safely perform maintenance while eliminating the risk of taking an entire process off-line. (Note: The Self Supervision Contact cannot be disarmed). YOU MUST ENSURE that the relays are ARMED AGAIN after maintenance
BO Slot X5.Outs forced	Signal: The State of at least one Relay Output has been set by force. That means that the state of at least one Relay is forced and hence does not show the state of the assigned signals.
Event rec.Res all records	Signal: All records deleted
Disturb rec.recording	Signal: Recording
Disturb rec.memory full	Signal: Memory full
Disturb rec.Clear fail	Signal: Clear failure in memory
Disturb rec.Res all records	Signal: All records deleted
Disturb rec.Res rec	Signal: Delete record
Disturb rec.Man Trigger	Signal: Manual Trigger
Disturb rec.Start1-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start2-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start3-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start4-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start5-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start6-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start7-I	State of the module input:: Trigger event / start recording if:
Disturb rec.Start8-I	State of the module input:: Trigger event / start recording if:
Fault rec.Res rec	Signal: Delete record
Fault rec.Man Trigger	Signal: Manual Trigger
Fault rec.Start1-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start2-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start3-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start4-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start5-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start6-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start7-I	State of the module input:: Trigger event / start recording if:
Fault rec.Start8-I	State of the module input:: Trigger event / start recording if:
Trend rec.Hand Reset	Hand Reset
Modbus.Transmission	Signal: SCADA active
Modbus.Scada Cmd 1	Scada Command
Modbus.Scada Cmd 2	Scada Command
Modbus.Scada Cmd 3	Scada Command
Modbus.Scada Cmd 4	Scada Command
Modbus.Scada Cmd 5	Scada Command
Modbus.Scada Cmd 6	Scada Command
Modbus.Scada Cmd 7	Scada Command
Modbus.Scada Cmd 8	Scada Command
Modbus.Scada Cmd 9	Scada Command

Name	Description
Modbus.Scada Cmd 10	Scada Command
Modbus.Scada Cmd 11	Scada Command
Modbus.Scada Cmd 12	Scada Command
Modbus.Scada Cmd 13	Scada Command
Modbus.Scada Cmd 14	Scada Command
Modbus.Scada Cmd 15	Scada Command
Modbus.Scada Cmd 16	Scada Command
IEC61850.VirtInp1	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp2	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp3	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp4	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp5	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp6	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp7	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp8	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp9	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp10	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp11	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp12	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp13	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp14	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp15	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp16	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp17	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp18	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp19	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp20	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp21	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp22	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp23	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp24	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp25	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp26	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp27	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp28	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp29	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp30	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp31	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtInp32	Signal: Virtual Input (IEC61850 GGIO Ind)
IEC61850.VirtOut1-I	Module input state: Binary state of the Virtual Output (GGIO)

Name	Description
IEC61850.VirtOut2-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut3-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut4-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut5-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut6-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut7-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut8-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut9-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut10-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut11-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut12-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut13-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut14-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut15-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut16-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut17-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut18-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut19-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut20-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut21-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut22-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut23-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut24-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut25-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut26-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut27-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut28-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut29-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut30-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut31-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC61850.VirtOut32-I	Module input state: Binary state of the Virtual Output (GGIO)
IEC 103.Scada Cmd 1	Scada Command
IEC 103.Scada Cmd 2	Scada Command
IEC 103.Scada Cmd 3	Scada Command
IEC 103.Scada Cmd 4	Scada Command
IEC 103.Scada Cmd 5	Scada Command
IEC 103.Scada Cmd 6	Scada Command
IEC 103.Scada Cmd 7	Scada Command
IEC 103.Scada Cmd 8	Scada Command
IEC 103.Scada Cmd 9	Scada Command

Name	Description
IEC 103.Scada Cmd 10	Scada Command
IEC 103.Transmission	Signal: SCADA active
IEC 103.Fail phy Interf	Failure in the physical interface
IEC 103.Failure Event lost	Failure event lost
Profibus.Data OK	Data within the Input field are OK (Yes=1)
Profibus.SubModul Err	Assignable Signal, Failure in Sub-Module, Communication Failure.
Profibus.Connection active	Connection active
Profibus.Scada Cmd 1	Scada Command
Profibus.Scada Cmd 2	Scada Command
Profibus.Scada Cmd 3	Scada Command
Profibus.Scada Cmd 4	Scada Command
Profibus.Scada Cmd 5	Scada Command
Profibus.Scada Cmd 6	Scada Command
Profibus.Scada Cmd 7	Scada Command
Profibus.Scada Cmd 8	Scada Command
Profibus.Scada Cmd 9	Scada Command
Profibus.Scada Cmd 10	Scada Command
Profibus.Scada Cmd 11	Scada Command
Profibus.Scada Cmd 12	Scada Command
Profibus.Scada Cmd 13	Scada Command
Profibus.Scada Cmd 14	Scada Command
Profibus.Scada Cmd 15	Scada Command
Profibus.Scada Cmd 16	Scada Command
IRIG-B.active	Signal: active
IRIG-B.inverted	Signal: IRIG-B inverted
IRIG-B.Control Signal1	Signal: IRIG-B Control Signal
IRIG-B.Control Signal2	Signal: IRIG-B Control Signal
IRIG-B.Control Signal4	Signal: IRIG-B Control Signal
IRIG-B.Control Signal5	Signal: IRIG-B Control Signal
IRIG-B.Control Signal6	Signal: IRIG-B Control Signal
IRIG-B.Control Signal7	Signal: IRIG-B Control Signal
IRIG-B.Control Signal8	Signal: IRIG-B Control Signal
IRIG-B.Control Signal9	Signal: IRIG-B Control Signal
IRIG-B.Control Signal10	Signal: IRIG-B Control Signal
IRIG-B.Control Signal11	Signal: IRIG-B Control Signal
IRIG-B.Control Signal12	Signal: IRIG-B Control Signal
IRIG-B.Control Signal13	Signal: IRIG-B Control Signal
IRIG-B.Control Signal14	Signal: IRIG-B Control Signal
IRIG-B.Control Signal15	Signal: IRIG-B Control Signal
IRIG-B.Control Signal16	Signal: IRIG-B Control Signal

Name	Description
IRIG-B.Control Signal17	Signal: IRIG-B Control Signal
IRIG-B.Control Signal18	Signal: IRIG-B Control Signal
SNTP.SNTP active	Signal: If there is no valid SNTP signal for 120 sec, SNTP is regarded as inactive.
Statistics.ResFc all	Signal: Resetting of all Statistic values (Current Demand, Power Demand, Min, Max)
Statistics.ResFc I Demand	Signal: Resetting of Statistics - Current Demand (avg, peak avg)
Statistics.ResFc Max	Signal: Resetting of all Maximum values
Statistics.ResFc Min	Signal: Resetting of all Minimum values
Statistics.StartFc I Demand-I	State of the module input: Start of the Statistics of the Current Demand
SysA.active	Signal: active
SysA.ExBlo	Signal: External Blocking
SysA.Alm Current Demd	Signal: Alarm averaged demand current
SysA.Alarm I THD	Signal: Alarm Total Harmonic Distortion Current
SysA.Trip Current Demand	Signal: Trip averaged demand current
SysA.Trip I THD	Signal: Trip Total Harmonic Distortion Current
SysA.ExBlo-I	Module input state: External blocking
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE1.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE1.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE1.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE1.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE1.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE2.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE2.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE2.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE2.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE3.Gate Out	Signal: Output of the logic gate
Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE3.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE3.Gate In3-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE3.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE3.Reset Latch-l	State of the module input: Reset Signal for the Latching
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE4.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE4.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE4.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE4.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE5.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE5.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE5.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE5.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE5.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE6.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE6.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE6.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE6.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE6.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE7.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE7.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE7.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE7.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output

Name	Description
Logics.LE8.Out	Signal: Latched Output (Q)
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE8.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE8.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE8.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE8.Reset Latch-l	State of the module input: Reset Signal for the Latching
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE9.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE9.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE9.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE9.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE10.Gate Out	Signal: Output of the logic gate
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE10.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE10.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE10.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE10.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE11.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE11.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE11.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE11.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE12.Gate In2-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE12.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE12.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE12.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output
Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE13.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE13.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE13.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE13.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE14.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE14.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE14.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE14.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE15.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE15.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE15.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE15.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE15.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE16.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE16.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE16.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE16.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE16.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE17.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE17.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE17.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE17.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE17.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE18.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE18.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE18.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE18.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE19.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE19.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE19.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE19.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE20.Gate Out	Signal: Output of the logic gate
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE20.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE20.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE20.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE20.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate In1-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE21.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE21.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE21.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE21.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE22.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE22.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE22.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE22.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)
Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE23.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE23.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE23.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE23.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE24.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE24.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE24.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE24.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE25.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE25.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE25.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE25.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE25.Reset Latch-I	State of the module input: Reset Signal for the Latching

Name	Description
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE26.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE26.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE26.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE26.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE26.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE27.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE27.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE27.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE27.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE28.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE28.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE28.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE28.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE29.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE29.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE29.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE29.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE30.Gate Out	Signal: Output of the logic gate
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE30.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE30.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE30.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE30.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE30.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE31.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE31.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE31.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE31.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE32.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE32.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE32.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE32.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE33.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE33.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE33.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE33.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE34.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE34.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE34.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE34.Gate In4-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE34.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE35.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE35.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE35.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE35.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE35.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE36.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE36.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE36.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE36.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE36.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE37.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE37.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE37.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE37.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE38.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE38.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE38.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE38.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE39.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE39.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE39.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE39.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE40.Gate Out	Signal: Output of the logic gate
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE40.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE40.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE40.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE40.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE41.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE41.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE41.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE41.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE42.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE42.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE42.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE42.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE43.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE43.Gate In3-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE43.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE43.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE44.Gate Out	Signal: Output of the logic gate
Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE44.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE44.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE44.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE44.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE45.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE45.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE45.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE45.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE45.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE46.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE46.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE46.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE46.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE46.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE47.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE47.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE47.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE47.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output

Name	Description
Logics.LE48.Out	Signal: Latched Output (Q)
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE48.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE48.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE48.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE48.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE49.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE49.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE49.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE49.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE50.Gate Out	Signal: Output of the logic gate
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE50.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE50.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE50.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE50.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE51.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE51.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE51.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE51.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE52.Gate In2-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE52.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE52.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE52.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE53.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE53.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE53.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE53.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE54.Gate Out	Signal: Output of the logic gate
Logics.LE54.Timer Out	Signal: Timer Output
Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE54.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE54.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE54.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE54.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE55.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE55.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE55.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE55.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE55.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE56.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE56.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE56.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE56.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE56.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE57.Gate Out	Signal: Output of the logic gate

Name	Description
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE57.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE57.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE57.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE57.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE58.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE58.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE58.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE58.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE59.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE59.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE59.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE59.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE60.Gate Out	Signal: Output of the logic gate
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE60.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE60.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE60.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE60.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate In1-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE61.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE61.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE61.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE61.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE62.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE62.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE62.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE62.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE63.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE63.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE63.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE63.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)
Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE64.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE64.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE64.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE64.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE65.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE65.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE65.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE65.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE65.Reset Latch-I	State of the module input: Reset Signal for the Latching

Name	Description
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE66.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE66.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE66.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE66.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE66.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE67.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE67.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE67.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE67.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)
Logics.LE68.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE68.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE68.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE68.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE68.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE69.Gate Out	Signal: Output of the logic gate
Logics.LE69.Timer Out	Signal: Timer Output
Logics.LE69.Out	Signal: Latched Output (Q)
Logics.LE69.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE69.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE69.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE69.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE69.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE69.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE70.Gate Out	Signal: Output of the logic gate
Logics.LE70.Timer Out	Signal: Timer Output
Logics.LE70.Out	Signal: Latched Output (Q)
Logics.LE70.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE70.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE70.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE70.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE70.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE70.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE71.Gate Out	Signal: Output of the logic gate
Logics.LE71.Timer Out	Signal: Timer Output
Logics.LE71.Out	Signal: Latched Output (Q)
Logics.LE71.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE71.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE71.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE71.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE71.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE71.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE72.Gate Out	Signal: Output of the logic gate
Logics.LE72.Timer Out	Signal: Timer Output
Logics.LE72.Out	Signal: Latched Output (Q)
Logics.LE72.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE72.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE72.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE72.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE72.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE72.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE73.Gate Out	Signal: Output of the logic gate
Logics.LE73.Timer Out	Signal: Timer Output
Logics.LE73.Out	Signal: Latched Output (Q)
Logics.LE73.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE73.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE73.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE73.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE73.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE73.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE74.Gate Out	Signal: Output of the logic gate
Logics.LE74.Timer Out	Signal: Timer Output
Logics.LE74.Out	Signal: Latched Output (Q)
Logics.LE74.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE74.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE74.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE74.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE74.Gate In4-I	State of the module input: Assignment of the Input Signal

Name	Description
Logics.LE74.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE75.Gate Out	Signal: Output of the logic gate
Logics.LE75.Timer Out	Signal: Timer Output
Logics.LE75.Out	Signal: Latched Output (Q)
Logics.LE75.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE75.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE75.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE75.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE75.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE75.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE76.Gate Out	Signal: Output of the logic gate
Logics.LE76.Timer Out	Signal: Timer Output
Logics.LE76.Out	Signal: Latched Output (Q)
Logics.LE76.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE76.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE76.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE76.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE76.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE76.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE77.Gate Out	Signal: Output of the logic gate
Logics.LE77.Timer Out	Signal: Timer Output
Logics.LE77.Out	Signal: Latched Output (Q)
Logics.LE77.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE77.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE77.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE77.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE77.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE77.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE78.Gate Out	Signal: Output of the logic gate
Logics.LE78.Timer Out	Signal: Timer Output
Logics.LE78.Out	Signal: Latched Output (Q)
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE78.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE78.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE78.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE78.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE78.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)

Name	Description
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE79.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE79.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE79.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE79.Reset Latch-I	State of the module input: Reset Signal for the Latching
Logics.LE80.Gate Out	Signal: Output of the logic gate
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate In1-I	State of the module input: Assignment of the Input Signal
Logics.LE80.Gate In2-I	State of the module input: Assignment of the Input Signal
Logics.LE80.Gate In3-I	State of the module input: Assignment of the Input Signal
Logics.LE80.Gate In4-I	State of the module input: Assignment of the Input Signal
Logics.LE80.Reset Latch-I	State of the module input: Reset Signal for the Latching
Sgen.Running	Signal; Measuring value simulation is running
Sgen.Ex Start Simulation-I	State of the module input:External Start of Fault Simulation (Using the test parameters)
Sgen.ExBlo	Module input state: External blocking
Sgen.Ex ForcePost-I	State of the module input:Force Post state. Abort simulation.
Sys.PS 1	Signal: Parameter Set 1
Sys.PS 2	Signal: Parameter Set 2
Sys.PS 3	Signal: Parameter Set 3
Sys.PS 4	Signal: Parameter Set 4
Sys.PSS manual	Signal: Manual Switch over of a Parameter Set
Sys.PSS via Scada	Signal: Parameter Set Switch via Scada
Sys.PSS via Inp fct	Signal: Parameter Set Switch via input function
Sys.min 1 param changed	Signal: At least one parameter has been changed
Sys.Setting Lock Bypass	Signal: Short-period unlock of the Setting Lock
Sys.Ack LED	Signal: LEDs acknowledgement
Sys.Ack BO	Signal: Acknowledgement of the Binary Outputs
Sys.Ack Scada	Signal: Acknowledge Scada
Sys.Ack TripCmd	Signal: Reset Trip Command
Sys.Ack LED-HMI	Signal: LEDs acknowledgement :HMI
Sys.Ack BO-HMI	Signal: Acknowledgement of the Binary Outputs :HMI
Sys.Ack Scada-HMI	Signal: Acknowledge Scada :HMI
Sys.Ack TripCmd-HMI	Signal: Reset Trip Command :HMI
Sys.Ack LED-Sca	Signal: LEDs acknowledgement :SCADA
Sys.Ack BO-Sca	Signal: Acknowledgement of the Binary Outputs :SCADA
Sys.Ack Counter-Sca	Signal: Reset of all Counters :SCADA
Sys.Ack Scada-Sca	Signal: Acknowledge Scada :SCADA

Name	Description
Sys.Ack TripCmd-Sca	Signal: Reset Trip Command :SCADA
Sys.Res OperationsCr	Signal:: Res OperationsCr
Sys.Res AlarmCr	Signal:: Res AlarmCr
Sys.Res TripCmdCr	Signal:: Res TripCmdCr
Sys.Res TotalCr	Signal:: Res TotalCr
Sys.Ack LED-I	Module input state: LEDs acknowledgement by digital input
Sys.Ack BO-I	Module input state: Acknowledgement of the binary Output Relays
Sys.Ack Scada-I	Module input state: Acknowledge Scada via digital input. The replica that SCADA has got from the device is to be reset.
Sys.PS1-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.
Sys.PS2-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.
Sys.PS3-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.
Sys.PS4-I	State of the module input respectively of the signal, that should activate this Parameter Setting Group.
Sys.Lock Settings-I	State of the module input: No parameters can be changed as long as this input is true. The parameter settings are locked.

## **List of the Digital Inputs**

The following list comprises all Digital Inputs. This list is used in various Protective Elements (e.g. TCS, Q->&V<...). The availability and the number of entries depends on the type of device.

## Signals of the Digital Inputs and Logic

The following list comprises the signals of the Digital Inputs and the Logic. This list is used in various protective elements.

Name	Description
-,-	No assignment
DI Slot X 1.DI 1	Signal: Digital Input
DI Slot X 1.DI 2	Signal: Digital Input
DI Slot X 1.DI 3	Signal: Digital Input
DI Slot X 1.DI 4	Signal: Digital Input
DI Slot X 1.DI 5	Signal: Digital Input
DI Slot X 1.DI 6	Signal: Digital Input
DI Slot X 1.DI 7	Signal: Digital Input
DI Slot X 1.DI 8	Signal: Digital Input
DI Slot X 6.DI 1	Signal: Digital Input
DI Slot X 6.DI 2	Signal: Digital Input
DI Slot X 6.DI 3	Signal: Digital Input
DI Slot X 6.DI 4	Signal: Digital Input
DI Slot X 6.DI 5	Signal: Digital Input
DI Slot X 6.DI 6	Signal: Digital Input
DI Slot X 6.DI 7	Signal: Digital Input
DI Slot X 6.DI 8	Signal: Digital Input
Logics.LE1.Gate Out	Signal: Output of the logic gate
Logics.LE1.Timer Out	Signal: Timer Output
Logics.LE1.Out	Signal: Latched Output (Q)
Logics.LE1.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE2.Gate Out	Signal: Output of the logic gate
Logics.LE2.Timer Out	Signal: Timer Output
Logics.LE2.Out	Signal: Latched Output (Q)
Logics.LE2.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE3.Gate Out	Signal: Output of the logic gate
Logics.LE3.Timer Out	Signal: Timer Output
Logics.LE3.Out	Signal: Latched Output (Q)
Logics.LE3.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE4.Gate Out	Signal: Output of the logic gate
Logics.LE4.Timer Out	Signal: Timer Output
Logics.LE4.Out	Signal: Latched Output (Q)
Logics.LE4.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE5.Gate Out	Signal: Output of the logic gate
Logics.LE5.Timer Out	Signal: Timer Output
Logics.LE5.Out	Signal: Latched Output (Q)
Logics.LE5.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE6.Gate Out	Signal: Output of the logic gate
Logics.LE6.Timer Out	Signal: Timer Output
Logics.LE6.Out	Signal: Latched Output (Q)
Logics.LE6.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE7.Gate Out	Signal: Output of the logic gate
Logics.LE7.Timer Out	Signal: Timer Output
Logics.LE7.Out	Signal: Latched Output (Q)
Logics.LE7.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE8.Gate Out	Signal: Output of the logic gate
Logics.LE8.Timer Out	Signal: Timer Output
Logics.LE8.Out	Signal: Latched Output (Q)
Logics.LE8.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE9.Gate Out	Signal: Output of the logic gate
Logics.LE9.Timer Out	Signal: Timer Output
Logics.LE9.Out	Signal: Latched Output (Q)
Logics.LE9.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE10.Gate Out	Signal: Output of the logic gate
Logics.LE10.Timer Out	Signal: Timer Output
Logics.LE10.Out	Signal: Latched Output (Q)
Logics.LE10.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE11.Gate Out	Signal: Output of the logic gate
Logics.LE11.Timer Out	Signal: Timer Output
Logics.LE11.Out	Signal: Latched Output (Q)
Logics.LE11.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE12.Gate Out	Signal: Output of the logic gate
Logics.LE12.Timer Out	Signal: Timer Output
Logics.LE12.Out	Signal: Latched Output (Q)
Logics.LE12.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE13.Gate Out	Signal: Output of the logic gate
Logics.LE13.Timer Out	Signal: Timer Output
Logics.LE13.Out	Signal: Latched Output (Q)
Logics.LE13.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE14.Gate Out	Signal: Output of the logic gate
Logics.LE14.Timer Out	Signal: Timer Output
Logics.LE14.Out	Signal: Latched Output (Q)
Logics.LE14.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE15.Gate Out	Signal: Output of the logic gate
Logics.LE15.Timer Out	Signal: Timer Output
Logics.LE15.Out	Signal: Latched Output (Q)
Logics.LE15.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE16.Gate Out	Signal: Output of the logic gate
Logics.LE16.Timer Out	Signal: Timer Output
Logics.LE16.Out	Signal: Latched Output (Q)
Logics.LE16.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE17.Gate Out	Signal: Output of the logic gate
Logics.LE17.Timer Out	Signal: Timer Output
Logics.LE17.Out	Signal: Latched Output (Q)
Logics.LE17.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE18.Gate Out	Signal: Output of the logic gate
Logics.LE18.Timer Out	Signal: Timer Output
Logics.LE18.Out	Signal: Latched Output (Q)
Logics.LE18.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE19.Gate Out	Signal: Output of the logic gate
Logics.LE19.Timer Out	Signal: Timer Output
Logics.LE19.Out	Signal: Latched Output (Q)
Logics.LE19.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE20.Gate Out	Signal: Output of the logic gate
Logics.LE20.Timer Out	Signal: Timer Output
Logics.LE20.Out	Signal: Latched Output (Q)
Logics.LE20.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE21.Gate Out	Signal: Output of the logic gate
Logics.LE21.Timer Out	Signal: Timer Output
Logics.LE21.Out	Signal: Latched Output (Q)
Logics.LE21.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE22.Gate Out	Signal: Output of the logic gate
Logics.LE22.Timer Out	Signal: Timer Output
Logics.LE22.Out	Signal: Latched Output (Q)
Logics.LE22.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE23.Gate Out	Signal: Output of the logic gate
Logics.LE23.Timer Out	Signal: Timer Output
Logics.LE23.Out	Signal: Latched Output (Q)
Logics.LE23.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE24.Gate Out	Signal: Output of the logic gate
Logics.LE24.Timer Out	Signal: Timer Output
Logics.LE24.Out	Signal: Latched Output (Q)
Logics.LE24.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE25.Gate Out	Signal: Output of the logic gate
Logics.LE25.Timer Out	Signal: Timer Output
Logics.LE25.Out	Signal: Latched Output (Q)
Logics.LE25.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE26.Gate Out	Signal: Output of the logic gate
Logics.LE26.Timer Out	Signal: Timer Output
Logics.LE26.Out	Signal: Latched Output (Q)
Logics.LE26.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE27.Gate Out	Signal: Output of the logic gate
Logics.LE27.Timer Out	Signal: Timer Output
Logics.LE27.Out	Signal: Latched Output (Q)
Logics.LE27.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE28.Gate Out	Signal: Output of the logic gate
Logics.LE28.Timer Out	Signal: Timer Output
Logics.LE28.Out	Signal: Latched Output (Q)
Logics.LE28.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE29.Gate Out	Signal: Output of the logic gate
Logics.LE29.Timer Out	Signal: Timer Output
Logics.LE29.Out	Signal: Latched Output (Q)
Logics.LE29.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE30.Gate Out	Signal: Output of the logic gate
Logics.LE30.Timer Out	Signal: Timer Output
Logics.LE30.Out	Signal: Latched Output (Q)
Logics.LE30.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE31.Gate Out	Signal: Output of the logic gate
Logics.LE31.Timer Out	Signal: Timer Output
Logics.LE31.Out	Signal: Latched Output (Q)
Logics.LE31.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE32.Gate Out	Signal: Output of the logic gate
Logics.LE32.Timer Out	Signal: Timer Output
Logics.LE32.Out	Signal: Latched Output (Q)
Logics.LE32.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE33.Gate Out	Signal: Output of the logic gate
Logics.LE33.Timer Out	Signal: Timer Output
Logics.LE33.Out	Signal: Latched Output (Q)
Logics.LE33.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE34.Gate Out	Signal: Output of the logic gate
Logics.LE34.Timer Out	Signal: Timer Output
Logics.LE34.Out	Signal: Latched Output (Q)
Logics.LE34.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE35.Gate Out	Signal: Output of the logic gate
Logics.LE35.Timer Out	Signal: Timer Output
Logics.LE35.Out	Signal: Latched Output (Q)
Logics.LE35.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE36.Gate Out	Signal: Output of the logic gate
Logics.LE36.Timer Out	Signal: Timer Output
Logics.LE36.Out	Signal: Latched Output (Q)
Logics.LE36.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE37.Gate Out	Signal: Output of the logic gate
Logics.LE37.Timer Out	Signal: Timer Output
Logics.LE37.Out	Signal: Latched Output (Q)
Logics.LE37.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE38.Gate Out	Signal: Output of the logic gate
Logics.LE38.Timer Out	Signal: Timer Output
Logics.LE38.Out	Signal: Latched Output (Q)
Logics.LE38.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE39.Gate Out	Signal: Output of the logic gate
Logics.LE39.Timer Out	Signal: Timer Output
Logics.LE39.Out	Signal: Latched Output (Q)
Logics.LE39.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE40.Gate Out	Signal: Output of the logic gate
Logics.LE40.Timer Out	Signal: Timer Output
Logics.LE40.Out	Signal: Latched Output (Q)
Logics.LE40.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE41.Gate Out	Signal: Output of the logic gate
Logics.LE41.Timer Out	Signal: Timer Output
Logics.LE41.Out	Signal: Latched Output (Q)
Logics.LE41.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE42.Gate Out	Signal: Output of the logic gate
Logics.LE42.Timer Out	Signal: Timer Output
Logics.LE42.Out	Signal: Latched Output (Q)
Logics.LE42.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE43.Gate Out	Signal: Output of the logic gate
Logics.LE43.Timer Out	Signal: Timer Output
Logics.LE43.Out	Signal: Latched Output (Q)
Logics.LE43.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE44.Gate Out	Signal: Output of the logic gate
Logics.LE44.Timer Out	Signal: Timer Output
Logics.LE44.Out	Signal: Latched Output (Q)
Logics.LE44.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE45.Gate Out	Signal: Output of the logic gate
Logics.LE45.Timer Out	Signal: Timer Output
Logics.LE45.Out	Signal: Latched Output (Q)
Logics.LE45.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE46.Gate Out	Signal: Output of the logic gate
Logics.LE46.Timer Out	Signal: Timer Output
Logics.LE46.Out	Signal: Latched Output (Q)
Logics.LE46.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE47.Gate Out	Signal: Output of the logic gate
Logics.LE47.Timer Out	Signal: Timer Output
Logics.LE47.Out	Signal: Latched Output (Q)
Logics.LE47.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE48.Gate Out	Signal: Output of the logic gate
Logics.LE48.Timer Out	Signal: Timer Output
Logics.LE48.Out	Signal: Latched Output (Q)
Logics.LE48.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE49.Gate Out	Signal: Output of the logic gate
Logics.LE49.Timer Out	Signal: Timer Output
Logics.LE49.Out	Signal: Latched Output (Q)
Logics.LE49.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE50.Gate Out	Signal: Output of the logic gate
Logics.LE50.Timer Out	Signal: Timer Output
Logics.LE50.Out	Signal: Latched Output (Q)
Logics.LE50.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE51.Gate Out	Signal: Output of the logic gate
Logics.LE51.Timer Out	Signal: Timer Output
Logics.LE51.Out	Signal: Latched Output (Q)
Logics.LE51.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE52.Gate Out	Signal: Output of the logic gate
Logics.LE52.Timer Out	Signal: Timer Output
Logics.LE52.Out	Signal: Latched Output (Q)
Logics.LE52.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE53.Gate Out	Signal: Output of the logic gate
Logics.LE53.Timer Out	Signal: Timer Output
Logics.LE53.Out	Signal: Latched Output (Q)
Logics.LE53.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE54.Gate Out	Signal: Output of the logic gate
Logics.LE54.Timer Out	Signal: Timer Output
Logics.LE54.Out	Signal: Latched Output (Q)
Logics.LE54.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE55.Gate Out	Signal: Output of the logic gate
Logics.LE55.Timer Out	Signal: Timer Output
Logics.LE55.Out	Signal: Latched Output (Q)
Logics.LE55.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE56.Gate Out	Signal: Output of the logic gate
Logics.LE56.Timer Out	Signal: Timer Output
Logics.LE56.Out	Signal: Latched Output (Q)
Logics.LE56.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE57.Gate Out	Signal: Output of the logic gate
Logics.LE57.Timer Out	Signal: Timer Output
Logics.LE57.Out	Signal: Latched Output (Q)
Logics.LE57.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE58.Gate Out	Signal: Output of the logic gate
Logics.LE58.Timer Out	Signal: Timer Output
Logics.LE58.Out	Signal: Latched Output (Q)
Logics.LE58.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE59.Gate Out	Signal: Output of the logic gate
Logics.LE59.Timer Out	Signal: Timer Output
Logics.LE59.Out	Signal: Latched Output (Q)
Logics.LE59.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE60.Gate Out	Signal: Output of the logic gate
Logics.LE60.Timer Out	Signal: Timer Output
Logics.LE60.Out	Signal: Latched Output (Q)
Logics.LE60.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE61.Gate Out	Signal: Output of the logic gate
Logics.LE61.Timer Out	Signal: Timer Output
Logics.LE61.Out	Signal: Latched Output (Q)
Logics.LE61.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE62.Gate Out	Signal: Output of the logic gate
Logics.LE62.Timer Out	Signal: Timer Output
Logics.LE62.Out	Signal: Latched Output (Q)
Logics.LE62.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE63.Gate Out	Signal: Output of the logic gate
Logics.LE63.Timer Out	Signal: Timer Output
Logics.LE63.Out	Signal: Latched Output (Q)
Logics.LE63.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE64.Gate Out	Signal: Output of the logic gate
Logics.LE64.Timer Out	Signal: Timer Output
Logics.LE64.Out	Signal: Latched Output (Q)
Logics.LE64.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE65.Gate Out	Signal: Output of the logic gate
Logics.LE65.Timer Out	Signal: Timer Output
Logics.LE65.Out	Signal: Latched Output (Q)
Logics.LE65.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE66.Gate Out	Signal: Output of the logic gate
Logics.LE66.Timer Out	Signal: Timer Output
Logics.LE66.Out	Signal: Latched Output (Q)
Logics.LE66.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE67.Gate Out	Signal: Output of the logic gate
Logics.LE67.Timer Out	Signal: Timer Output
Logics.LE67.Out	Signal: Latched Output (Q)
Logics.LE67.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE68.Gate Out	Signal: Output of the logic gate
Logics.LE68.Timer Out	Signal: Timer Output
Logics.LE68.Out	Signal: Latched Output (Q)
Logics.LE68.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE69.Gate Out	Signal: Output of the logic gate
Logics.LE69.Timer Out	Signal: Timer Output
Logics.LE69.Out	Signal: Latched Output (Q)
Logics.LE69.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE70.Gate Out	Signal: Output of the logic gate
Logics.LE70.Timer Out	Signal: Timer Output
Logics.LE70.Out	Signal: Latched Output (Q)
Logics.LE70.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE71.Gate Out	Signal: Output of the logic gate
Logics.LE71.Timer Out	Signal: Timer Output
Logics.LE71.Out	Signal: Latched Output (Q)
Logics.LE71.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE72.Gate Out	Signal: Output of the logic gate
Logics.LE72.Timer Out	Signal: Timer Output
Logics.LE72.Out	Signal: Latched Output (Q)
Logics.LE72.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE73.Gate Out	Signal: Output of the logic gate
Logics.LE73.Timer Out	Signal: Timer Output
Logics.LE73.Out	Signal: Latched Output (Q)
Logics.LE73.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE74.Gate Out	Signal: Output of the logic gate
Logics.LE74.Timer Out	Signal: Timer Output
Logics.LE74.Out	Signal: Latched Output (Q)
Logics.LE74.Out inverted	Signal: Negated Latched Output (Q NOT)

Name	Description
Logics.LE75.Gate Out	Signal: Output of the logic gate
Logics.LE75.Timer Out	Signal: Timer Output
Logics.LE75.Out	Signal: Latched Output (Q)
Logics.LE75.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE76.Gate Out	Signal: Output of the logic gate
Logics.LE76.Timer Out	Signal: Timer Output
Logics.LE76.Out	Signal: Latched Output (Q)
Logics.LE76.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE77.Gate Out	Signal: Output of the logic gate
Logics.LE77.Timer Out	Signal: Timer Output
Logics.LE77.Out	Signal: Latched Output (Q)
Logics.LE77.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE78.Gate Out	Signal: Output of the logic gate
Logics.LE78.Timer Out	Signal: Timer Output
Logics.LE78.Out	Signal: Latched Output (Q)
Logics.LE78.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE79.Gate Out	Signal: Output of the logic gate
Logics.LE79.Timer Out	Signal: Timer Output
Logics.LE79.Out	Signal: Latched Output (Q)
Logics.LE79.Out inverted	Signal: Negated Latched Output (Q NOT)
Logics.LE80.Gate Out	Signal: Output of the logic gate
Logics.LE80.Timer Out	Signal: Timer Output
Logics.LE80.Out	Signal: Latched Output (Q)
Logics.LE80.Out inverted	Signal: Negated Latched Output (Q NOT)

## **Specifications**

## **Specifications of the Real Time Clock**

Resolution: 1 ms

Tolerance: <1 minute / month (+20°C [68°F])

<±1ms if synchronized via IRIG-B

## **Time Synchronisation Tolerances**

The different protocols for time synchronisation vary in their accuracy:

Used Protocol	Time drift over one month	Deviation to time generator
Without time synchronization	<1 min (+20°C)	Time drifts
IRIG-B	Dependent on the time drift of the time generator	<±1 ms
SNTP	Dependent on the time drift of the time generator	<±1 ms
IEC60870-5-103	Dependent on the time drift of the time generator	<±1 ms
Modbus TCP	Dependent on the time drift of the time generator	Dependent on the network load
Modbus RTU	Dependent on the time drift of the time generator	<±1 ms

# **Specifications of the Measured Value Acquisition Phase and Ground Current Measuring**

Frequency Range:  $50 \text{ Hz} / 60 \text{ Hz} \pm 10\%$ 

Accuracy: Class 0.5

Amplitude Error if I < In:  $\pm 0.5\%$  of the rated current  $^{*3}$ 

Amplitude Error if I > In:  $\pm 0.5\%$  of the measured current \*3)

Amplitude Error if I > 2 In:  $\pm 1.0\%$  of the measured current

Harmonics: Up to 20% 3rd harmonic ±2%

Up to 20% 5th harmonic ±2%

Frequency Influence: <±2% / Hz in the range of ±5 Hz of the configured nominal frequency

Temperature Influence: <±1% within the range of 0°C to +60°C (+32°F to +140°F)

<sup>\*3)</sup> For earth current sensitive the precision does not depend on the nominal value but is referenced to 100 mA (with In =1 A) respectively. 500 mA (with In = 5 A)

#### **Protection Elements Accuracy**



The tripping delay relates to the time between alarm and trip.

The accuracy of the operating time relates to the time between fault entry and the time when the protection element is picked-up.

Reference conditions for all Protection Elements: sine wave, at rated frequency, THD < 1%

Overcurrent Protection Elements: I[x]	Accuracy
>	±1.5% of the setting value or ±1% In
Dropout Ratio	97% or 0.5% In
t	DEFT
	±1% or ±10 ms
Operating Time	<35ms
At testing current >= 2 times pickup value	
Disengaging Time	<45ms
t-char	±5% (according to selected curve)
t-reset (Reset Mode = t-delay)	±1% or ±10 ms

Overcurrent Protection Elements:  [[x] with selected Measuring method = I2 (Negative phase sequence current)	Accuracy
>	±2% of the setting value or ±1% In
Dropout Ratio	97% or 0.5% In
t	DEFT
	±1% or ±10 ms
Operating Time	<60ms
At testing current >= 2 times pickup value	
Disengaging Time	<45ms

Ground Current Elements:	Accuracy *3)
IG[x]	
IG>	±1.5% of the setting value or ±1% In
Dropout Ratio	97% or 0.5% x In
t	DEFT
	±1% or ±10 ms
Operating time	<35ms
Starting from IG higher than 1.1 x IG>	
Disengaging Time	<45ms
t-char	±5% (according to selected curve)
t-reset (Reset Mode = t-delay)	±1% or ±10 ms

<sup>\*3)</sup> For earth current sensitive the precision does not depend on the nominal value but is referenced to 100 mA (with In =1 A) respectively 500 mA (with In = 5 A)

Phase Differential Protection:	Accuracy
Id	
ld >	±3% of the setting value or 2% In.
Operating time	
Id > 2 x pickup	<40 ms
(step from zero to 200% pickup of 87-Char)	
Typically trip time	30 ms
Shortest trip time	18 ms

Unrestrained Phase Differential Protection: IdH	Accuracy
Id >>	±3% of the setting value or 2% In.
Operating time	-
Id > 1.1 x pickup:	<30 ms
Typically trip time	19 ms
Shortest trip time	13 ms

Ground Differential Protection: IdG[x]	Accuracy
ldgG >	±3% of the setting value or 2% In.
Operating time	
Idg > 2 x pickup	<40 ms
(step from zero to 200% pickup of 87G-Char)	
Typically trip time	30 ms
Shortest trip time	18 ms

Unrestrained Ground Differential Protection: IdGH[x]	Accuracy
IdG >>	±3% of the setting value or 2% In.
Operating time	-
Idg > 1.1 x pickup:	<30 ms
Typically trip time	19 ms
Shortest trip time	13 ms

RTD Protection: RTD/URTD	Accuracy
Trip Threshold	±1°C (1.8°F)
Alarm Threshold	±1°C (1.8°F)
t-delay Alarm	DEFT
	±1% or ±10 ms
Reset Hysteresis	-2°C (-3.6°F) of threshold
	±1°C (1.8°F)

Thermal Replica: ThR	Accuracy
Ib	±2% of the setting value or 1% In
Alarm ThR	±1.5 % of the setting value

Inrush Supervision: IH2	Accuracy
IH2/IH1	±1% In
Dropout Ratio	5% IH2 or 1% In
Operating Time	<30 ms *1)

<sup>\*1)</sup> Inrush supervision is possible, if the fundamental Harmonic (IH1) > 0.1 In and  $2^{nd}$  Harmonic (IH2) > 0.01 In.

Current unbalance: I2>[x]	Accuracy *¹)
12>	±2% of the setting value or 1% In
Dropout Ratio	97% or 0.5% x In
%(I2/I1)	±1%
t	DEFT
	±1% or ±10 ms
Operating Time	<60 ms
Disengaging Time	<40 ms
K	±5% INV
T-COOl	±5% INV

<sup>\*1)</sup> Negative-sequence current 12 must be  $\geq$  0.01 x In, 11 must be  $\geq$  0.1 x In.

Switch onto Fault: SOTF	Accuracy
Operating time	<35 ms
<b> </b> <	±1.5% of the setting value or1% In
t-enable	±1% or ±10 ms

Cold Load Pickup: CLPU	Accuracy
Threshold	±1.5% of the setting value or1% In
Operating time	<35 ms
<b> </b> <	±1.5% of the setting value or1% In
t-Load OFF	±1% or ±15 ms
t-Max Block	±1% or ±15 ms
Settle Time	±1% or ±15 ms

Circuit Breaker Failure Protection: CBF	Accuracy
I-CBF>	±1.5% of the setting value or1% In
t-CBF	±1% or ±10 ms
Operating Time	<40 ms
Starting from I Higher than 1.3 x I-CBF>	
Disengaging Time	<40 ms

Trip Circuit Supervision: TCS	Accuracy
t-TCS	±1% or ±10 ms

Current Transformer Supervision: CTS	Accuracy
ΔΙ	±2% of the setting value or 1.5% In
Dropout Ratio	94%
Alarm delay	±1% or ± 10 ms

### Abbreviations, and Acronyms

The following abbreviations and acronyms are used in this manual.

°C Degrees Celsius
°F Degrees Fahrenheit
A Ampere(s), Amp(s)
AC Alternating current
Ack. Acknowledge

AND Logical gate (The output becomes true if all Input signals are true.)

ANSI American National Standards Institute

avg. Average

AWG American wire gauge BF Circuit breaker failure

Bkr Breaker
Blo Blocking(s)

BO Binary output relay
BO1 1st binary output relay
BO2 2nd binary output relay
BO3 3rd binary output relay

calc Calculated
CB Circuit breaker

CBF Module Circuit Breaker Failure protection

CD Compact disk
Char Curve shape

CLPU Cold Load Pickup Module

Cmd. Command
CMN Common input
COM Common input
Comm Communication
Cr. Counter(s)

CSA Canadian Standards Association

CT Control transformer

Ctrl. Control

CTS Current Transformer Supervision
CTS Current transformer supervision

d Day

D-Sub-Plug Communication interface

DC Direct current

DEFT Definite time characteristic (Tripping time does not depend on the height of the current.)

delta phi Vector surge

df/dt Rate-of-frequency-change

DI Digital Input

Diagn Cr Diagnosis counter(s)

Diagn. Diagnosis

DIN Deutsche Industrie Norm

dir Directional

EINV Extremely inverse tripping characteristic

EMC Electromagnetic compatibility

EN Europäische Norm

err. / Err. Error

EVTcon Parameter determines if the residual voltage is measured or calculated.

Ex External

Ex Oil Temp External Oil Temperature
ExBlo External blocking(s)

ExP External Protection - Module

Ext Sudd Press External protection

Sudden Pressure

Ext Temp Superv External Temperature Supervision Frequency Protection Module

Fc Function (Enable or disable functionality = allow or disallow.)

FIFO First in first out
FIFO Principal First in first out

fund Fundamental (ground wave)

gn Acceleration of the earth in vertical direction (9.81 m/s2)

GND Ground h Hour

HMI Human machine interface (Front of the protective relay)

HTL Manufacturer internal product designation

Hz Hertz

Phase Overcurrent Stage

Fault current
Current

I-BF Tripping threshold

IO Zero current (symmetrical components)

Positive sequence current (symmetrical components)

Negative sequence current (symmetrical components)

I2> Unbalanced Load-StageI2T Thermal CharacteristicI4T Thermal Characteristic

IA Phase A current
IB Phase B current
IC Phase C current

IC's Manufacturer internal product designation

Id Differential Protection Module

IdG Restricted Ground Fault Differential Protection Module
IdGH Restricted Ground Fault Highset Protection Module

IdH High-Set Differential Protection Module
IEC International Electrotechnical Commission

IEC61850 IEC61850

IEEE Institute of Electrical and Electronics Engineers

IG Earth current protection - Stage

IG Ground current
IG Fault current

IGnom Nominal ground current

IH1 1st harmonicIH2 Module InrushIH2 2nd harmonic

in. Inch

incl. Include, including

InEn Inadvertent Energization

Info. Information
Interl. Interlocking
Intertripping Intertripping

INV Inverse characteristic (The tripping time will be calculated depending on the height of the

current)

IR Calculated ground current

IRIG Input for time synchronization (Clock)

IRIG-B IRIG-B-Module

IT Thermal Characteristic

4th measuring input of the current measuring assembly group (either ground or neutral

current)

J Joule
kg Kilogram
kHz Kilohertz
kV Kilovolt(s)

kVdc or kVDC Kilovolt(s) direct current

I/In Ratio of current to nominal current.

L1 Phase A
L2 Phase B
L3 Phase C
Ib-in Pound-inch

LED Light emitting diode

LINV Long time inverse tripping characteristic

LoE-Z1 Loss of Excitation LoE-Z2 Loss of Excitation

Logics Logic

LOP Loss of Potential LV Low voltage

LVRT Low Voltage Ride Through

m Meter

mA Milliampere(s), Milliamp(s)

man. Manual max. Maximum meas Measured min. Minimum

min. Minute

MINV Moderately Inverse Tripping Characteristic

MK Manufacturer Internal Product Designation Code

mm Millimeter

MMU Memory mapping unit

ms Milli-second(s) MV Medium voltage

mVA Milli volt amperes (Power)

N.C. Not connected

N.O. Normal open (Contact)

NINV Normal inverse tripping characteristic

Nm Newton-meter

No Number Nom. Nominal

NT Manufacturer internal product designation code

P Reverse Active Power

Para. Parameter

PC Personal computer
PCB Printed circuit board
PF Protected Earth

PF Power Factor - Module

Ph Phase

PQS Power Protection - Module

pri Primary

PROT or Prot Protection Module (Master Module)

PS1 Parameter set 1
PS2 Parameter set 2
PS3 Parameter set 3
PS4 Parameter set 4
PSet Parameter set

PSS Parameter set switch (Switching from one parameter set to another)

Q Reverse Reactive Power

R Reset
rec. Record
rel Relative
res Reset

ResetFct Reset function
RevData Review data

RMS Root mean square

Rst Reset

RTD Temperature Protection Module

S Second

SC Supervision contact

Sca SCADA

SCADA Communication module

sec Second(s) sec Secondary

Sgen Sine wave generator

Sig. Signal

SNTP SNTP-Module

SOTF Switch Onto Fault - Module

StartFct Start function
Sum Summation
SW Software
Sync Synchrocheck

Sys. System

t Tripping delay

t or t. Time

Tcmd Trip command

TCP/IP Communication protocol
TCS Trip circuit supervision
ThR Thermal replica module

TI Manufacturer internal product designation code

TripCmd Trip command

txt Text

UL Underwriters Laboratories

UMZ DEFT (definite time tripping characteristic)

USB Universal serial bus V Voltage-stage

v Volts

V/f> Overexcitation

V012 Symmetrical Components: Supervision of the Positive Phase Sequence or Negative Phase

Sequence

Vac / V ac Volts alternating current
Vdc / V dc Volts direct current

VDE Verband Deutscher Elektrotechnik
VDEW Verband der Elektrizitätswirtschaft

VE Residual voltage

VG Residual voltage-Stage

VINV Very inverse tripping characteristic VTS Voltage transformer supervision

W Watt(s)

WDC Watch dog contact (supervision contact)

www World wide web

XCT 4th current measuring input (ground or neutral current)

XInv Inverse characteristic

## **List of ANSI Codes**

ANSI	Functions
14	Underspeed
24	Overexcitation Protection (Volts per Hertz)
25	Synchronizing or Synchronism-check via 4 <sup>th</sup> measuring channel of voltage measurement card
27	Undervoltage Protection
27(t)	Undervoltage (time dependent) Protection
27A	Undervoltage Protection (Auxiliar) via 4 <sup>th</sup> measuring channel of voltage measurement card
27N	Neutral Undervoltage via 4 <sup>th</sup> measuring channel of voltage measurement card
27TN	Third Harmonic Neutral Undervoltage via 4 <sup>th</sup> measuring channel of voltage measurement card
32	Directional Power Protection
32F	Forward Power Protection
32R	Reverse Power Protection
37	Undercurrent / Under Power
38	Temperature Protection (optional via Interface/external Box)
40	Loss of Excitation / Loss of Field
46	Unbalanced Current Protection
46G	Unbalanced Generator Current Protection
47	Unbalanced Voltage Protection
48	Incomplete Sequence (Start-up time Supervison)
49	Thermal Protection
49M	Thermal Motor Protection
49R	Thermal Rotor Protection
49S	Thermal Stator Protection
50BF	Breaker Failure
50	Overcurrent (instantaneous)
50P	Phase Overcurrent (instantaneous)
50N	Neutral Overcurrent (instantaneous)
50Ns	Sensitive Neutral Overcurrent (instantaneous)
51	Overcurrent
51P	Phase Overcurrent
51N	Neutral Overcurrent
51Ns	Sensitive Neutral Overcurrent
51LR	Locked Rotor
51LRS	Locked Rotor Start (during start sequence)
51C	Voltage Controlled Overcurrent (via adaptive Parameters)
51Q	Negative Phase Sequence Overcurrent (multiple trip characteristics)
51V	Voltage Restrained Overcurrent
55	Power Factor Protection
59	Overvoltage Protection
59TN	Third Harmonic Neutral Overvoltage via 4 <sup>th</sup> measuring channel of voltage measurement card
59A	Overvoltage Protection via 4th (Auxiliar) measuring channel of voltage measurement card
59N	Neutral Overvoltage Protection
60FL	Voltage Transformer Supervision
60L	Current Transformer Supervision
64REF	Restricted Ground Fault Protection
66	Starts per h (Start Inhibit)
67	Directional Overcurrent
67N	Directional Neutral Overcurrent
67Ns	Sensitive Directional Neutral Overcurrent
74TC	Trip Circuit Supervision
-	·

ANSI	Functions
78V	Vector Surge Protection
79	Auto Reclosure
81	Frequency Protection
81U	Underfrequency Protection
810	Overfrequency Protection
81R	ROCOF (df/dt)
86	Lock Out
87B	Busbar Differential Protection
87G	Generator Differential Protection
87GP	Generator Phase Differential Protection
87GN	Generator Ground Differential Protection
87M	Motor Differential Protection
87T	Transformer Differential Protection
87TP	Transformer Phase Differential Protection
87TN	Transformer Ground Differential Protection
87U	Unit Differential Protection (protected zone includes generator and step-up transformer)
87UP	Unit Phase Differential Protection (protected zone includes generator and step-up transformer)

DOK-HB-MRDT4E

We appreciate your comments about the content of our publications.

Please send comments to: kemp.doc@woodward.com

Please include the manual number from the front cover of this publication.

Woodward Kempen GmbH reserves the right to update any portion of this publication at any time. Information provided by Woodward Kempen GmbH is believed to be correct and reliable. However, Woodward Kempen GmbH assumes no responsibility unless otherwise expressly undertaken.

This is the original manual (source).

© Woodward Kempen GmbH, all rights reserved



#### AvK Generátory s.r.o.

ul. 4. května 175 755 01 Vsetín Czech Republic

Tel.: +420 571 413 322 www.woodward-seg.cz info@woodward-seg.cz